



Instruction manual SMART PRO

Climatic chambers with a cooling system based on Peltier effect

models: KKP 240, KKP 750

Before using the equipment, please read carefully this instruction manual!

Version 1.16

Issued 14.02.2025



Manufacturer's address:

POL-EKO® A.Polok-Kowalska sp.k.

ul. Kokoszycka 172 C

44-300 Wodzisław Śląski

Country of origin: Polska



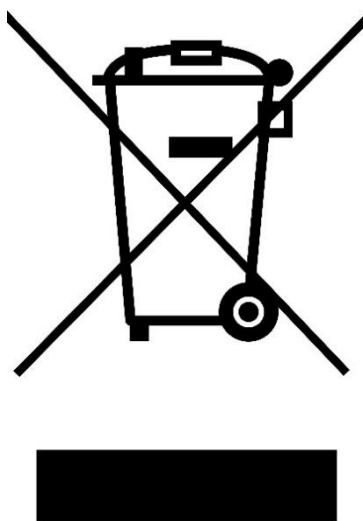
As the manufacturer of this device, we want to assure you that we have taken every step to ensure it meets your expectations and provides reliable performance over a long period of use. We are constantly improving our products and expanding our offerings, so we welcome any suggestions you may have regarding additional features or operational enhancements. Please feel free to visit our website at www.pol-eko.com.pl for more information.



The manufacturer takes every possible measure to eliminate post-production contamination. However, small oily residues from material processing, such as contact between tools and the processed parts, may still be present. To remove these residues, use a soft cloth or paper towel dampened with warm water and a degreasing solution.

As a manufacturer, we inform you that we took the necessary measures to ensure that this unit fully meets your expectations and is reliable for a long period of use. Due to the continuous improvement of our products, as well as the expansion of our offer, any suggestions regarding additional functions and equipment functioning are welcome. Visit our homepage www.pol-eko.com.pl/home-en/

Equipment disposal




















This equipment is marked with the crossed out wheeled bin symbol to indicate that this equipment must not be disposed of with unsorted waste. Instead it's your responsibility to correctly dispose of your equipment at lifecycle -end by handling it over to an authorized facility for separate collection and recycling. It's also your responsibility to decontaminate the equipment in case of biological, chemical and/or radiological contamination, so as to protect from health hazards the persons involved in the disposal and recycling of the equipment. For more information about where you can drop off your waste of equipment, please contact your local dealer from whom you originally purchased this equipment.

By doing so, you will help to conserve natural and environmental resources and you will ensure that your equipment is recycled in a manner that protects human health.

Thank you!

Contents:

1. INTENDED USE AND IMPORTANT INFORMATION FOR THE USER	7
2. PACKAGE CONTENTS	8
3. BEFORE THE FIRST USE	8
3.1. Installation of a water tank in the KKP climatic chamber	10
3.2. Installation of shelves.....	11
3.3. Internal glass door (standard for KKP)	12
3.4. Condensation in the chamber	12
3.5. Remarks on the placement of samples	13
3.6. Closing chamber door.....	13
4. DESCRIPTION OF THE unit.....	14
4.1. Design of KKP units.....	14
5. unit EQUIPMENT (standard and optional).....	15
5.1. Door lock (standard for all units)	15
5.2. Access port for external sensor (standard).....	15
5.3. Open door alarm (standard).....	15
5.4. USB port (standard)	16
5.5. Display battery backup (optionally)	16
6. unit OPERATION	17
6.1. External memory (USB flash drive)	17
6.2. First boot.....	17
6.3. Using the keypad	19
6.4. User logging in.....	19
6.5.  Main screen	21
6.5.1. Information panel.....	21
6.5.2. The meaning of icons and symbols	24
6.5.3. Upper expandable and configurable menu	26
6.5.4.  Quick Note – user's message	27
6.5.5. Alarm bar	27
6.6. Quick Program.....	27
6.7.  Programs	29
6.7.1. Creating / editing a program	30
6.7.2. Segments edition.....	31
6.7.3. Fitotron FIT (option for KKP 240).....	33
6.7.4. Summary of segments	34




6.7.5.	Protection class	35
6.7.6.	Temperature protection	35
6.7.7.	Priority.....	35
6.7.8.	Loop.....	36
6.8.	Starting the program	36
6.8.1.	The first way.....	36
6.8.2.	The second way	37
6.9.	Quick change of parameters.....	38
6.9.1.	Quick change of set temperature.....	38
6.9.2.	Quick change of set humidity	39
6.9.3.	Quick change of set time	40
6.10.	 Schedules.....	41
6.10.1.	Creating / editing a schedule	42
6.10.2.	Starting a schedule	44
6.11.	 Statistics.....	46
6.12.	 Data record	47
6.12.1.	Graph.....	48
6.12.2.	Data storage directly on a USB flash drive	50
6.13.	 Event log.....	50
6.14.	 Info.....	54
6.15.	 Users.....	55
6.15.1.	Creating / editing a user	56
6.15.2.	Account types and their limits.....	57
6.16.	 User settings panel	60
6.16.1.	Unlocking the touch screen	61
6.17.	 Time.....	61
6.18.	  Alarms.....	63
6.18.1.	Alarms when set parameters are exceeded	63
6.18.2.	Open door alarm	64
6.18.3.	STM function.....	65
6.18.4.	 Mute option	67
6.19.	 Network.....	67
6.20.	 E-mail reports.....	69
6.21.	 Corrections	71
7.	INTERFACE	72

7.1. MODBUS TCP	72
8. TEMPERATURE PROTECTION	73
8.1. Temperature protection class.....	73
9. CONNECTING THE UNIT TO A COMPUTER.....	73
10. OPERATION OF THE COOLING SYSTEM.....	73
11. CLEANING AND MAINTENANCE OF THE unit.....	74
11.1. Cleaning the housing, condensate tray and pump	74
11.2. Interior cleaning	75
11.3. Cleaning the touch screen	75
12. ADVICE ON HOW TO SAFELY STORE THE unit.....	76
13. TROUBLESHOOTING	77
13.1. Possible defects.....	77
14. WARRANTY CONDITIONS.....	78
15. RATING PLATE	79
16. TECHNICAL DATA	80
17. DECLARATION OF CONFORMITY.....	83

1. INTENDED USE AND IMPORTANT INFORMATION FOR THE USER

KKP climatic chambers are units that allow you to control temperature and humidity. Climatic chambers have both heating and cooling system based on Peltier modules and forced air convection. Climatic chambers have both heating and cooling systems and forced air convection. All units are controlled by a precise SMART PRO controller so the set temperature and humidity are maintained with high stability and homogeneity.

Importance of warning signs and information symbols

	Warning! Hot surface.
	This symbol means that failure to follow the instructions could endanger people's health or life, or damage the unit. The manufacturer is not liable for damages resulting from non-compliance with the instructions contained in the manual.
	This symbol indicates helpful tips.

To guarantee your security and the longevity of the unit, please comply with the following rules:

1.	<u>The unit cannot be installed:</u> <ul style="list-style-type: none"> • outside, • in damp places or places which can be easily flooded, • near flammable or volatile substances, • near acids or in corrosive environments.
2.	<u>It is forbidden to:</u> <ul style="list-style-type: none"> • store inflammable or volatile substances inside the unit • touch live parts of the unit • operate the unit with wet hands • put water vessels on the unit • put anything on the top of the unit cover • overload the shelves (the maximum load is described in technical data) • place samples at the bottom of the chamber
3.	<u>You should:</u> <ul style="list-style-type: none"> • place samples in such a way to provide proper air circulation in the chamber • open the door for the shortest period of time to reduce temperature and humidity loss • secure samples from being blown out by the chamber fan e.g powdery samples • always check that the doors are closed correctly • use only mains with earth to avoid electric shocks • unplug the power cable holding the protective cover and not the cable itself • disconnect the unit from the mains before undertaking any repairs or maintenance work (in order to not lose the warranty during its duration, all repairs should be carried out by an authorized service) • protect the power cable and the plug from any damage • disconnect the power plug before moving the unit • disconnect the power plug if the unit will not be used for a long period of time • disconnect the unit and protect it from reconnecting if it has any visual fault

Failure to comply with the above recommendations may result in damage to the unit or deterioration of technical parameters, as well as loss of warranty.

Safeguards to ensure the safety of the unit may be ineffective if the unit is not operated according to the manufacturer's instructions.

2. PACKAGE CONTENTS

KKP SMART PRO climatic chambers are delivered with:

Capacity	KKP	
	240	750
Shelves [pcs.]	3	3
Slides [pcs.]	6	6
Rubber cap [pcs.]	1	1
Key for door lock [pcs.]	2	2
Ethernet cable [pcs.]	1	1
Lab Desk program (in the internal memory of the equipment)	1	1
350 mm long rubber hose	1	1
1350 mm long rubber hose	1	-
1650 mm long rubber hose	-	1
6l water tank	1	1
shelf with a holder for water tank	1	1
Quality Control Certificate [pcs.]	1	1

3. BEFORE THE FIRST USE

The manufacturer sends the unit protected by cardboard profiles and foil. The unit **should be transported in an upright position** and the package should be secured against sliding during transport.



After receiving the unit, visually assess its condition and equipment in the presence of the person delivering the goods. A courier company is responsible for any damage caused during transport.



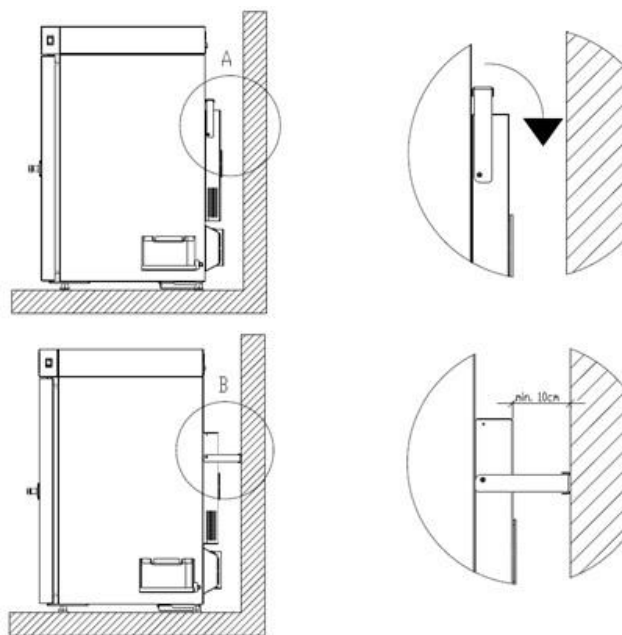
After transporting the unit at a temperature below 10°C, wait at least 2 hours before connecting it to the mains.

On the surface of unit's components made of stainless steel, slight discoloration may occur. It is a result of the technologies used in the production of metal sheet in accordance with the requirements of PN-EN 10088-2 standard and it is not a defect of the unit.

The place of installation of the unit should meet the following conditions:

- ambient temperature +18°C...+28°C, for models with glass door +18°C...+25°C
- recommended relative humidity of the ambient air < 60%
- altitude up to 2000 m a. s. l.
- the unit has not been designed to work in highly dusty environments
- ensure proper ventilation in the room
- the unit should be placed on a hard and stable surface

- the unit should be placed at least 100 mm away from the walls and a spacer bracket should be used:



- the height of the room must be at least 300 mm greater than the height of the unit
- unit should not be exposed to direct sunlight
- keep away from all sources of heat
- the unit is not designed to be built-in
- the place of installation of the unit should be equipped with a socket with parameters suitable for the unit
- main switch must remain accessible

If you don't comply with the above recommendations, it may worsen the technical parameters and may result in loss of warranty.

Level the unit after positioning at the destination.

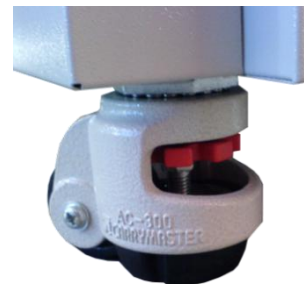
castors / stabilizing feet (model KKP750)



The unit has been equipped with leveling castors. After placing the unit at its destination, secure the unit against movement by locking the castors.

If the unit is equipped with reinforced wheels, they must be locked and leveled. For this purpose use the red knob mounted in the wheel housing. Initially, the knob can be turned by hand, but if resistance is encountered, use a 13 size wrench.

For reinforced wheels with leveling feet (see the image), once the unit is in the desired position, the leveling feet must be unscrewed from all wheels – the unit CAN'T stand on the wheels



Leveling castors are ONLY for positioning the unit at its destination. They can not be used to transport the unit!

Electric installation

The electrical installation should meet the following parameters:

- comply with applicable regulations and standards
- be equipped fuses and RCD (residual current devices)
- be adapted to the supply voltage of the unit adapted to the supply voltage of the unit (see rating plate)



Connect the unit to an AC power socket equipped with an efficient protective grounding, If in doubt, have the outlet checked by a qualified electrician.

3.1. Installation of a water tank in the KKP climatic chamber

The KKP climatic chamber is equipped with a water tank (6 l) for a demineralized water as standard. The water in the tank is necessary for the proper operation of the steam humidifier in the chamber.

The demineralized water tank is placed on the original shelf mounted on the right or left side of the unit.
A PZ2 screwdriver is required to assemble the shelf.



Deionized water should have a conductivity of 1 to 30 $\mu\text{S}/\text{cm}$. Deionized water to the humidifier must not be supplied under pressure. The water tank should be placed on the original shelf. Using a different tank, e.g. with a larger capacity or placing it higher than required, may cause incorrect operation of the humidifier and its damage.

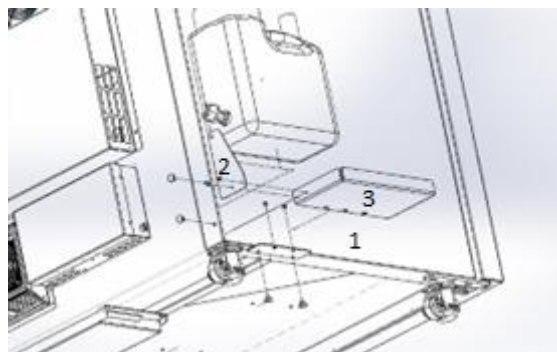


Note: POL-EKO® is NOT responsible for the quality of water used by the user. The use of water of a different quality than recommended may cause damage or failure of the unit, for which POL-EKO® is not responsible. Warranty do not cover the breakage of parts caused by the water with parameters other than recommended.


The demineralized water tank is placed on the original shelf mounted on the right or left side of the unit.
A PZ2 screwdriver is required to assemble the shelf.

To mount the water tank shelf to the unit:

- mount element 1 and 2 to the frame of the climatic chamber, as shown in the picture using knurled screws (on the left or right side)
- connect element 3 with the previously assembled element using a PZ2 screwdriver.



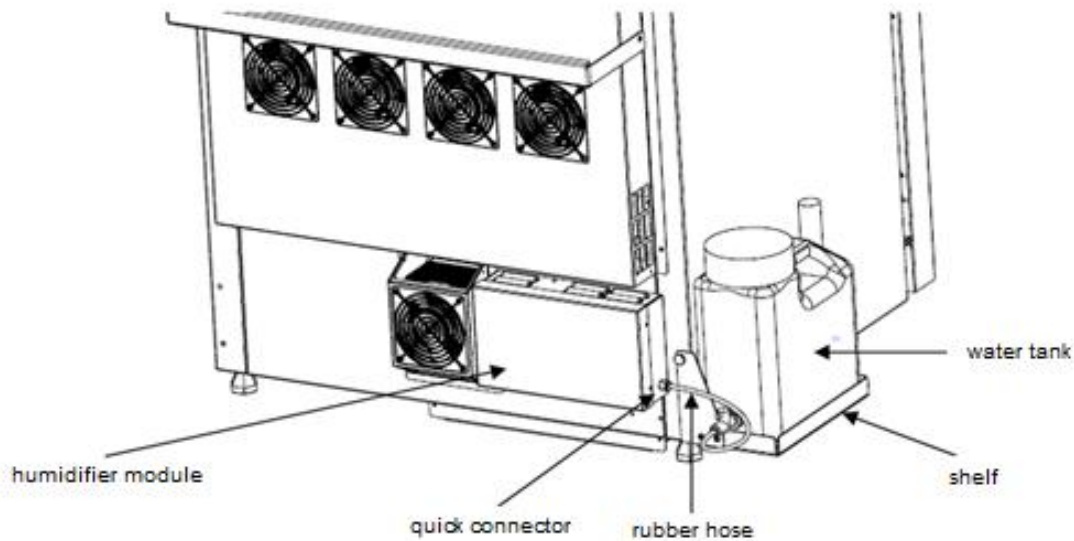3.1.1. Connecting the water tank to the unit



To connect the water tank to the climatic chamber:

- mount the water tank shelf
- place the water tank on the shelf
- connect the tank to the humidifier module by pressing the hose to the quick coupler (to disconnect the hose, release the quick coupler lock)
- pour water into the tank, visually check if the connection is tight.

3.2. Installation of shelves

To install the shelf or to change its position, follow these steps:

Install the shelf slide at the selected height by inserting it into perforations on the wall of the unit. Do the same with the slide on the opposite wall.



Slide the shelf into the installed shelf slides. Now, the shelf is correctly installed!



To remove a shelf, perform the above steps in reverse order. To remove the mounting element of the shelf, lift it and move it towards the back wall of the chamber.

3.3. Internal glass door (standard for KKP)

Internal glass door is a standard equipment in KKP climatic chambers. To open and close the door use the plastic handle attached to the glass so that the glass door does not fall out of the latches..



During operation, when the temperature inside the chamber is high, do not touch the internal components and glass doors, as there is a risk of burns. Use protective gloves to protect yourself against the effects of burns from hot components.



We do not recommend installing and removing internal glass door. Incorrect assembly or disassembly may result in damage to the glass and injury to the user.

3.4. Condensation in the chamber

If the set temperature is much lower than the ambient temperature, condensation may occur, which will cause accumulation of the water at the bottom of the chamber. The amount of accumulated water depends on the following factors:

- the difference between the ambient temperature and the temperature in the chamber
- frequency of door openings
- temperature of the samples.



Too high relative humidity in the chamber of the unit may cause icing of the cooling element, and thus reduce the cooling capacity and increase electricity consumption.

Cartons, sponges and other hygroscopic materials should not be used to store samples, as they may increase the humidity in the chamber.




Water drainage in climatic chambers is carried out in a gravitational way (not forced). For this reason, remaining small amount of water at the bottom of the chamber is normal. If water accumulates at the bottom of the chamber, wipe the bottom of the chamber with a dry cloth.

3.5. Remarks on the placement of samples

To provide proper air circulation and stable conditions in which the samples are stored in the chamber, it is necessary to keep the following rules:

- the max height of the samples should not exceed 1/3 of the space between the shelves,
- approx. 1/3 of the width and depth of the shelf should remain empty, while the distances between the samples, as well as between the samples and the wall should be approximately equal.

The picture below is an example of the placement of samples in the chamber.

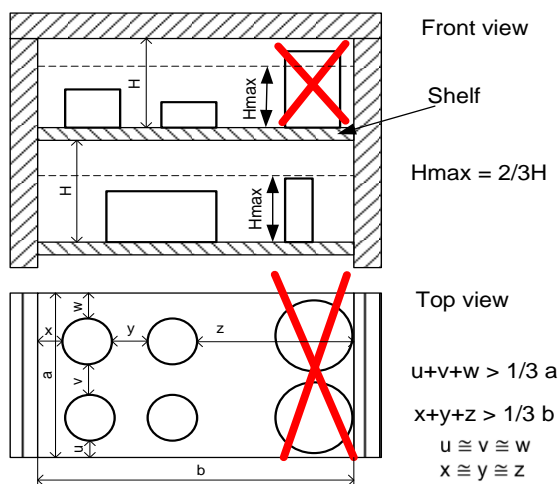

Following the above rules will provide best optimal parameters of temperature fluctuation and variation.

3.6. Closing chamber door

KKP climatic chambers have a door with seal, a 2-point lock and an open door sensor. To close the door, turn the handle to the vertical position, gently push the door and then turn the handle to the horizontal position. If the door is not properly closed, an acoustic signal and red pulsating alarm bar will activate. The controller allows to set the door open alarm delay by: 30 s, 1 min, 2 min, 5 min or 10 min (see Section 6.18.2). A properly closed door guarantees proper operation of the unit, ensures proper stability and uniformity of temperature.

4. DESCRIPTION OF THE UNIT

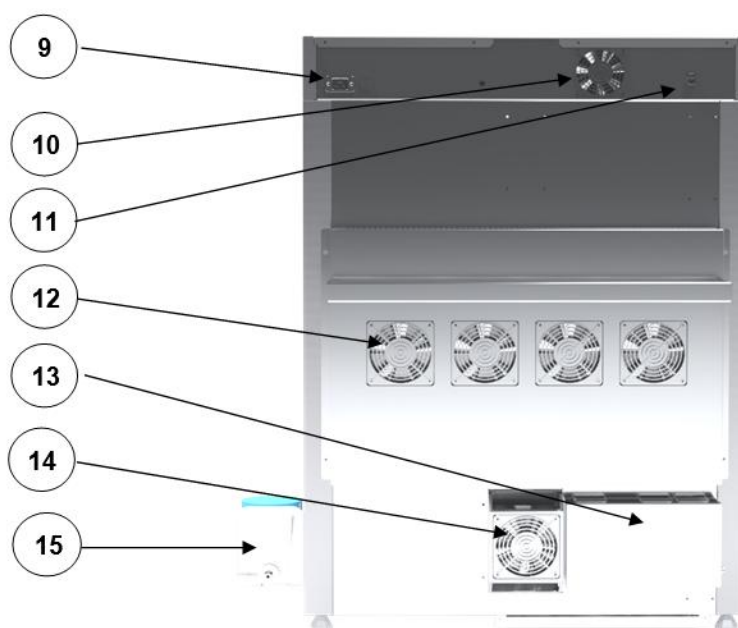
SMART PRO models are equipped with a PID microprocessor temperature controller and a 7 inch colour touch screen with a resolution of 800x480.

4.1. Design of KKP units

Below there's a picture of climatic chamber (exemplary photo) with a description of the important components of the unit.

Front view


- (1) touch control panel
- (2) port USB
- (3) open door sensor
- (4) access port $\varnothing 30\text{mm}$ for external sensor
- (5) chamber fan
- (6) door handle with a key lock
- (7) shelf
- (8) internal glass door
- (9) main power socket
- (10) fan for electronic compartment
- (11) LAN
- (12) cooling system based on Peltier modules
- (13) humidifier module
- (14) drying module
- (15) demineralized water tank



5. UNIT EQUIPMENT (STANDARD AND OPTIONAL)

5.1. Door lock (standard for all units)

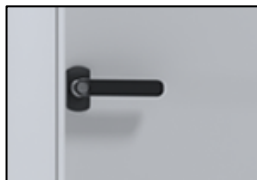Unit have a key lock. The lock is in the handle of unit. Two keys are supplied with the unit. Placed at the rear of the unit.




5.2. Access port for external sensor (standard)

A Ø30 mm access port can be used to insert an external temperature sensor for independent temperature control inside the unit. The access port has been secured with a rubber plug. The plug should cover the access port while the unit is operating. If multiple cables have been inserted through the access port and it is not possible to use the plug, secure the access port with adhesive tape. If you leave the access port open, it may affect temperature fluctuation and variation inside the chamber.







5.3. Open door alarm (standard)

All units have been equipped with an open door sensor. If you open the door, the icon:  will appear (the number above the icon presents open door counter. Press the icon to cancel the counter. The counter is also cancelled by turning of the unit). If the door remains open longer than the time set by the user (5s, 30s, 1 min, 5 min, 10 min) an acoustic signal, red pulsating alarm bar and „open door” alarm with active status will appear.



5.4. USB port (standard)

The USB port on the front panel is used only to transfer data from the unit internal memory to the flash drive. To do this insert the flash drive into the USB port on the front panel and then:

- go to the main menu ,
- go to the data record ,
- press  and choose type of the file: *.csv, or *.plx.
- press . Data has been copied.




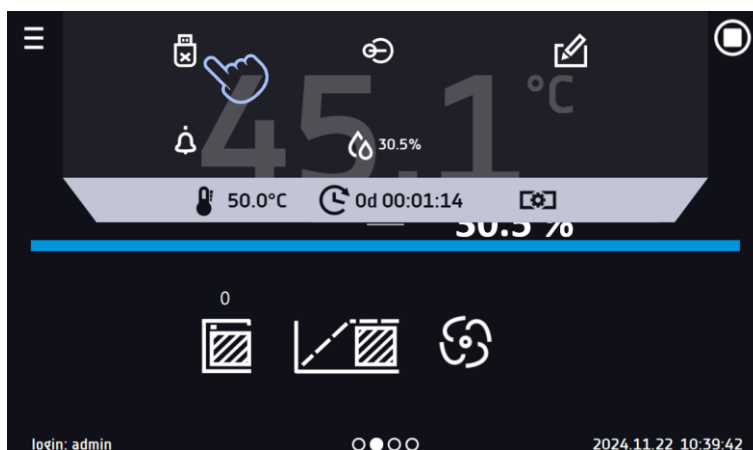
After copying the data to the USB flash drive, before removing it from the USB socket, it should be unmounted by pressing the icon  in the top drop-down list. If the pendrive is not unmounted after connecting to the computer, a message about pendrive damage may be displayed with a repair proposal, when actually the pendrive is not damaged

Figure 1 Unmounting USB flash drive



Data saved in the *.csv file can be opened in a spreadsheet. Data saved as *.plx can be opened in the Lab Desk program (standard equipment). This program allows, among others, for data preview in the form of a table or a graph. It also allows you to prepare a statistic report for a selected range of data, see [Section 6.12](#).

5.5. Display battery backup (optionally)


Climatic chambers in the SMART PRO version can be optionally equipped with a battery backup of the display. The power loss and switching to the battery backup display mode is signaled by a pulsating red frame around the display and a sound signal (if it is turned on). In the battery backup display mode, all parameters are displayed, ie temperature and humidity. Other alarms, e.g. exceeding the temperature range, are also signaled.

In order to extend the battery life, the display is dimmed all the time. Batteries are automatically charged in AC mode.



Batteries should be replaced every 12 months. When it is time to replace the battery, a message will appear on the display, see. During the warranty period, the replacement should be performed by an authorized service. Otherwise, you will lose your warranty.

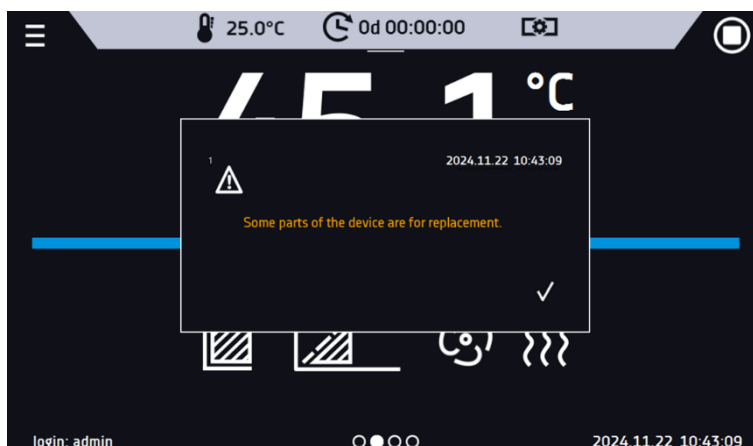Figure 2 Battery replacement message



6. UNIT OPERATION



This symbol means that a given window can be moved in the direction shown in the picture.

6.1. External memory (USB flash drive)

The external memory (USB flash drive) allows to copy: instruction manual, data record, event log and service log from the unit memory. Before first use the USB flash drive should be formatted in the FAT 32 file system. Insert the unit in the U In order to extend the battery life, the display is dimmed all the time. Batteries are automatically charged in AC mode. SB slot on the front of the unit next to the display. Wait a few seconds, the correct reading is indicated by the message „USB flashdrive connected” at the bottom of the screen.

	USB slot is used to connect only a flash memory – a pendrive or a card reader with a memory card. Connecting any other unit (e.g. external hard drive) without consultation is not authorized by the manufacturer and may damage the USB slot.
	After copying the data to the USB flash drive, before removing it from the USB socket, it should be un-mounted (see Section 5.4.).


6.2. First boot

During the first startup, a wizard appears on the screen allowing you to configure settings such as:

- language selection
- downloading the manual
- connection to a computer network
- setting the time zone and time
- connection to the LabDesk Cloud cloud service


Figure 3 Settings wizard




It is recommended to complete the entire wizard, but you can interrupt it at any time by pressing . You can then choose one of the options:

- one-time closing – the wizard will be displayed again during the next launch
- check the option so that the wizard will no longer appear the next time you run it
- return to the wizard

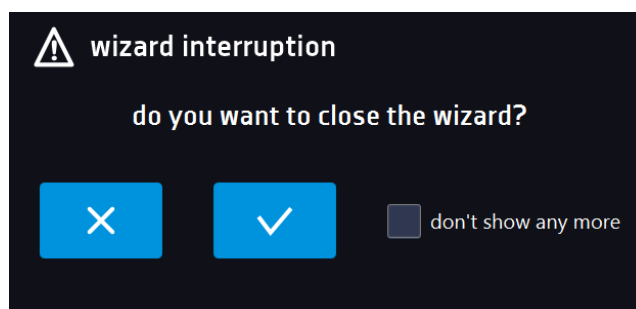Figure 4.



During the first boot, the screen will display information about saving the "Download" folder (with instruction manual in pdf format) on the USB flash drive. In order to do it, insert the USB flash drive and wait a second to detect the hardware, then press .


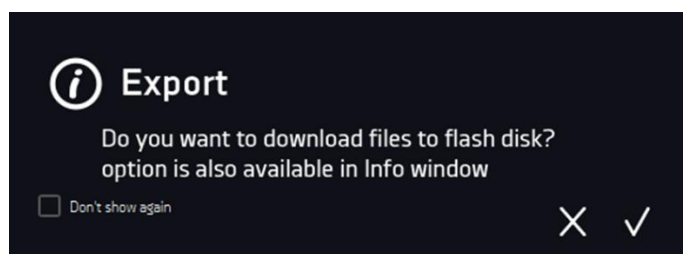
If you press  you quit downloading the folder. The window will appear again during the next boot. You can tick „Don't show again” so that the window will not be displayed after switching on the device. You can always download the „Download” folder in the Info submenu. More information [Section 6.14.](#)


Figure 5 Downloading files



6.3. Using the keypad

When operating the unit, sometimes it is necessary to enter alphanumeric characters (e.g. when logging into the system, entering the user name, etc.). In such cases, a keyboard appears on the display screen. In addition to the standard letters, it contains symbols that correspond to the computer keyboard.

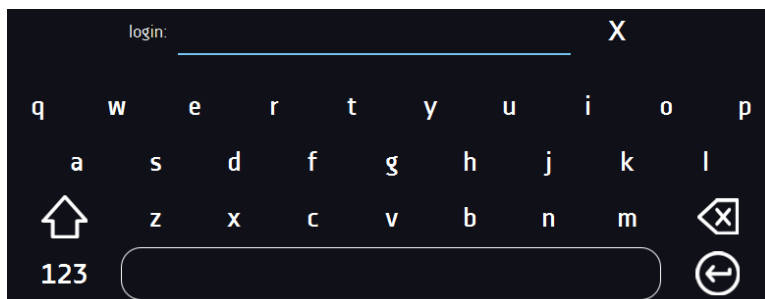Figure 6 Keypad



Deleting the entire text



Changing to capital letters (it's matters when entering login and password).



Changing to numbers and special characters.



Changing to letters.



Deleting the entered character.




Confirming the entered text / closing the keypad.



Sometimes entered characters can be hidden (then they are replaced with „ * "). This happens when classified information is entered (e.g. when a user enters a password).

6.4. User logging in

Setting device parameters is only possible by the logged in user. To log in, press  in the main screen. The login window will appear:

login: from 1 to 10 characters

password: from 1 to 10 characters

Factory default login parameters:

login: admin

password: leave the password field blank

Factory user: Super Admin

Figure 7 Login panel





- switching to login using a pattern

It is recommended to set a password for the Administrator account during the first start-up and write it down in a safe place to avoid unauthorized persons interfering with the device settings.



Please remember or write down the password because it is not possible to delete the Admin account password. If you lose your password, please contact the manufacturer's service. Password deletion is not possible


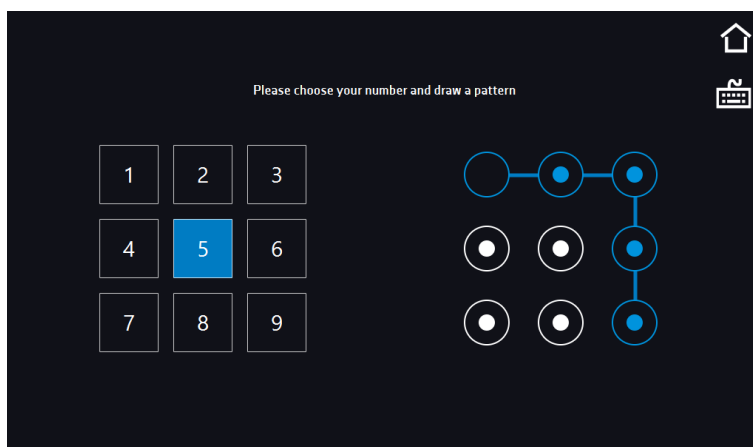
Instead of a text password, you can choose to log in using a pattern. to do this, press the button , select the number and then draw the pattern. The pattern is not set by default. For detailed information on creating a pattern, see section 6.15.1. Creating/editing a user.

Figure 8. Creating a login template



For information on user account types, see [Section 6.15.](#)

Logout: in the main menu, press . Automatic logout, see [Section 6.16.](#)

6.5. Main screen


After turning on the unit, the main screen appears. It contains the information about the unit status. After starting the program, additional information appears on the screen.

Figure 8 Main screen (program is switched off, no user is logged in)



From this point, any action requires logging in.

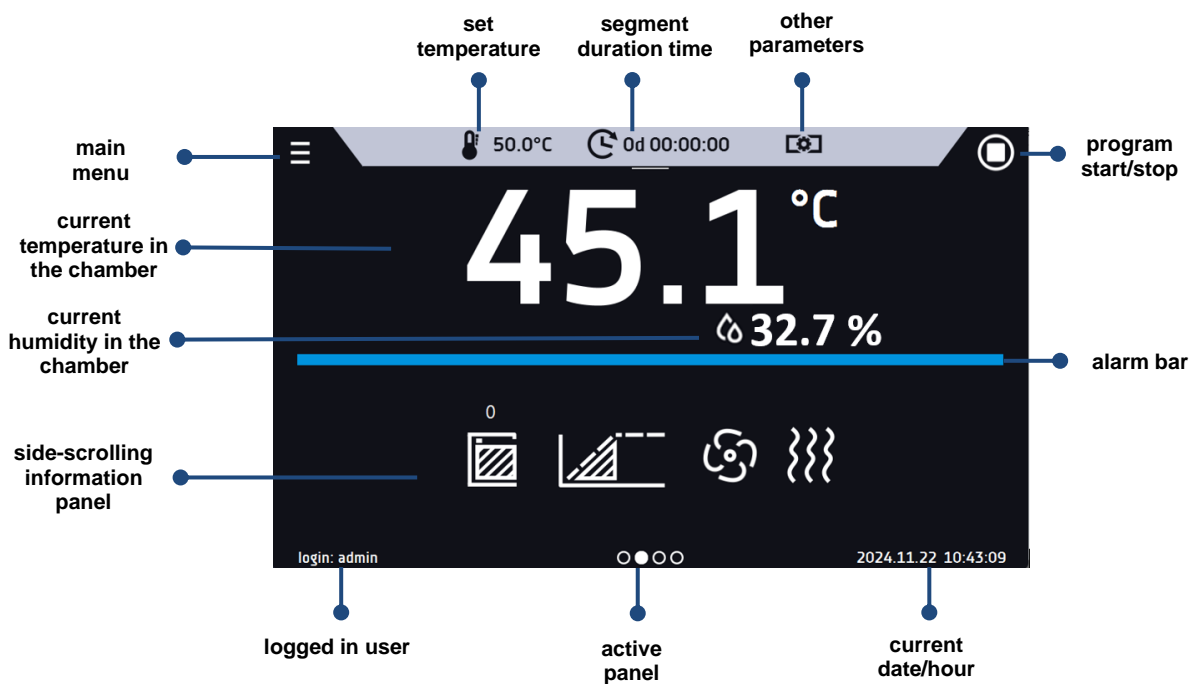Figure 9 Main screen – activated program in KKP



6.5.1. Information panel

There are four different windows in the information panel. Switching between them is done by swiping the finger left or



right. 

Figure 10 Information panel



The icon  indicates information about which window is active.

6.5.1.1. Alarms panel

On the first page of the information panel there's alarms panel.


Figure 11 Icon: Alarms panel




In the alarms panel there's a list with active alarms or the alarms that have occurred but have not been confirmed. When the alarm is active, the alarm bar is red and the alarm event is displayed in the list with the status "active". When the alarm event stops, the state changes to "inactive".

- "delete" button – confirms and removes the alarm from the list (only inactive alarms can be deleted),
- "confirm" button – confirms an alarm,
- "details" button – displays a preview of all instances of selected alarm.

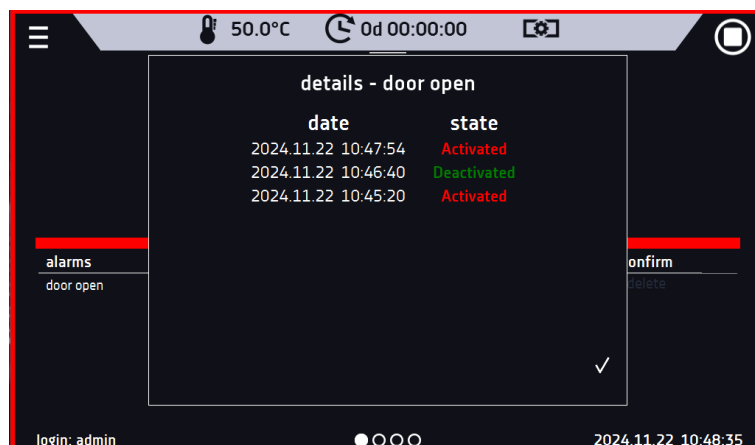Figure 12 Alarm details



With more alarms, a button  appears on the right side of the list and allows you to enlarge the view to full screen.

6.5.1.2. Status panel

The status of the unit is displayed descriptively on the third page of the information panel.

Figure 13 Status - description

program name	program	status	set temperature
program user	a	time set	12d 00:00:00
priority	parameters	time elapsed	0d 00:00:25
current segment	1/2	time remaining	11d 23:59:35
current loop	1/4		



program name	the name of running program
user	name of the user to whom the program is assigned
priority	of time or parameters
current segment	currently running segment / total number of segments in the program
current loop	currently performing cycle/ total number of cycles to perform
status	stage of unit operation, e.g. reaching or maintaining of set temp.
time set	set time of running segment
time elapsed	elapsed time since the segment has started
time remaining	remaining time until the end of the segment

6.5.1.3. Status panel – protection and alarms

On the fourth page of the information panel there is an information about the protection class along with the set protection temperatures as well as an alarm for the upper and lower temperatures. This information is associated with a running or finished program. To set protection parameters, go to the [Section 6.7.5](#).









The second part of the panel (on the right side) displays information about set upper and lower alarms. To set alarms, see [Section.6.18](#). Value „-“ means the alarm is off.























Figure 14 Status – protection and alarms

protection class	class 3.3	upper alarm	0°C
over temperature	50.0°C	lower alarm	0°C
under temperature	10.0°C		



6.5.2. The meaning of icons and symbols

icon	function
	The icon allows you to go to the main screen.
	Automatic return to the home screen. Factory setting: disabled.
	The icon allows you to go to the main menu.
	Automatic logout. Factory setting: disabled.
	Automatic screen lock. Factory setting: disabled.
	Unmounting the USB flash drive before removing it from the USB socket.
	Fan icon. Rotating icon shows that the fan is running. If the icon is not rotating, it means that the program is stopped or the fan is damaged.
	Icon is visible only when the chamber is cooling down.
	Icon is visible only when the chamber is heating up.
	Icon is visible only when the automatic defrosting function or defrosting program is running.
	Available when the program is running Clicking the icon allows you to quickly change the set temperature (Quick Change function).
	When the program is running, click the icon to quickly change the set humidity (Quick Change function).
	When the program is running, click the icon to quickly change the time of program duration (Quick Change function). Indicates the time that has elapsed from the program start.
	Countdown of the time remaining to the end of the program.
	Going to the menu to create, edit, delete and start programs.
	User message. Clicking on the icon allows you to enter a message.
	The icon appears in the event log and symbolizes entered user message.
	Turning off of the alarm sound (open door alarm, exceeding temperature range). Critical alarms (i.e. damage to the temperature sensor, temperature protection, etc.) continue emitting a sound.

 	The arrow icon allows navigation between: segments, program parameters and summary.
 	Closed door, open door. The number above the icon presents open door counter. Press the icon to cancel the counter. The counter is also cancelled by turning of the unit.
 	Ramp status: Chamber is currently heating up or cooling down.
 	Set temperature is reached.
	The program will start on the given date / time. Schedule or start delay activated.
	Schedule activated - the program will run from-to the given date / time
	Starting the selected program. In the list of programs - the program is running.
	Stopping the program.
	Adding a new program to the program list. The limit is 40 programs.
	Editing the selected program from the list. In the program list, a new program has been created but not approved yet.
	Removing selected program from the list.
	Canceling adding or editing of the program. Cancelling changes.
	Editing individual program segments (the program can have max. 100 segments).
	Immediate start of the program selected from the program list.
	Delayed start of the program from the list of programs. The program starts according to the set date and time.
	Going to the SMART program (Quick Program function).
	When the program is running, click the icon to quickly change the fan speed (Quick Change function).
	Active STM function (Smart Temperature Monitor) informs the user about the problem of reaching or maintaining the set temperature. <ul style="list-style-type: none"> white color - option enabled, the program is stopped blue color - option enabled, the program is running red color - warning about problems with reaching / maintaining the temperature

6.5.3. Upper expandable and configurable menu

In the upper part of the main screen there's a bar menu with parameter icons (unmounting USB flash drive, temperature, humidity, time, mute function and fan speed). These parameters can be quickly changed (Quick Change).

After swiping your finger down you will see icons for all parameters which can be quickly changed (Quick Change, see [Section 6.9.](#)) and the USB flash drive unmounting icon (see [Section 5.4.](#)). Among the options available in the bar you will find the following icons:







-  USB flash drive unmounting – more information [Section 5.4.](#)
-  Quick Note – more information [Section 6.5.4.](#)
-  mute option. Critical alarms (i.e. damage to the temperature sensor, temperature protection, etc.) continue emitting a sound, see [Section 6.18.](#)
- Quick Change (more information [Section 6.9.](#)) of:
 -  program duration time
 -  set temperature
 -  set humidity

Figure 15 Upper expandable menu when the program is running


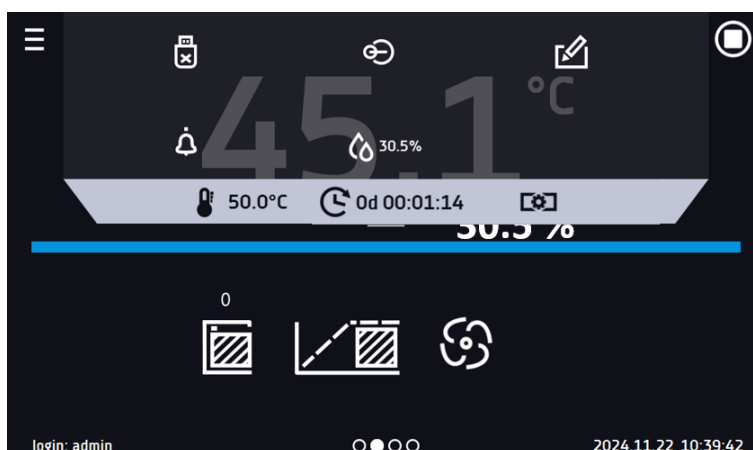


Figure 16 Upper expandable menu when the program is stopped

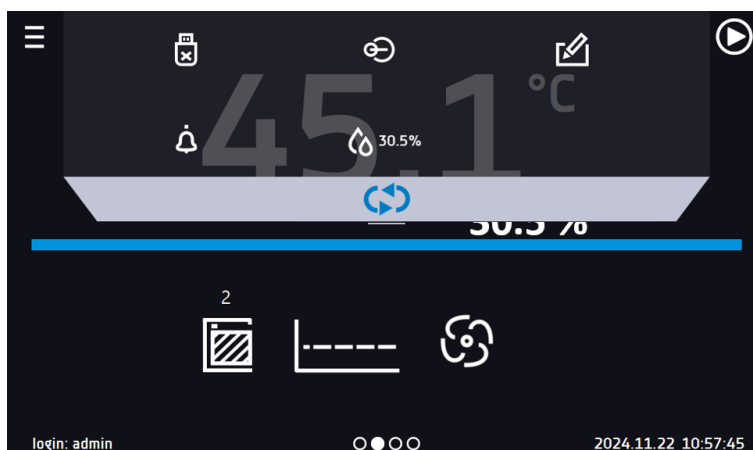

Positions available on the upper bar can be personalized. Just drag the selected icon to a new location.

Figure 17 Changing icon's position



6.5.4. Quick Note – user's message




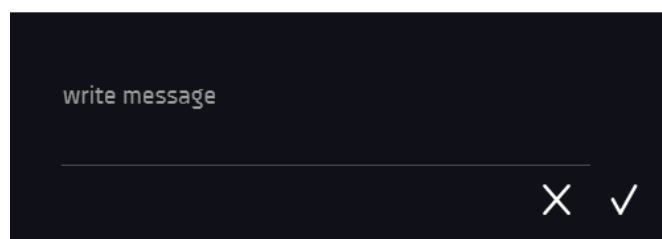


During equipment's operation, the user can save messages in unit's memory with information about: the date of inserting a new sample, observed changes in the samples, the place of sampling, etc. To enter a message you must first log in and then press the icon  in the main screen in upper menu. Click on „Write a message“. Using the keypad, enter the message and confirm it with the button . Once entered, a message cannot be changed. Entered notes can be seen in the event log, they are symbolized by the icon . More information [Section 6.13.](#)

Figure 18 User's message



6.5.5. Alarm bar

The Alm Bar is a quick visual information about the unit status. The colour of the bar indicates the status of the unit:

-  – blue - the device is working properly
-  – red bar and pulsating frame – active alarm

6.6. Quick Program

Quick Program allows you to quickly start the program from the main screen position without having to enter to the menu






Quick Program has several features that guarantee its uninterrupted operation:

- you can not set the duration of the program - time is always set to infinity,
- if the display fails, the program continues,
- after the power supply is resumed (after its failure), the program continues,
- to prevent the program from stopping accidentally, the STOP button was removed from the main window.

Figure 19 Quick Program



In order to go to Quick Program, first you have to log in (if none of the users is logged in, the icon of Quick Program will be inactive - grayed out). Then click the icon  in the main screen. By clicking the appropriate icon you can set:

-  temperature
-  humidity


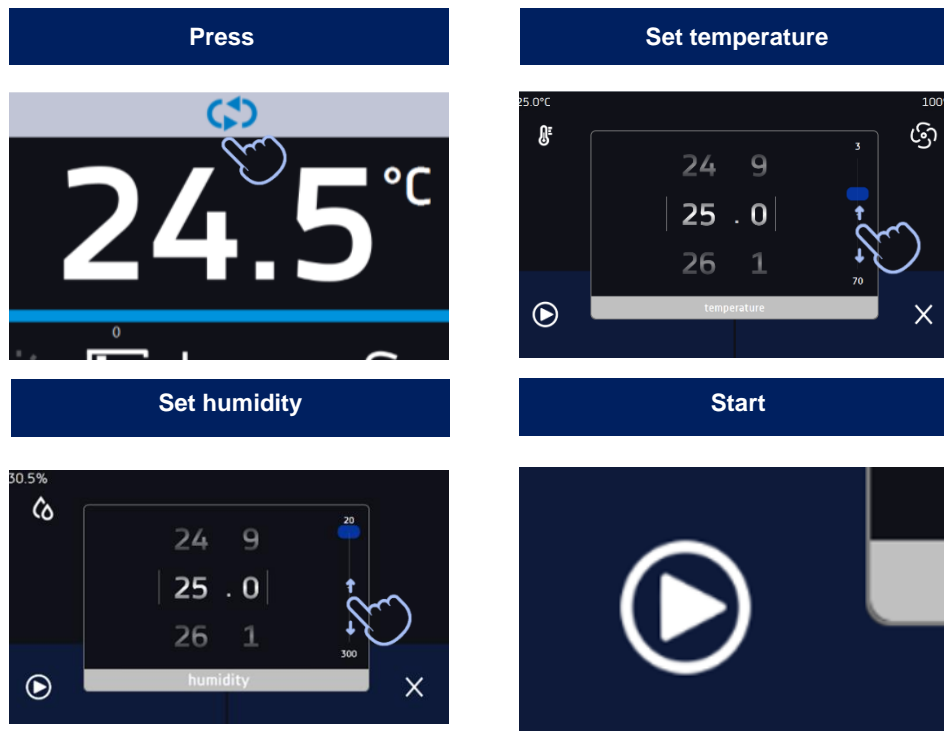
Clicking the icon  starts the program in continuous mode (time set to infinity).

Figure 20 Starting the Quick Program



Stopping the Quick Program has been made difficult on purpose (this prevents the program from being stopped accidentally) – to stop the Quick Program, you have to:

1. go to the menu ,
2. click the program window ,
3. keep pressing STOP button  for 5 seconds.

After configuration of the Quick Program, it appears in the programs list. Quick Program is displayed at the top of the list by default. Moreover, it cannot be deleted and cannot be assigned to a user of the User type.

Figure 21 Quick program on programs list



name	segments	priority
Quick	-	parameters
Program	1	parameters

In **Quick Program** editing mode, you can change:

- settings of the data recording interval,
- settings of the protection class.

Temperature protection

The highest protection class available for the unit is set. The protection values depend on the set temperature:



- set temperature $\leq 15^{\circ}\text{C}$: lower protection = set temperature $- 2^{\circ}\text{C}$, upper protection = 30°C
- set temperature $> 15^{\circ}\text{C}$: lower protection = set temperature $- 5^{\circ}\text{C}$ (max 20°C) , upper protection = set temperature $+ 5^{\circ}\text{C}$ (min. 30°)

When the program is running you can change the parameters (temperature and humidity) by pressing the icon  or



. During next launch of the **Quick Program**, your previous settings will be remembered.

6.7. Programs

Press the icon of main menu , and then press . In this panel you can run the selected program, add a new one, edit the program, delete it or share it with another user and download the program from a USB flash drive. The number of programs that can be created depends on the limit assigned by the **Super Admin** user. More information on the rights and configuration of account types (Super Admin, Admin, User) see [Section 6.15](#).



Start the selected program.



Stop the program.



Add a new program.



Edit the selected program.



Delete the selected program.




Download program from USB flash drive.



Share the selected program with the user type account.

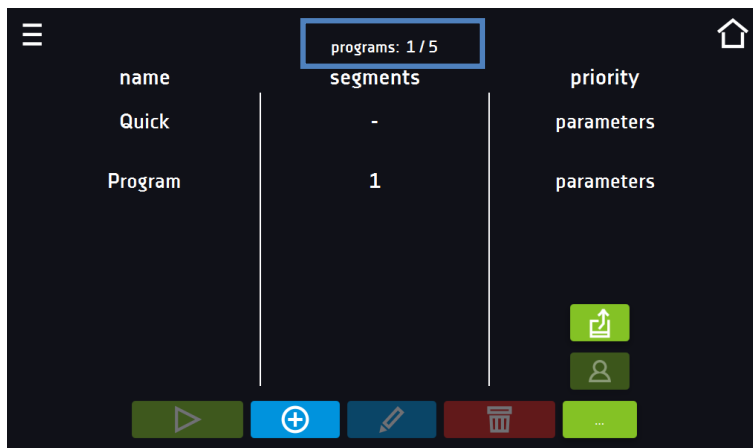Figure 22 List of programs



Information on the number of created programs / the maximum number of programs that the user can create is at the top of the screen (programs: 1/10).


6.7.1. Creating / editing a program

Press the button or and a panel with program parameters will appear.

In this panel you can set:

- **Program name** – after clicking, the keypad will appear and you will be able to enter the program name,
- **Segments number** – max. 100 segments
- **Interval** – frequency of saving the data in the data record (1 min, 2 min, 5 min, 10 min, 15 min, 30 min, 1 h), more information
- **Protection class** – more information [Section 6.7.5.](#)
- **Temperature protection** – temperature range for the protection class, more information [Section 6.7.6.](#)
- **Priority** – the priority of time or parameters, more information [Section 6.7.7.](#)
- **Loop** – the number of program repetitions, more information [Section 6.7.8.](#)

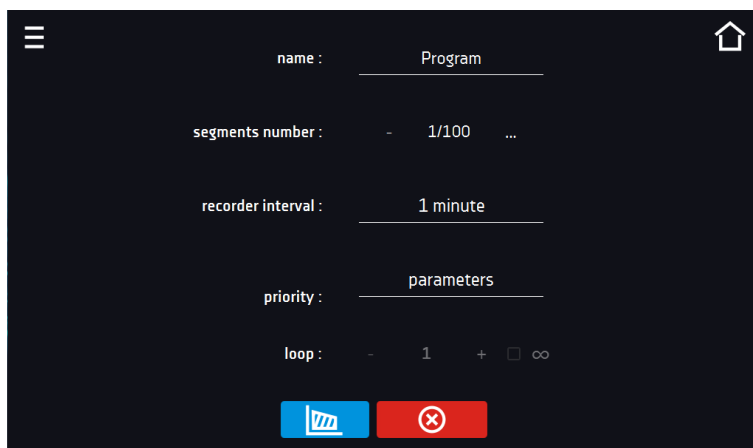Figure 23 Program parameters





Cancels adding or editing of the program.

Going to the edition of program segments.



With more parameters, the window can be scrolled up and down.

6.7.2. Segments edition

For each program, you can set maximum 100-segment time-temperature-humidity profiles that allow you to gradually increase or decrease the incubation temperature of the samples. This can e.g. protect the sample from so-called thermal shock. Example of program operation with programmed segments (parameters priority):


Program 1

segment1: temp. 30°C and 60%, time 2 hours (after reaching the parameters, they are maintained for 2 hours)

segment2: temp. 30°C and 70%, time 2 hours (after reaching the parameters, they are maintained for 2 hours)

segment3: temp. 40°C and 70%, time 2 hours (after reaching the parameters, they are maintained for 2 hours)

segment4: temp. 50°C and 80%, time 2 hours (after reaching the parameters, they are maintained for 2 hours)

Press the button  and the first program segment will appear.

In this window you can set:

- **temperature** – target temperature which the unit is to achieve in this segment (needs to be minimum 2°C below the value for over temperature protection and minimum 2°C above the value for under temperature protection)
- **time** – the time of maintaining the set temperature ([d hh:mm]) in days, hours and minutes. It is possible to select continuous work ∞ in the last segment
- **ramp time** – the time of reaching the set temperature ([d hh:mm]) in days, hours, minutes
- **humidity** - expressed in %


The active value is highlighted in blue. The item highlighted in red means that the value is out of range and you should enter another one, e.g. the temperature is above / below the operating range of the unit or the protection temperature.



The fan efficiency set to 100% is the factory set value and it cannot be changed.



Ramp time - setting a short time will not accelerate reaching the ramp, but the ramp will be reached in the shortest possible time depending on the set temperature, ambient conditions and the possibilities of the cooling or heating system in the unit.

The ramp parameters are factory set in accordance with the manufacturer's instructions. If it is necessary to set individual parameters when reaching the segment temperature, activate the edit ramp field  ramp edit and set your own values.



With more parameters, the window can be scrolled up and down.

Figure 24 Program segment edition

The navigation between: segments, program parameters and summary is done by touching the icon



If, when editing a program, you automatically return to the home screen or you are automatically logged out, the edited program will not be lost, but saved as a draft (see below).

After configuring all segments, a window with the protection class is displayed. For class 3.3, you can set the protection temperature.

Figure 25 Security class 3.3.

After switching to program editing again, information appears about the possibility of continuing changes to the program settings.

Figure 26. Info

6.7.3. Fitotron FIT (option for KKP 240)

The phytotron (FIT) function allows you to perform e.g. day and night simulation, i.e. duration, and smooth adjustment of light intensity.

Phytotron version with lighting panels




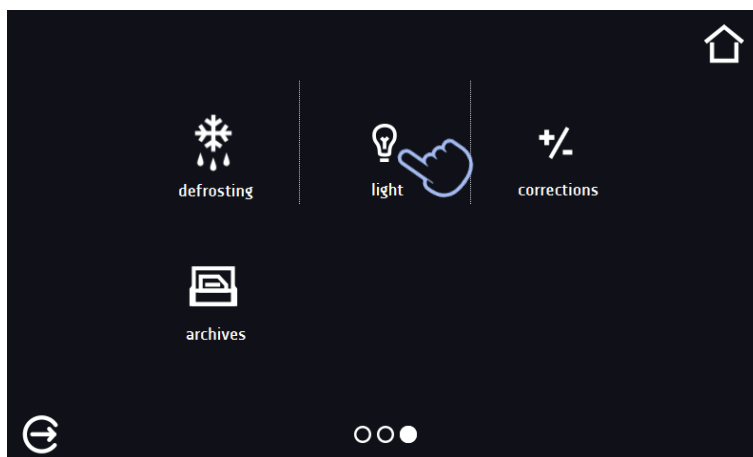
Before configuring the lighting parameters, turn on the lighting panel that will be used and configured (applies to devices with the FIT version in the form of lighting panels). Press , and then .

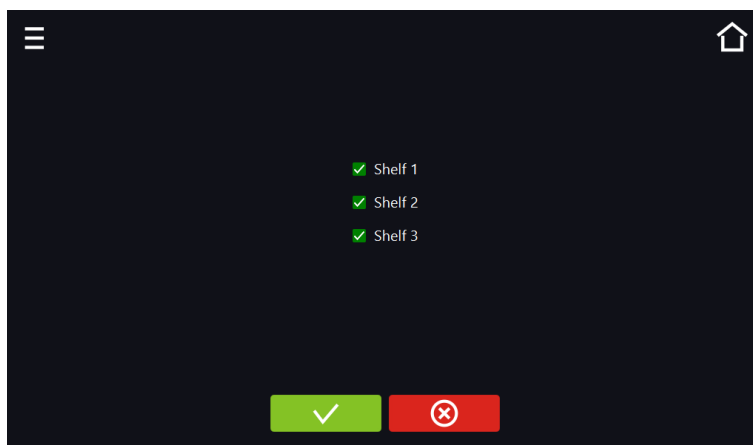Figure 27. Transition to turning on/off lighting panels



Depending on the size of the device, 1, 2 or 3 lighting panels can be installed. In the case of several lighting panels, it is not necessary to use all of them at the same time. To avoid generating alarms related to lighting panels that will not be used, select only those that will be used. For example, if the lighting panel will not be used and has been removed from the device, it should be turned off (uncheck the box next to the shelf number). Once the lighting panel is to be used and has been inserted into the device, it must be turned on (mark the box next to the shelf number).

Figure 18. Turning the lighting panel on/off



Confirm the changes



Cancel the changes you have made

6.7.3.1. Devices with many independently controlled light zones (option)

1. The phytotron version with lighting panels can be equipped with an option (additionally paid) allowing for independent control of each lighting panel. To set the light intensity in each panel individually:
2. 1. Click the light bulb icon to set the light for each lighting panel in a separate window.
3. 2. To turn on the light in a segment, select the checkbox and then set the intensity value for each turned on panel.

Figure 29. Turning on the light



Figure 20. Setting the light intensity in active panels



Confirm and save changes.




Cancel the changes made to the segments and go to the parameters program.

6.7.4. Summary of segments

In the segments summary all segments can be seen along with introduced parameters:

- number of segments,
- temperature, duration time, target time of reaching temperature of a given segment,

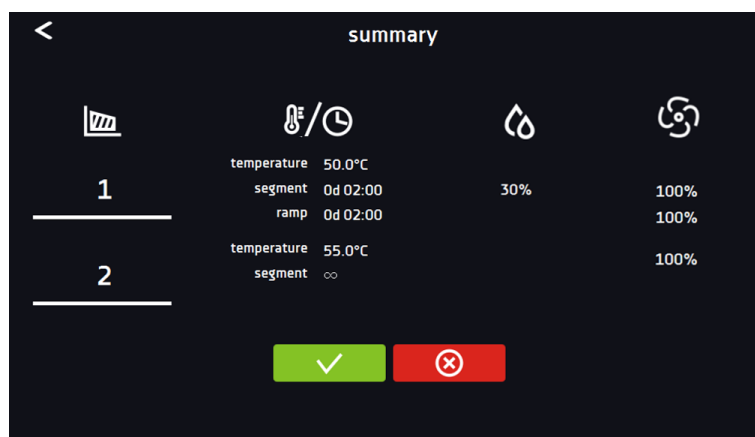Figure 31. The summary of the segment





Confirms and saves the changes



Cancels the entered changes in the segments and goes to program parameters



With more parameters, the window can be scrolled up and down.

6.7.5. Protection class

The unit is equipped with sample protection – temperature protection which is carried out on the basis of the temperature value measured by an independent temperature sensor, the so-called security sensor. The main aim of sample protection is the protection against uncontrolled rise or fall of temperature. When activated, the relay disconnects the heating / cooling circuit.

Figure 32 Confirmation of protection alarm

alarms	info	state	confirm
over protected temperature	details	active	confirm

Class 3.3 according to DIN 12880 – over and under temperature protection – combination of classes 3.1 and 3.2. - the user programs the protection temperature (over and under) and once it's exceeded, the heaters or compressor will be cut off. When the temperature returns to the allowed range, the unit resumes operation.

The set temperature in the segment cannot be higher than the over temperature protection minus 2°C, e.g. the over temperature protection is 50°C, therefore the maximum set temperature in the segment that can be set is 48°C.

6.7.6. Temperature protection

The temperature protection value for protection class 3.3 is:

- bottom protection temperature: maximum +20°C
- upper protection temperature: minimum + 30°C

6.7.7. Priority

Can be set in terms of:

Parameters:

In the program without ramp – the unit starts the countdown of the segment time when the set temperature and humidity is reached.

In the program with ramp – first, the unit counts down the time of the ramp and then proceeds to the segment countdown when the set temperature and humidity is reached. Regardless of whether the time of ramp elapsed.



It may happen that the unit failed to reach the set temperature and humidity within the set time because the reaching time was too short. In such situation the reaching time will be prolonged and the segment's time countdown will start when the set temperature will be reached.

Time:

In the program without ramp – the unit starts counting down the segment time when the program is started. Regardless of whether the temperature and humidity have been reached.

In the program with ramp – first, the unit counts down the ramp time and after its expiry it proceeds to the countdown of the segment time. Regardless of whether the temperature and humidity have been reached.



It may happen that the time of reaching was too short and the unit failed to reach the set temperature and humidity within the set time. Then the countdown of the segment time will start before reaching the set temperature. Thus, the actual time of unit operating in the set temperature and humidity will be shortened.

6.7.8. Loop

The option is available if the number of segments is equal to 2 or more (maximum 100). When the program finishes the last segment, the unit starts the program again from the first segment. You can define if the program should be carried out once (loop: 1) or multiple times (loop: 2 to 255). In order to set the program to be carried out continuously, tick the „∞“ option. If the time of the last segment is set to infinity, it will be treated as infinite only in the last cycle. In other cycles it will be treated as 0.

Example:

Loop:3

segment1: temp. 20°C, 60% RH, time 2 h

segment2: temp. 30°C, 70% RH time 2 h,

segment3: temp. 50°C, 80%, time „∞“

The unit will run segment1 and segment2 three times and then will go to segment3 which will last indefinitely.

6.8. Starting the program

The created program can be started in two ways:

6.8.1. The first way

- Go to the main menu and press the icon „programs“ .
- Then select the program you want to activate and press „start“ button .

Figure 33 Main menu



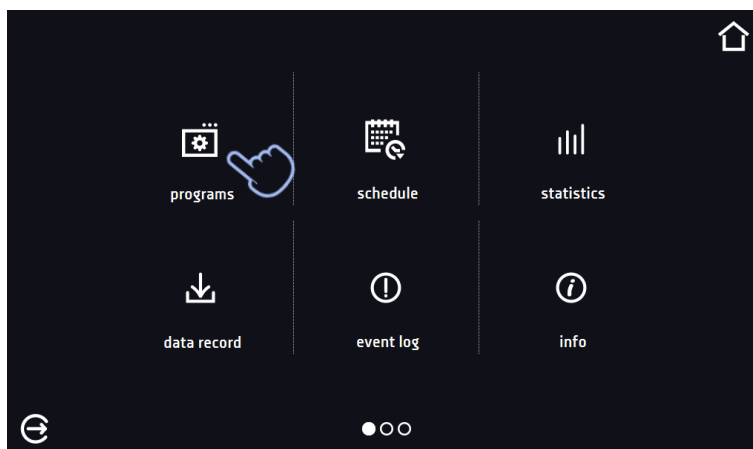


Figure 34 Program management menu

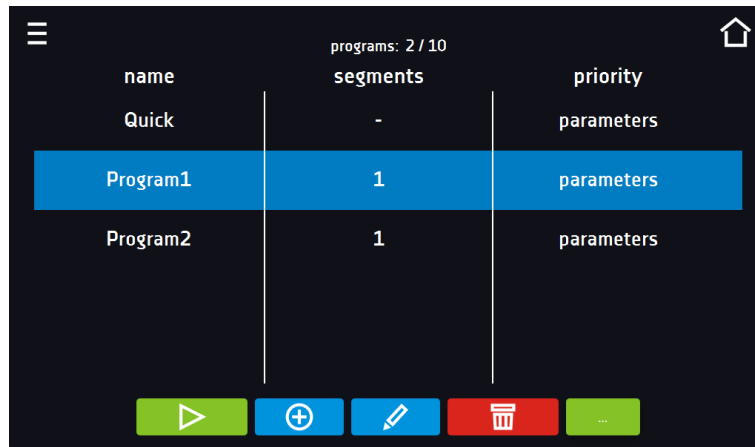

If the program is running, the symbol appears next to the program name on the list. The symbol means that the program has been edited, but the changes have not been confirmed.

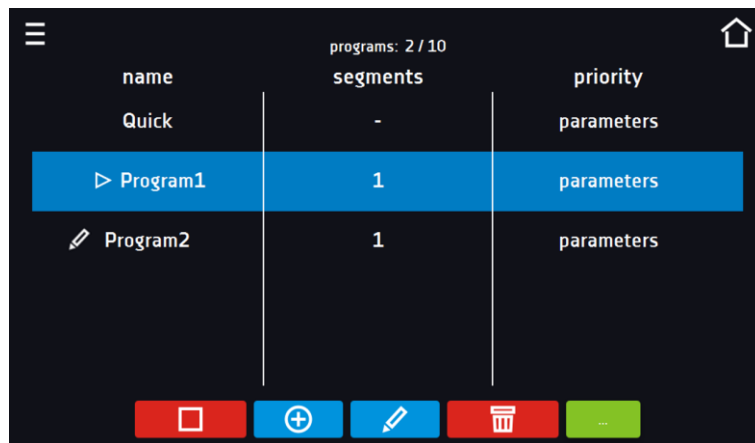Figure 35 List of programs with the selected status



6.8.2. The second way

- In the main screen press the icon in the upper right corner .
- In the upper left corner press „PROGRAM“
- Select the program you want to start. You have two additional options to start the program:



Immediate start of the program.



Scheduled program start according to the set date and time.

Figure 36 Main screen


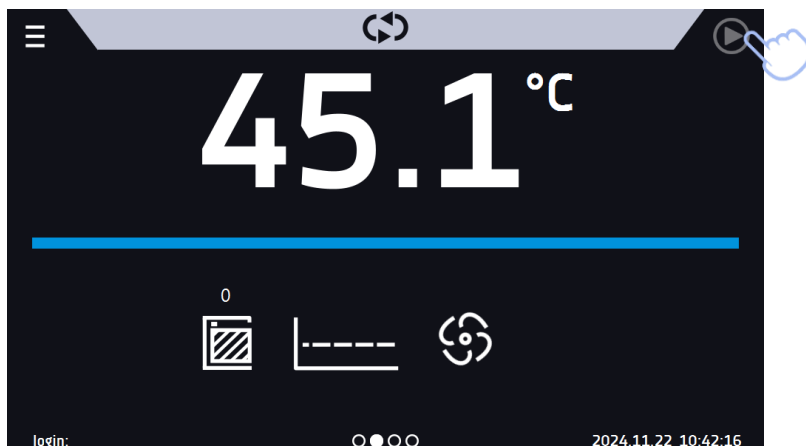


Figure 37 Selection and launch of the program

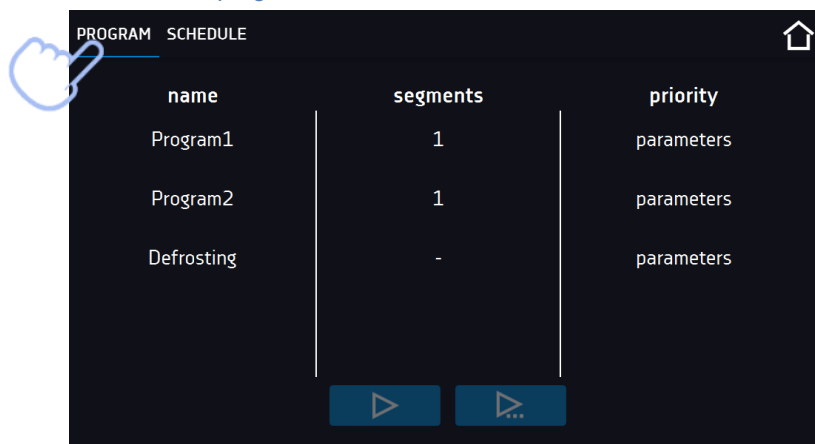

It is possible to delay the program start (up to a maximum of 7 days). This is possible for the programs with time priority. Program segments that would last from the back date to the current date will be skipped.

If the program is running, the symbol  appears next to the program name on the list

6.9. Quick change of parameters





You cannot make a quick change (of time / temperature / humidity) in a running program that belongs to another user. Information about the program owner can be found in the information panel (lower left corner).



Although the ramp time has been included in the program, the Quick Change of parameters will take place immediately while the temperature and humidity are being reached.

6.9.1. Quick change of set temperature

In order to quickly change the value of set temperature of a running program, press the icon  in the main screen. The value of the temperature should be selected by scrolling the list up or down. Click  to confirm the change.

The temperature can't be higher than the over temperature protection -2°C and lower than the under temperature protection +2°C.

Figure 38 Quick change of set temperature


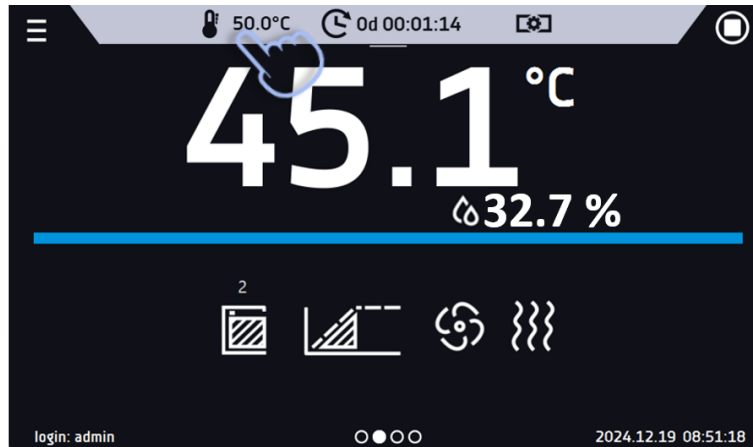


Figure 39 Quick change of set temperature

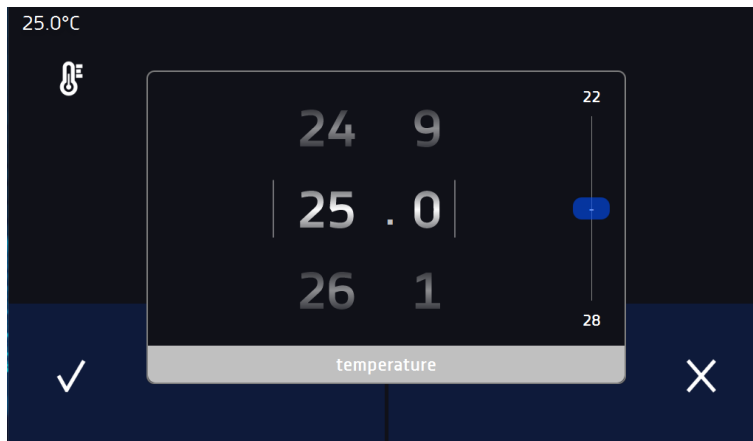

6.9.2. Quick change of set humidity




In order to quickly change the set humidity of a running program, press the icon  in the main screen. Choose the humidity value by scrolling the list up or down. Click  to confirm the change.




Figure 40 Quick change of humidity - choice



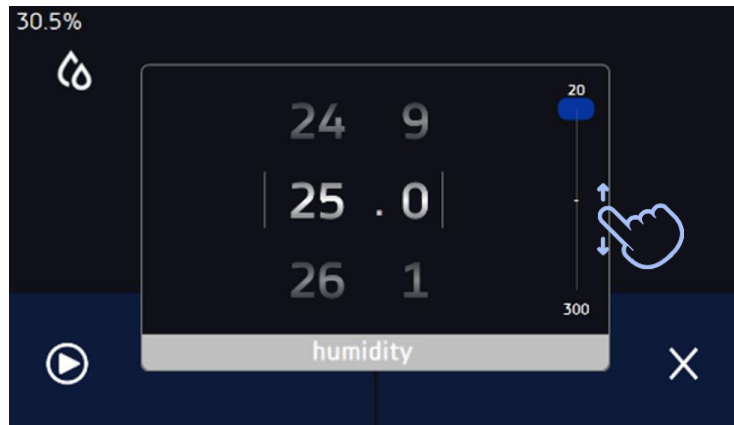Figure 41 Quick change of set humidity



6.9.3. Quick change of set time

In order to quickly change the duration time of a running program, press the icon  in the main screen. Select the number of days, hours and minutes by scrolling the list up or down. Click  to confirm the change. To set the continuous work press .

To change the way of displaying the time, press::



– to display the elapsed time



– to display the remaining time


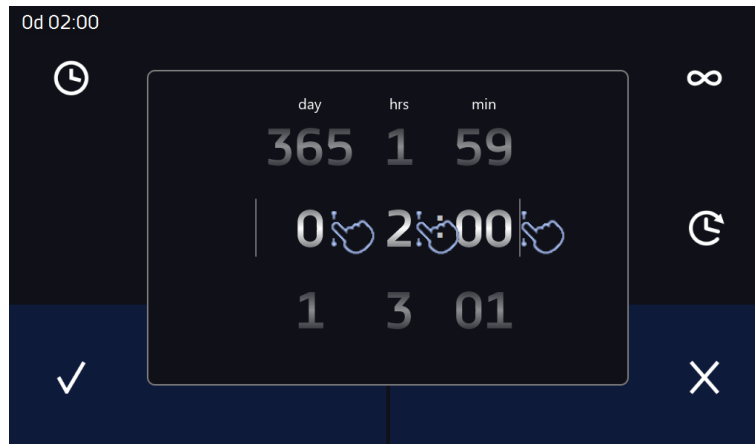
To change only the way of displaying, you do not have to confirm it by .

Figure 42 Quick change of set time




Figure 43 Quick change of set time



6.10. Schedules

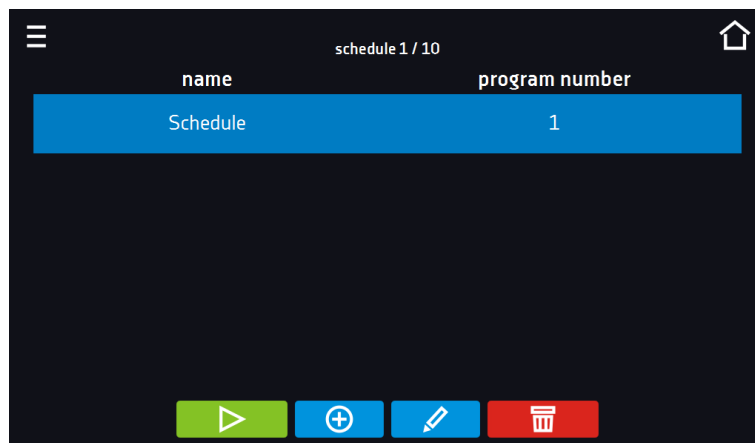
The option allows creating a list of programs to be implemented in a given time. You can create several independent schedules. The schedules window contains a list of all created schedules of the logged-in user.








Before you start creating a schedule, you must create programs that you want to include in it.

On the upper part of the screen there is information about the number of created schedules / the maximum number of schedules to be created (1/10).

Figure 44 List of schedules



- | | |
|---|---------------------|
|  | Start the schedule |
|  | Stop the schedule |
|  | Add the schedule |
|  | Edit the schedule |
|  | Delete the schedule |

6.10.1. Creating / editing a schedule



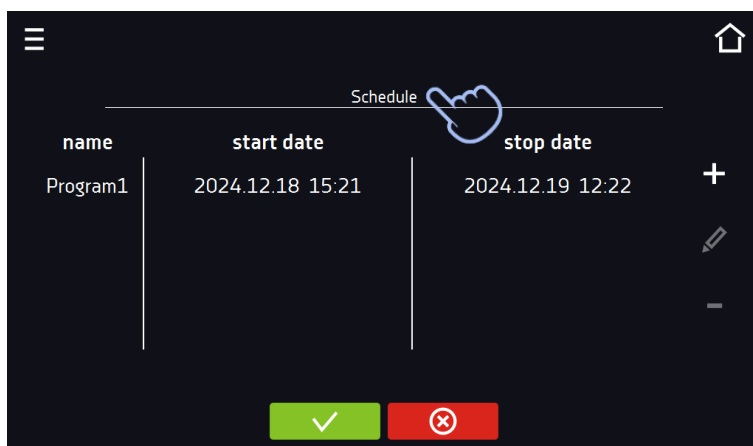
To create / edit a schedule, press the button  or . The panel with schedule parameters will appear on the screen. Press "Schedule" and use the keypad to enter the schedule name. The schedule may consist of up to 10 programs.

Figure 45 Creating / editing a schedule



Add a new program to the queue (program must be previously created)



Edit and make changes to the selected position



Delete the selected position from the list



Save the schedule



Cancel introduced changes




After pressing  or  a window appears allowing you to select the program and the date and time of its start and end.

Figure 46 Adding a program to the schedule



Select a program from the drop-down list and press on the field next to the inscription "program". Information about the selected program will be displayed: number of segments, number of cycles, priority, temperature protection, upper protection, lower protection. This is only a preview of the parameters - it is not possible to change them in this window.

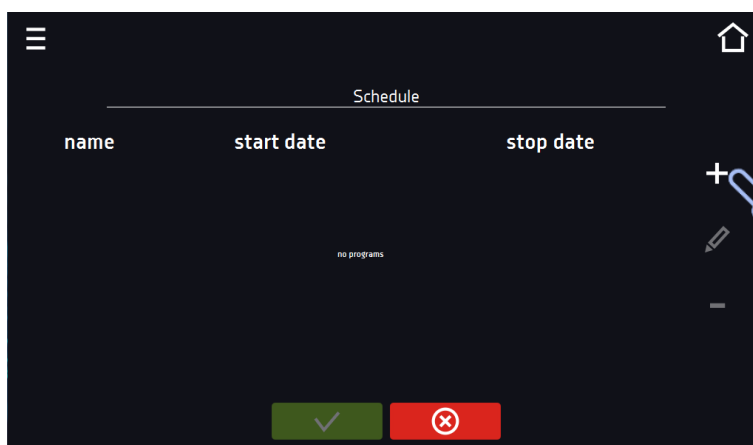Figure 47 Selection of the program



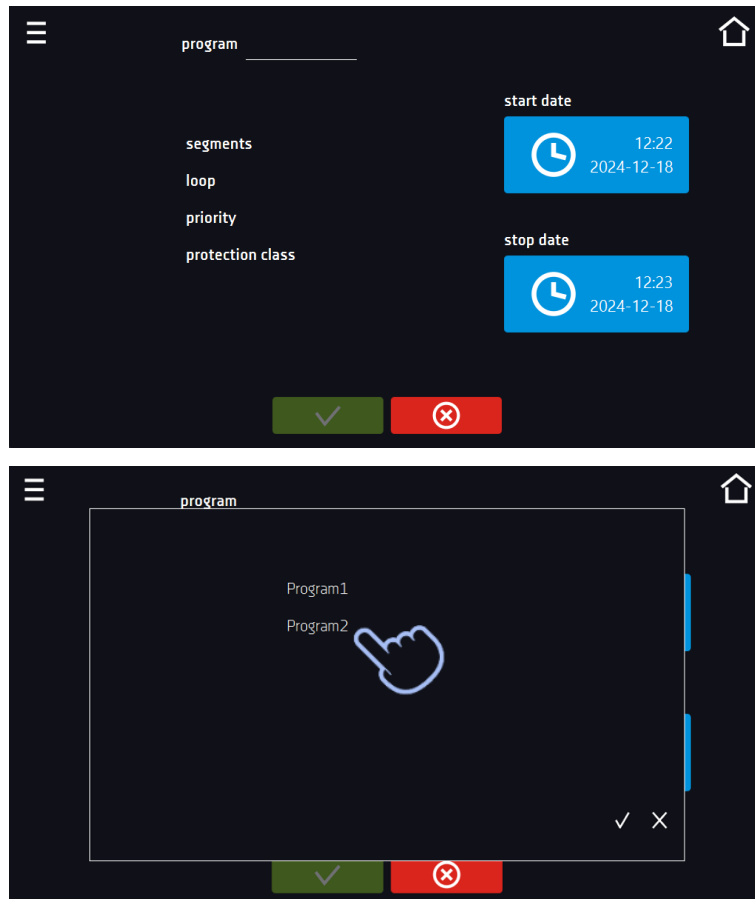



Figure 48 Information about the program

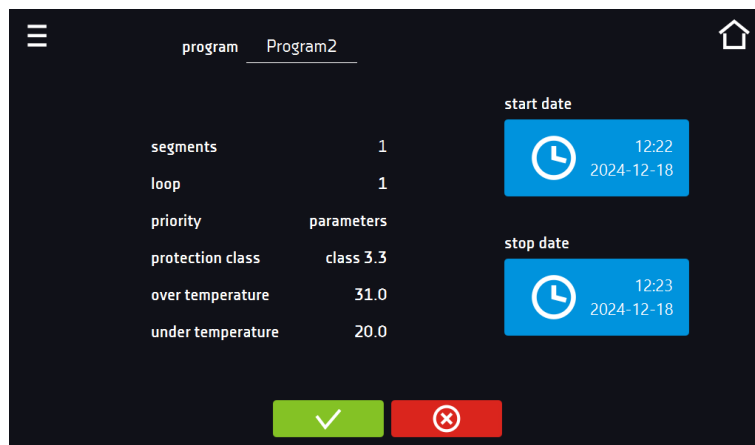

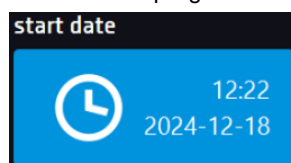Press the 'start date' field and then set the date and time of program start.



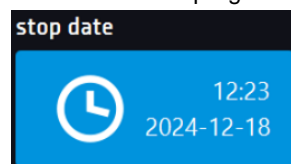Press the 'stop date' field and then set the date and time of the program end.





You can assign up to 10 programs to one schedule. In total you can create ten schedules.

When creating a schedule, consider the following restrictions:

- the start time of the first program on the list cannot be earlier than the current date and time,
- the start time of the next program on the list cannot be earlier than the end time of the previous program,
- the program end time cannot be later than the start time of the next program,
- the end time of the next program does not have to coincide with the start time of the next one, there may be a break between them,
- if the program is not fully completed (due to setting a too short time of a schedule), it will be interrupted.



When choosing time intervals, consider whether they are long enough for the selected program to be implemented. The duration of the program can be affected by: ambient conditions, samples and the program carried out immediately before it.

6.10.2. Starting a schedule

The schedule can be started in two ways:

6.10.2.1. The first way




- Press the icon of the main menu  and then press the icon „schedule” .
- Then select the schedule you want to activate and press the start button. .

Figure 49 Main menu


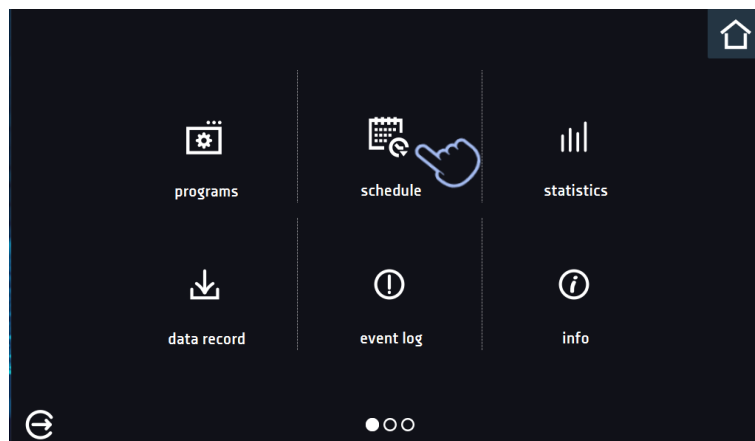




Figure 50 List of schedules

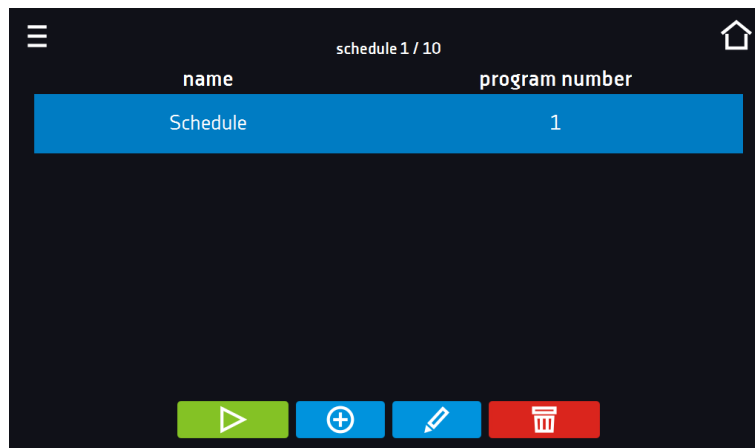

Start the schedule

6.10.2.2. The second way

- In the main screen press the icon , then press the SCHEDULE inscription. The schedule selection window will be displayed.
- Then select the schedule you want to activate and press the button .



Please note that it is not possible to run a schedule in which all parameters refer to the past time.

Figure 51 Main screen


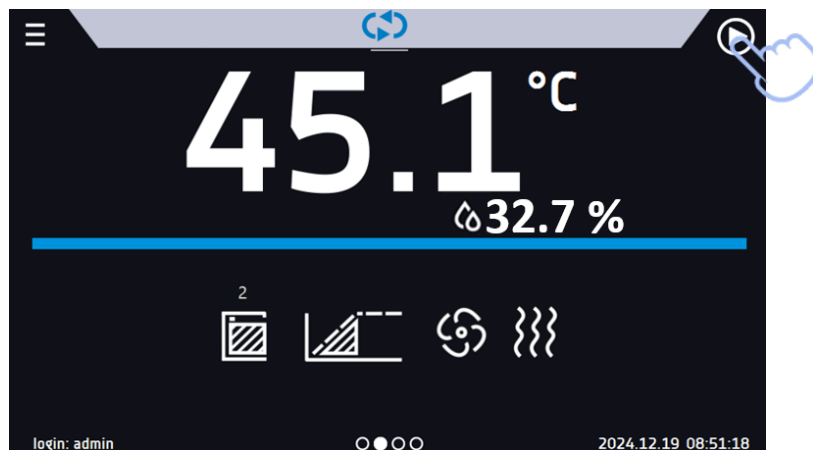


Figure 52 Selection of the schedule

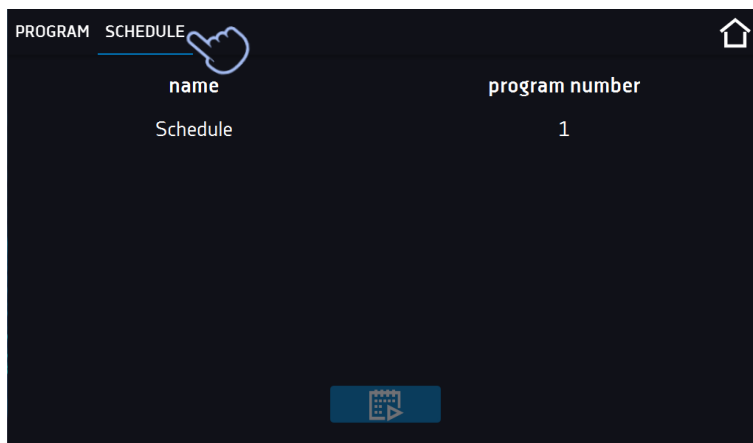

6.11. Statistics

Go to the main menu  and press the icon . This panel displays statistics of the currently running program or program that has ended. Statistics are calculated separately for each segment and separately for each cycle. Data logging for calculation starts after 30 seconds from reaching the set temperature in the segment. Further data is registered every 1 minute.


The following information is available:

- **set temperature [°C]** – set temperature in the segment,
- **minimum temperature [°C]** – the lowest recorded temperature,
- **maximum temperature [°C]** – the highest recorded temperature,
- **average temperature [°C]** – average temperature,
- **set humidity [%]** – set humidity in the segment,
- **minimum humidity [%]** – the lowest recorded humidity,
- **maximum humidity [%]** – the highest recorded humidity,
- **average humidity [%]** – average humidity,
- **segment** – status of the segment:
 - **in progress** – currently running segment (data is being constantly updated),
 - **finished** – the segment has been completed,
 - **interrupted** – the segment was interrupted by the User before the set time has elapsed,
- **segment 1/2** – the number of the currently overlying segment / number of the currently performed or completed segment. Navigating between the segments is done by swiping your finger up or down.
- **loop 1/1** – the number of the currently overlying cycle / number of the currently performed or completed cycle. Navigating between the cycles is done by swiping your finger left or right.



You cannot overview the segment / cycle data that has not started yet.

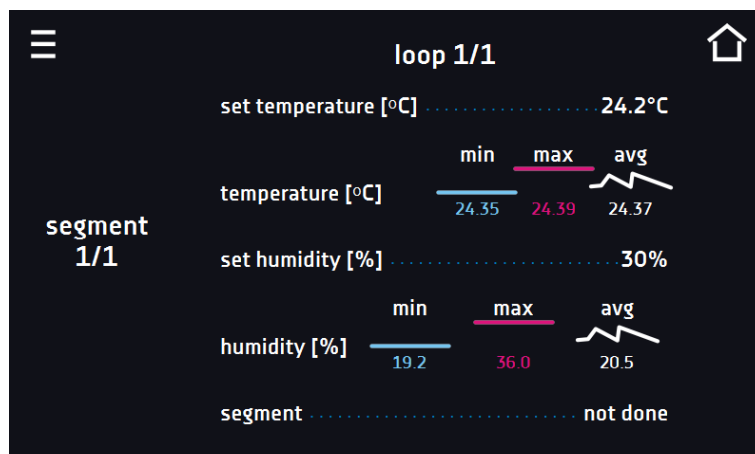Figure 53 Statistics



6.12. Data record

Go to the main menu  and press the icon . Data record window contains the following information:

- time and date of sample registration [date],
- temperature value measured with the main sensor in the chamber [temp.],
- humidity value [%] measured with the humidity sensor in the chamber [hum.],
- unit status

It is possible to register 10 000 data records for the max period of 12 months. If all the memory cells are full, the oldest ones are overwritten. The data appears in the table in the order they were added, not in chronological order by the date. The most recently added record is at the top. The samples are only registered when the program is running. The frequency of registration depends on the program parameters settings.



 When opening the data record, all data is downloaded. If the data download is interrupted by the user, press  to continue downloading of the rest of the data.

Figure 54 Data record

data	temp.	hum.	status
2024.12.19 10:41	25.23	27.4%	set temp.
2024.12.19 10:40	25.17	27.5%	set temp.
2024.12.19 10:39	19.25	27.6%	wait
2024.12.19 10:38	25.85	27.6%	ramp
2024.12.19 10:37	25.85	27.7%	ramp
2024.12.19 10:36	25.85	27.9%	wait
2024.12.19 10:31	25.85	27.7%	ramp
2024.12.19 10:30	25.85	28.0%	ramp
2024.12.19 09:47	25.86	27.7%	set temp.
2024.12.19 09:43	25.86	27.9%	set temp.
2024.12.19 09:41	25.86	27.7%	set temp.
.....	---	---	---



Press to continue downloading data



Recording data onto the USB flash drive. .csv files are available - separated by semicolon when opening e.g. with a spreadsheet, .plx - opening with the Lab Desk application



Before removing the USB flash drive from the USB port, it must be unmounted, see [Section 5.4.](#)



Displaying data as a graph, see [Section 6.12.1.](#)



Deleting data. Users with Super Admin privileges can delete all data, including those registered by other users.

If there is a lot of data, a progress bar appears on the display:

Figure 55. Progress bar


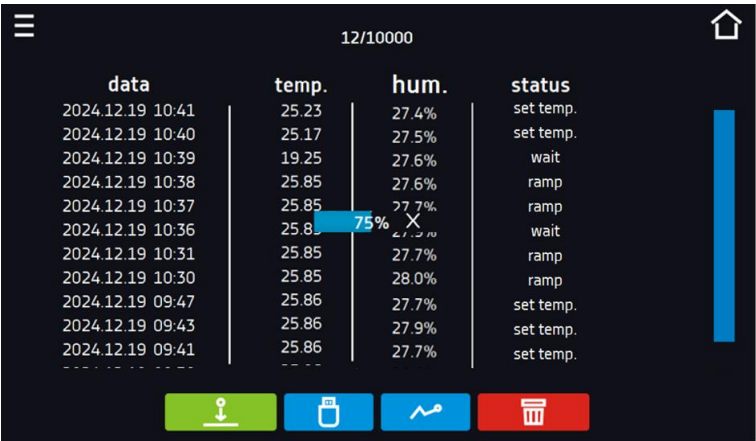



Figure 56 Deleting data

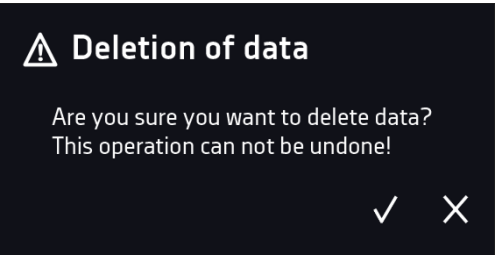

6.12.1. Graph

A graph can be generated from the data stored in the data register. The time during which the graph opens depends on the number of saved samples data. If the unit is equipped with additional sensors, press the selected graph twice.

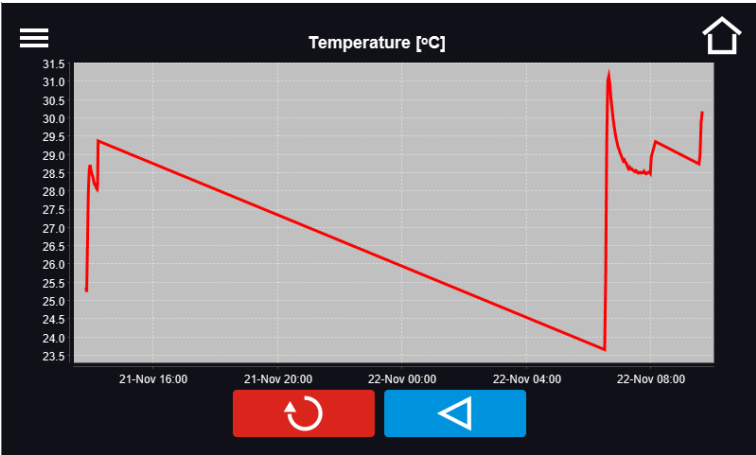Figure 57 Temperature graph




Returns to displaying the entire chart (undo all magnifications) / returns to the list of charts.



Returns to data register

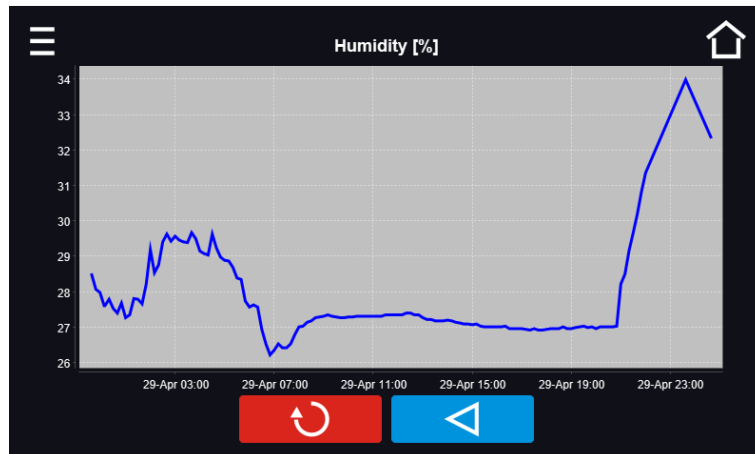Figure 58 Humidity graph




Returns to displaying the entire chart (undo all magnifications) / returns to the list of charts.



Returns to data register

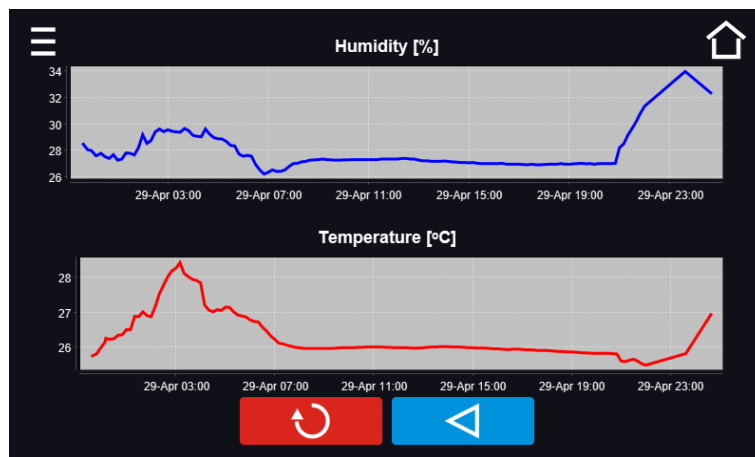Figure 59 Temperature and humidity graph



Returns to displaying the entire chart (undo all magnifications) / returns to the list of charts.




Returns to data register



The opening time of the chart depends on the number of saved data samples. The greater the number of saved samples, the longer this window will open.

You can enlarge a fragment of the chart. Press the graph anywhere and drag to the right and down simultaneously - enlarge in the same way as it is done on a smartphone. Swipe left to return the chart to normal size.

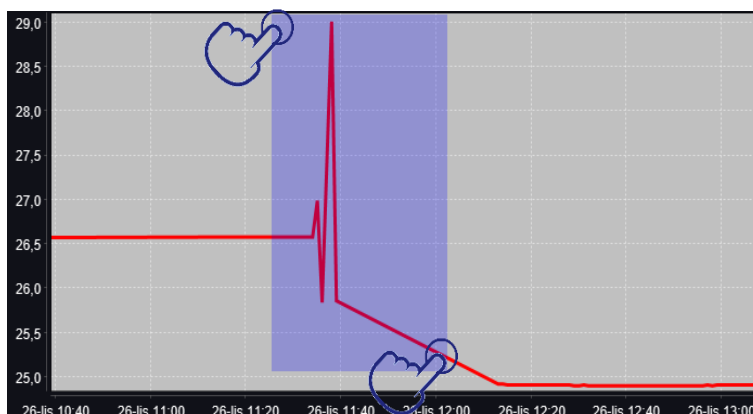Figure 60 Enlarging a part of the chart



6.12.2. Data storage directly on a USB flash drive

The saved data (temperature and / or humidity, date and time) can be saved directly on a connected USB flash drive. To do this, enable the option of saving data, see [point 6.16](#). The USB flash drive must be connected to the USB socket located on the front of the equipment.

The date / time, temperature of the sensor installed in the chamber and indications of additional sensors in the unit (humidity, additional temperature sensor) are saved to the file. The frequency of saving to the file is equal to the frequency of saving the data in the register set in the program, see section [6.7.1. Creating / editing a program](#) (saving interval to the data register). Few comments can be found below:

- saving to the file takes place only when the program is running,
- data register is continued after power is restored,
- during registration, the USB flash drive can be removed but it is necessary to unmount it in the main window on the upper menu bar, see section [5.4. USB port](#),
- registration is continued after reinserting the USB flash drive,
- a folder with the name consistent with the serial number of the unit is created on the flash drive, all files are saved in it. The files are saved in the csv format (separated by semicolons), which can be read in a spreadsheet or notebook

	A	B	C
1	date	temp.	status
2			
3	23.03.2022 11:06	25.04°C	wait
4	23.03.2022 11:07	25.04°C	ramp
5	23.03.2022 11:08	25.04°C	ramp
6			

- the current measurement is saved to a file named measurements.csv,
- if the size of the current file exceeds 513 kB or the calendar month is changed, the current file is named in the format yyyy-mm_ measurements_0.csv, where 0 means the file number in the month, e.g. 2021-05_ measurements_0.csv

6.13. Event log

Data available for the following users (see [Section 6.15 Users](#)):

- **Super Admin** who can overview, download to USB flash drive and delete all data,
- **Admin** who can overview, download to USB flash drive all data,
- **User** who can only overview all data.

The log can store up to 10,000 events. When the memory reaches its capacity, new data automatically overwrites the oldest entries.



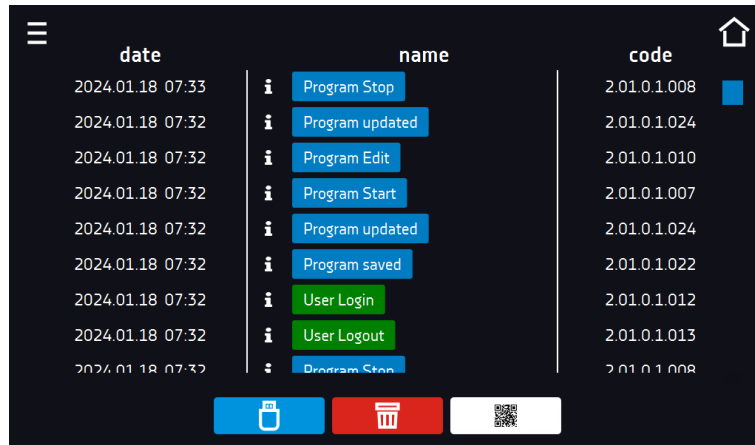
Go to the main menu  and press the icon . The window displays information about registered events, alarms and errors.


Figure 61 Event log



date	name	code
2024.01.18 07:33	Program Stop	2.01.0.1.008
2024.01.18 07:32	Program updated	2.01.0.1.024
2024.01.18 07:32	Program Edit	2.01.0.1.010
2024.01.18 07:32	Program Start	2.01.0.1.007
2024.01.18 07:32	Program updated	2.01.0.1.024
2024.01.18 07:32	Program saved	2.01.0.1.022
2024.01.18 07:32	User Login	2.01.0.1.012
2024.01.18 07:32	User Logout	2.01.0.1.013
2024.01.18 07:32	Program Stop	2.01.0.1.008

For program-related events, after pressing the event name, the program name is displayed.

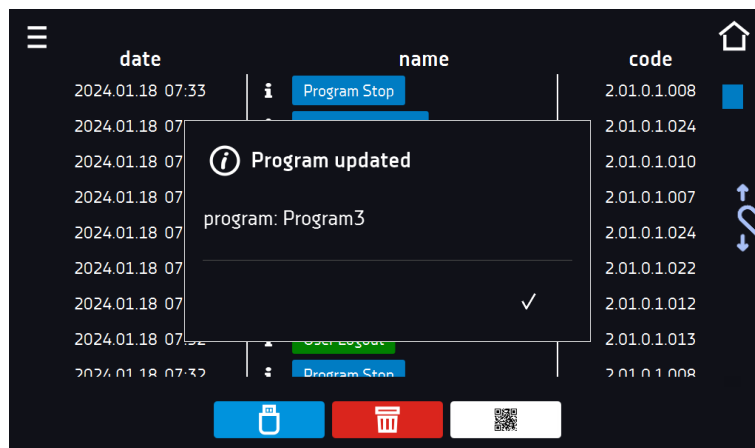
Figure 62 Event log



date	name	code
2024.01.18 07:33	Program Stop	2.01.0.1.008
2024.01.18 07:32	Program updated	2.01.0.1.024
2024.01.18 07:32	Program Edit	2.01.0.1.010
2024.01.18 07:32	Program Start	2.01.0.1.007
2024.01.18 07:32	Program updated	2.01.0.1.024
2024.01.18 07:32	Program saved	2.01.0.1.022
2024.01.18 07:32	User Login	2.01.0.1.012
2024.01.18 07:32	User Logout	2.01.0.1.013
2024.01.18 07:32	Program Stop	2.01.0.1.008

For user-related events, after pressing the event name, it displays the login of the user to whom the event relates.

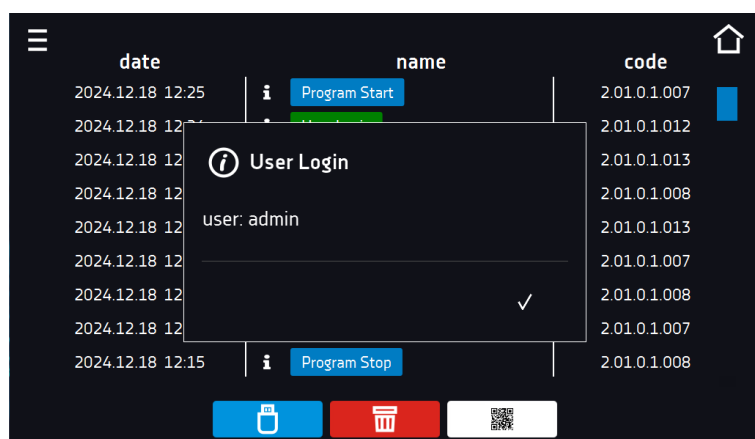Figure 63. Event log



date	name	code
2024.12.18 12:25	Program Start	2.01.0.1.007
2024.12.18 12:25	User Login	2.01.0.1.012
2024.12.18 12:25	User Logout	2.01.0.1.013
2024.12.18 12:25	Program Stop	2.01.0.1.008
2024.12.18 12:25	Program Start	2.01.0.1.007
2024.12.18 12:25	Program updated	2.01.0.1.024
2024.12.18 12:25	Program Edit	2.01.0.1.010
2024.12.18 12:25	Program Start	2.01.0.1.007
2024.12.18 12:25	Program updated	2.01.0.1.024
2024.12.18 12:25	Program saved	2.01.0.1.022
2024.12.18 12:25	User Login	2.01.0.1.012
2024.12.18 12:25	User Logout	2.01.0.1.013
2024.12.18 12:25	Program Stop	2.01.0.1.008



Recording data onto the USB flash drive. .csv files are available - separated by semicolon when opening e.g. with a spreadsheet, .plx - opening with the LabDesk application



Before removing the USB flash drive from the USB port, it must be unmounted, see [Section 5.4.](#)



Deleting data



QR code – opens smart4lab.eu (in the "Support" tab there are explanations of some of the information appearing in the event log). Press the symbol  and enlarge the code QR, and then scan it with your smartphone.

Figure 64 QR code



The events in the event log are sorted chronologically. However, it may happen that the event "Program restarted" will not be displayed according to the chronology but the date and time of the event will be correct. This is not an error.



Before removing the USB flash drive from the USB port, it must be unmounted, see [Section 5.4](#).

Information signs in the event log:



Information event



Message entered by the user



Alarm event



Error



Warning

Possible events:

Program Start	starting the program
Program Stop	stopping the program
Program Edit	changing the program parameters
Program End	program is completed
Unit On	the unit is switched on (on the main switch)
Unit Off	the unit is switched off (on the main switch)
Door opened	the door is opened
Open door alarm start	open door alarm has been activated
Door closed	the door is closed
Open door alarm stop	open door alarm has been deactivated
Program Restarted	program has been resumed after power failure
Under Protection Start	under-temperature protection has been activated


Under Protection Stop	under-temperature protection has been deactivated
Upper temp. alarm Start	over- temperature protection has been activated
Upper temp. alarm End	over- temperature protection has been deactivated
Date/time change	date/time has been changed
Lower temp. alarm Start	activation of the alarm of exceeding the temperature below the set temperature
Lower temp. alarm End	deactivation of the alarm of exceeding the temperature below the set temperature
Upper temp. alarm Start	activation of the alarm of exceeding the temperature above the set temperature
Upper temp. alarm End	deactivation of the alarm of exceeding the temperature above the set temperature
Lower RH Alarm Start	activation of the alarm of exceeding the humidity below the set value
Lower RH Alarm End	deactivation of the alarm of exceeding the humidity below the set value
Upper RH Alarm Start	activation of the alarm of exceeding the humidity above the set value
Upper RH Alarm End	deactivation of the alarm of exceeding the humidity above the set value
Deleted Measurement	user measurements have been deleted
Deleted All Mesurement	all measurements have been deleted
User added	new user has been added
User updated	user has been changed
User deleted	user has been deleted
Program saved	new program has been saved
Program deleted	program has been deleted
Program updated	program has been updated
Time Zone Changed	in the time settings the time zone has been changed
Temperature Correction Changed	main sensor temperature correction has been changed
Humidity Correction Changed	humidity sensor correction has been changed
Emergency stop of the program	the program has been automatically stopped – there was a situation that didn't allow the program to be continued. PLEASE CONTACT THE SERVICE
Defrosting Start	starting the defrosting process
Defrosting Stop	stopping the defrosting process
tank low level Start	means low water level in the tank, fill up the water in the tank to ensure proper humidity maintenance (only KKP models can be equipped with a water level sensor)
tank lo level Stop	the water level in the tank has returned to the correct level (only KKP models can be equipped with a water level sensor)
Power Fail Start	power failure / unit fuse blown out.
Power Fail Stop	power resumed, returned to maintain program parameters
User login	date and time of login
User logout	date and time of logout



Quick note

To view message details, click **User Message**. In this window you can see the content of the message, the name of the user who entered it and the name of the program during which the message was written.

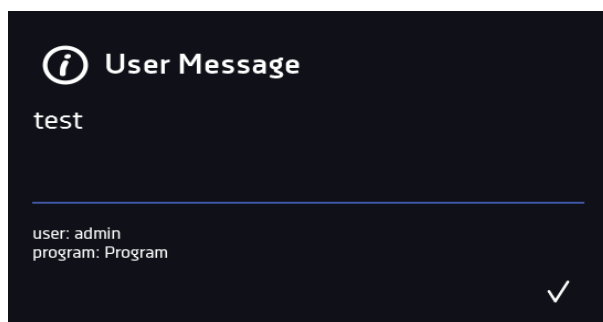Figure 65 Details of user's message





6.14. Info


Go to the main menu  and press the icon . The panel contains the following information:

- name of unit,
- temperature range of the unit,
- humidity range of the unit,
- serial number of the unit,
- Software version,
- manufacturer's address,
- manufacturer's website,
- QR code

Figure 66 Info window (example)




Press icon  to save the "Download" folder (with instruction manual) on the USB flash drive. After inserting the flash drive into USB port wait few seconds until the information "Flashdrive connected" will appear on the display - for more information go to the [Section 6.1](#). Press the icon  to write the service data on the USB flash drive – contact the service for more information.

Press  to go to the main screen. If a USB flash drive is connected to the unit, when entering the "Info" panel, a proposal to save configuration file will appear. This file is used to create an offline program in the Lab Desk application.



Before removing the USB flash drive from the USB port, it must be unmounted, see [Section 5.4](#).

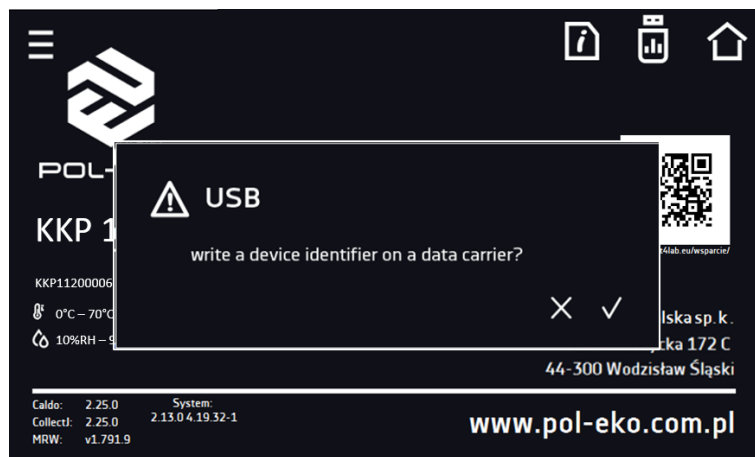Figure 67 Saving configuration file



6.15. Users



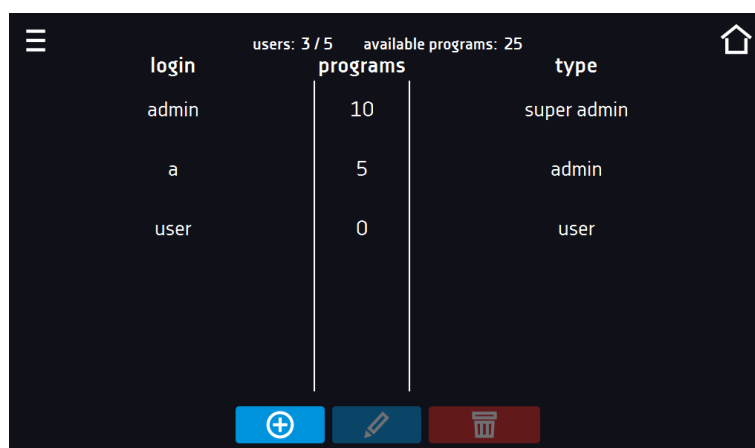
Go to the main menu  and press the icon . In this panel you can add a new user, edit an existing one or delete it.

Figure 68 Users list



Adding a new user



Editing selected user



Deleting selected user - his programs and data register will be deleted with the user.

At the top of the screen you can see information about:

- **users:** number of created users / total number of users to create (users 2/5),
- **available programs:** the number of free programs to be assigned to users.


6.15.1. Creating / editing a user

To add or change user settings, press the button  or , a panel with user data will be displayed.

You have to enter:

- **login** – user name,
- **password** – account password,
- **password confirmation** – you must enter the password again to confirm it,
- **type** – account type (Super Admin , Admin, User), for more information see [Section 6.15.2.](#)
- **programs limit** – number of programs that can be created by the user / number of available programs (it's not possible to set a limit to the User).
- **Smart Lock** - selection of login using a pattern (additional option).

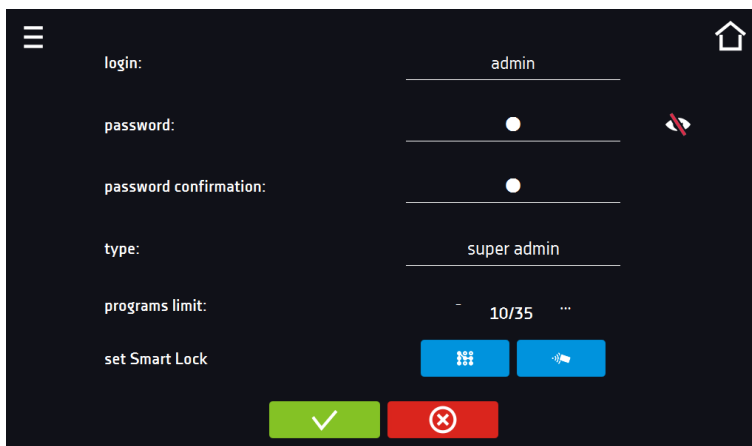Figure 69 Editing a user




User pattern for logging in, adding, changing and deleting a pattern



Confirm and save the user.



Cancel the changes made and return to the user list.



The device can have maximum 5 users. There are 40 programs available which can be freely distributed among users.

To log in, the User can choose a login in text form or a template. To enable the user to log in using a pattern, press in


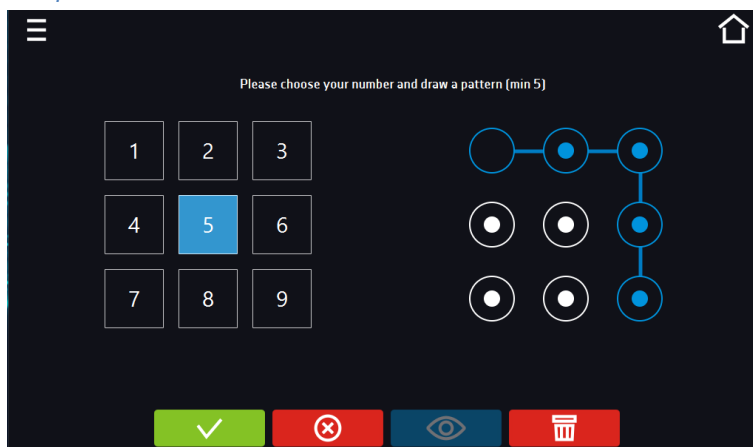
the Edit User window . The pattern login window will appear.

Figure 69. Login using a template



Confirm and save the user.



Cancel the changes made and return to the user list.



Pattern preview.



Delete the pattern.

Adding or changing a pattern - select any free number and draw a pattern consisting of at least 5 points. Numbers that have previously been used by other users are unavailable.

A pattern can be assigned to a maximum of 9 users.

6.15.2. Account types and their limits

Three different types of users (accounts) are available: Super Admin, Admin, User. Each user has their rights and limitations described below in the [table 1](#).

Table 1. Right and limitations of the users.


	Super Admin	Admin	User
Creating programs	✓	✓	X
Editing programs	✓	✓	X
Stopping your own program	✓	✓	✓
Stopping a program of another user	✓	X	X
Quick program	✓	✓	X
Quick change of set time	✓	✓	X
Quick change of set temperature	✓	✓	X
Assigning a program to a user of the user type	✓	✓	X
Creating a schedule	✓	✓	X
Editing a schedule	✓	✓	X
Defrost control	✓	X	X
Management of the illumination shelves in the unit (FIT version)	✓	X	X
Setting temperature measurement parameters	✓	X	X
Temperature value correction	✓	X	X
Setting the alarms	✓	X	X
Temporarily silencing the alarms	✓	✓	✓

Enabling / disabling the sound	✓	X	X
Saving a Quick Note	✓	✓	✓
Creating users accounts	✓	X	X
Changing user's settings	✓	X	X
Changing equipment's name	✓	X	X
Setting a time zone	✓	X	X
Changing the language	✓	X	X
Setting the automatic logout time	✓	X	X
System information preview	✓	✓	✓
Statistics preview	✓	✓	✓
WiFi settings	✓	X	X
LAN settings	✓	X	X
Setting e-mail reports	✓	X	X
Access to the archive	✓	X	X
Events preview	✓	✓	✓
Deleting events	✓	X	X
Copying data to a pendrive	✓	✓	X
Data preview	✓	✓	✓
Copying data to a pendrive	✓	✓	✓
Displaying data as a graph	✓	✓	✓
Deleting your own data	✓	✓	✓
Deleting all data	✓	X	X
Resetting the open door counter	✓	X	X

Super Admin account

The Super Admin account has no limits. Has access to the program management menu and to the settings menu, go to the [table 1](#).

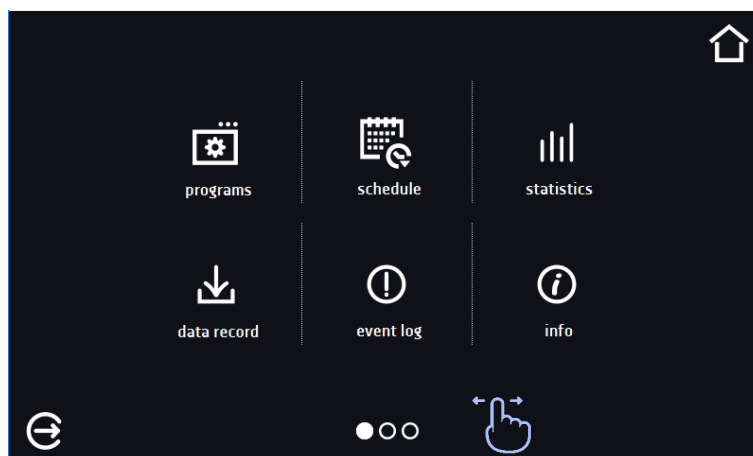Figure 70 Menu available for Super Admin



Information about the currently displayed window indicates .

Admin account


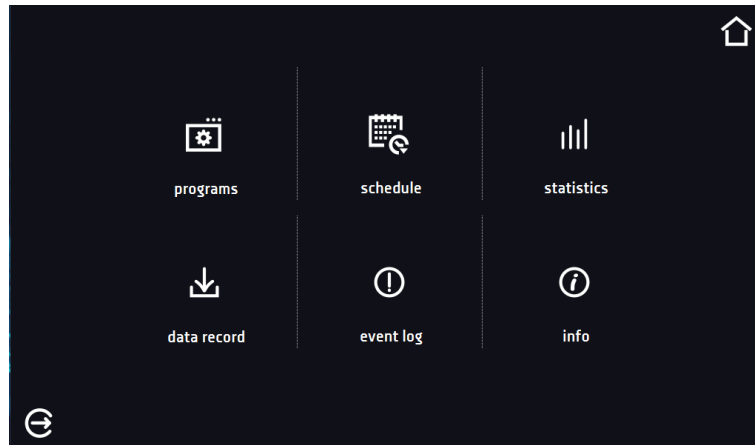

Has access to **programs menu**  and has rights and limitations in accordance with [table 1](#).

Figure 71 Menu available for Admin

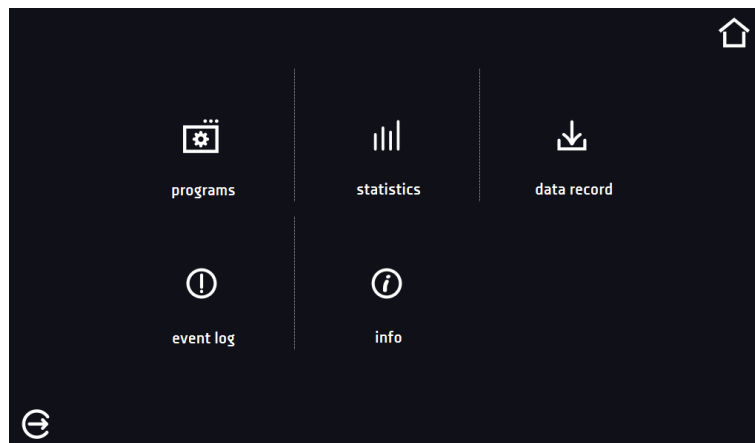


User account:



- has access to **programs menu** , where User can start **programs** previously assigned to him, check their statistics (**statistics**, **data register**), check events history of the equipment (**event log**) and the information about the system (**info**),
- can't create his own programs and schedules but start those which has been assigned to him by Super Admin,
- can't stop or edit a program or schedule which wasn't started by him,
- doesn't have access to create or edit schedules,
- the program started by the User can be stopped by a user with Super Admin privileges.












Other rights and limitations of the User type account are shown in [table 1](#).

 Figure 72 Menu available for User



6.16. User settings panel


Go to the main menu  and press the icon . In this panel you can:

-  Change the name of the equipment – by default, the unit serial number is entered.
-  English  Change the language in the equipment's menu.
-  Set the time after which the screen will be dimmed.
-   Turn on/off the sound . Critical alarms will continue emitting a sound.
-  Set the time after which the user will be automatically logged out. Available settings: off, 1 min, 3 min, 5 min, 10 min. Factory setting: enabled.
-  Set the time after which the user will return to the home screen. Available settings: off, 1 min, 3 min, 5 min, 10 min.
-  Set the automatic screen lock. Available settings: off, 5 min, 15 min, 30 min, 60 min. Factory setting: disabled.
-   Enable / disable data register on a USB flash drive (connected to the USB port on the front of the unit).



Only one feature can be enabled at the same time: automatic logout or automatic screen lock.

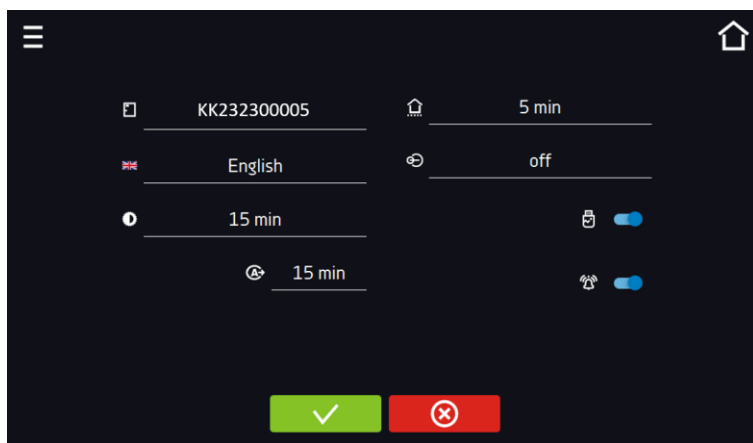Figure 73 User settings panel



Confirms changes





Cancels the entered changes



6.16.1. Unlocking the touch screen


When the automatic touch screen lock is enabled ([Section 6.16](#)), slide the blue circle into the white circle to unlock the screen.

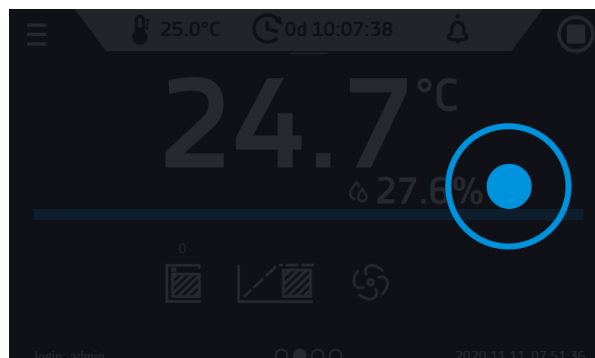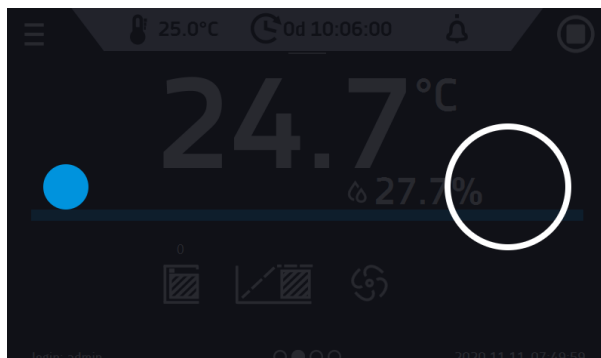Figure 74 Unlocking the touch screen




6.17. Time

Go to the main menu  and press the icon . In this panel you can change the date and system time and time zone.



The time and time zone must be set correctly during the first start-up.

Change of the date / system time



If the date / system time is changed to the later date / time comparing with the data and events which are stored in the memory, they will remain in the register. If the date / system time is changed to the earlier date than the date / time which is stored in the memory, they will be transferred to the archive

After changing the date/system time the unit will be restarted.


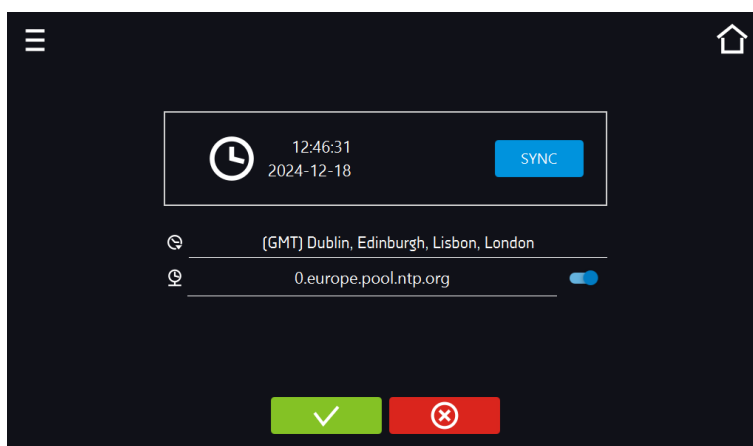
To change the date / system time it is necessary to press  in the window. The window will appear and you will be able to make changes.


Figure 75 Time change



If the unit is permanently connected to the internet, the time will be synchronized with the time server.

Time synchronization is performed:

- manually using the button **SYNC**
- while enabling the automatic synchronization option and then every 12 hours (🕒)
- after starting the unit, then every 12 hours




If the time in the equipment was set incorrectly or it became out of sync with the period of use (which is natural), then if:

- automatic synchronization is turned on and the unit is not connected to the internet but will be able to access the internet
- automatic synchronization is turned off and will be turned on, in addition, the unit is connected to the internet

the time will be synchronized with the NTP time server.

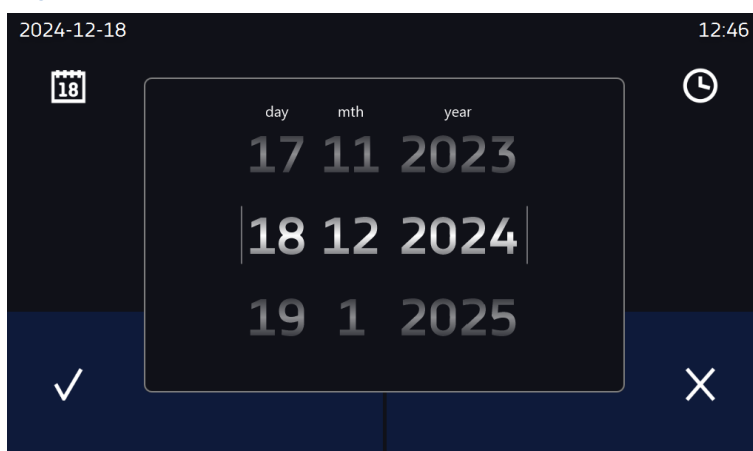Figure 76 Date / time change



Confirms changes and restarts the unit



Cancels the entered changes

Change of time zone

The change of time zone will not affect the date / time in data and events previously saved.


To change time zone, you have to press the button 🕒 in the window. Select the time zone from the drop-down list. After changing only the time zone, the unit is not restarted.



Confirms changes



Cancels the entered changes




The same time zones on the unit and computer are required for correct operation of the programs.

6.18. Alarms

6.18.1. Alarms when set parameters are exceeded

Press the main menu icon , and then press . Here you can set parameters related to alarms:

- **low alarm** – an alarm will be generated if the temperature drops below the set value by the value specified in this field,
- **high alarm** – an alarm will be generated if the temperature increases above the set value by the value specified in this field,
- **lower humidity alarm.** – an alarm will be generated if the humidity drops below the set value by the value specified in this field,
- **high humidity alarm.** – an alarm will be generated if the humidity increases above the set value by the value specified in this field.

 Temperature:
In the "lower alarm" field you can enter a value from the range of -0.5°C to -5°C, and in the "upper alarm" field from the range of 0.5°C to 5°C.


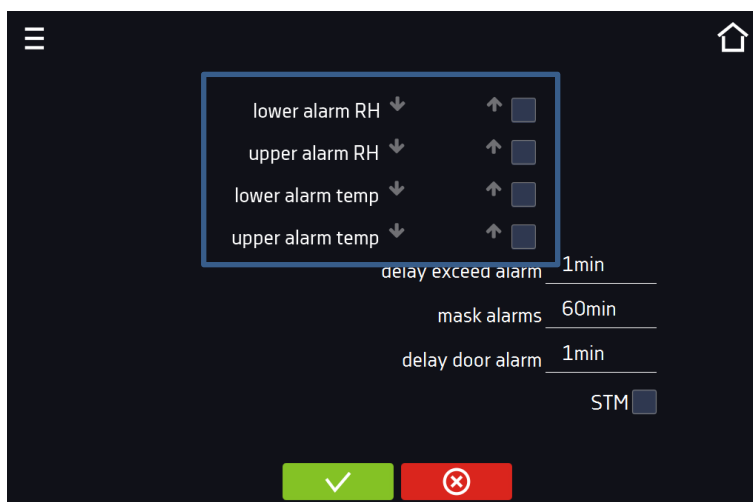
 Humidity:
In the "lower alarm" field you can enter a value from the range of -5% to -30%, and in the "upper alarm" field from the range of 5% to 30%.

Figure.77. Parameter exceedance alarms



The high and low alarms can only be generated when the set temperature/humidity is reached.

- **temperature and humidity alarm delay:**
the alarm will be activated with a delay (1 min, 2 min, 5 min, 10 min, 15 min) after exceeding the set temperature/humidity.

6.18.1.1. Masking of parameter exceedance alarms.

Masking of alarms when the set parameters are exceeded can be used when new samples are added to the chamber or samples are added to those already incubated. During these activities, the set parameters, i.e. temperature and/or humidity, may be exceeded and alarms may be activated - parameter exceedance alarms are set assuming that stable conditions prevail in the chamber (temperature and humidity) and the door is closed. After opening the door and placing the samples in the chamber, time is needed for the parameters to stabilize - the alarm masking function allows you to delay alarms when the parameters are exceeded.

The parameter exceedance alarm will be triggered with a delay (15 min, 30 min, 45 min, 60 min, 120 min, 150 min, 180 min) after inserting new samples. The time is counted from the last time the door was opened. Setting 0 s means masking is disabled.



If the door is opened during the parameter exceedance alarm, the ongoing alarm will not be "masked". Only the next alarm can be masked.

Figure.78. Alarm masking


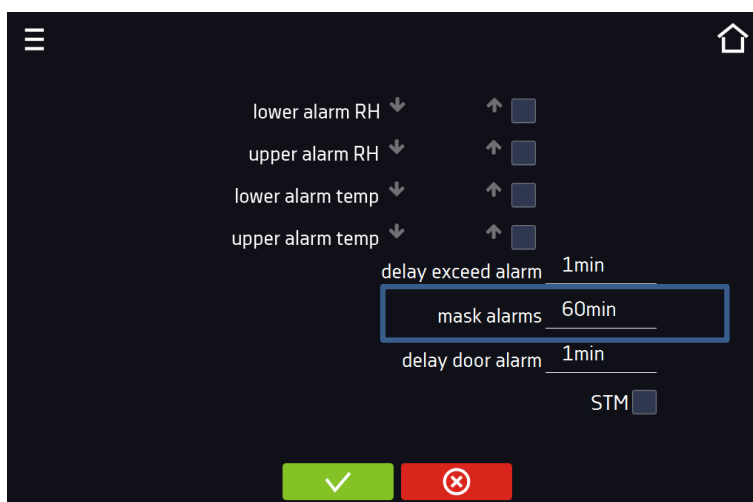


Figure.79. Alarm masking enabled

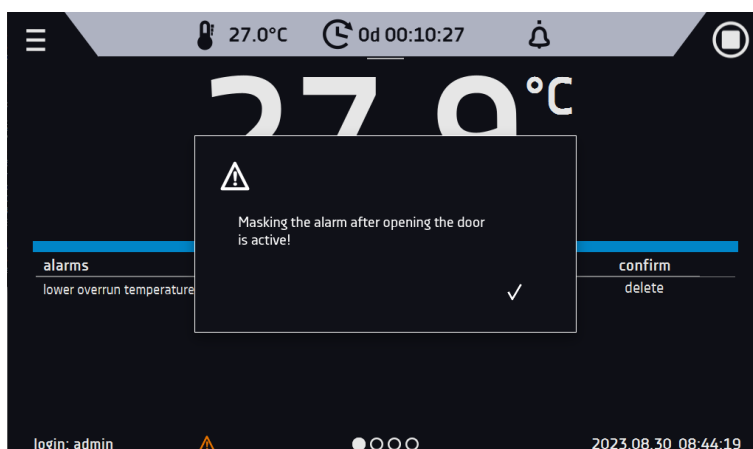


6.18.2. Open door alarm

All devices are equipped with an open door sensor. If the door is left open longer than the time set by the user, an acoustic signal, a red flashing alarm bar and the "door open" alarm with the status "active" will appear.

- door open alarm delay:**
 The door alarm will sound when the door is open for the user-selected time (30 sec, 1 min, 2 min, 5 min, 10 min).

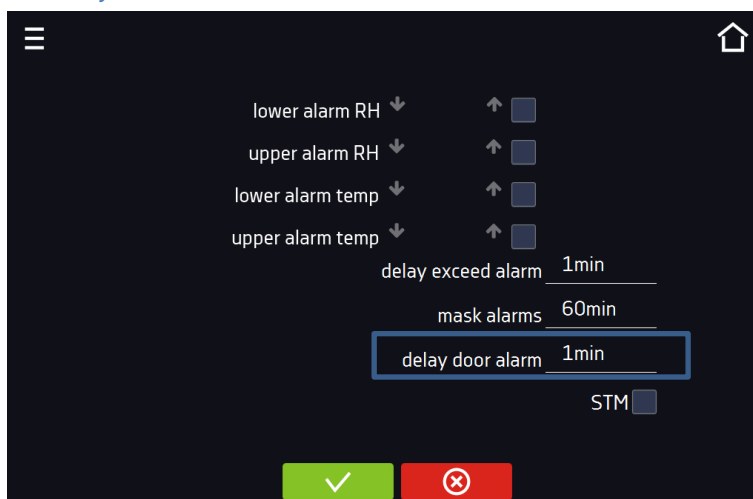Figure.80. Open door alarm delay



Confirm the changes.




Cancels the entered changes.

6.18.3. STM function

The STM (Smart Temperature Monitor) function informs the user if there is a problem in reaching or maintaining the set temperature. The user can enable/disable the function. If the STM function is enabled, the STM symbol will appear on the screen next to the temperature of the main sensor.

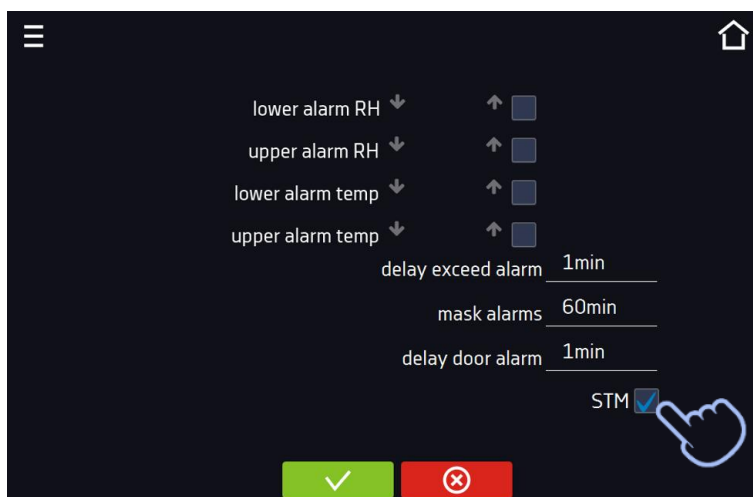Figure. 81. Enable/disable STM function



Confirm the changes.



Cancels the entered changes.

The function status is indicated by color:

- no inscription – option disabled,
- white color – option enabled, program is stopped,
- blue color – option enabled (temperature monitoring), program running,
- red color – option enabled, warning about problems with achieving/maintaining temperature.

Figure. 82. STM Function - option enabled, program is stopped

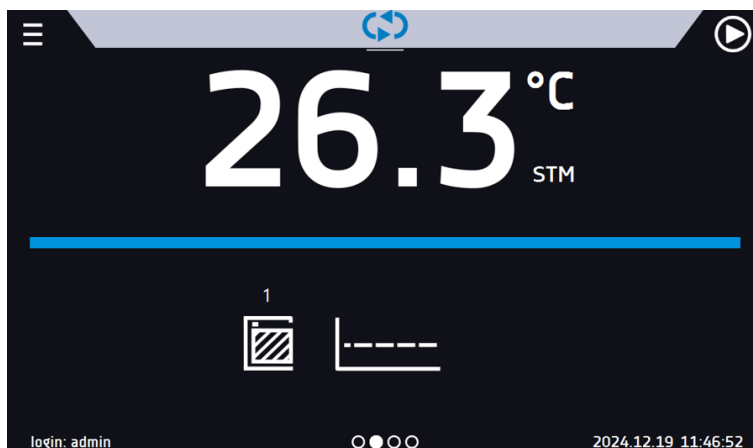


Figure. 83. STM Function - option enabled, program running



Figure. 84. STM Function - option enabled, warning about problems with achieving/maintaining temperature



Possible causes of operation::

1. damaged heater,
2. the cartridge inserted into the chamber absorbs / releases too much energy.


If the color was red before opening the door, then the color changes to blue after opening the door.

If the function is activated (detection of problems with achieving/maintaining temperature):

- the warning 4.00.0.1.009... appears in the event log.
- the color of the STM inscription changes to red and remains red throughout the disruption, segment change, and program shutdown.

- when the state changes from red to blue, an entry about the end of function 4.00.0.1.010 appears in the event log

6.18.4. Mute option

The icon  in the main screen in the upper menu allows temporary switching off of the alarms sound (open door alarm, exceeding temperature range), e.g. to avoid door alarm during planned loading of the samples into the chamber.


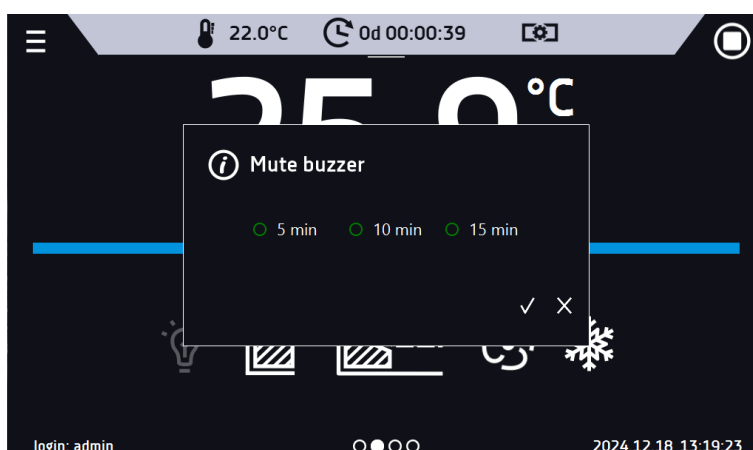




To set the mute time, press the icon  and choose: 5, 10 or 15 minutes, however, the sounds of critical alarms (e.g. damage to the temperature sensor, over- and under-temperature protection) will be still emitted.

Figure 85 Setting the time of mute function




6.19. Network

Go to the main menu  and press the icon . In this panel you can change the settings for LAN or WiFi. Switch between LAN / WiFi network by pressing  or .

LAN settings:

- **IP** – the unit IP address
- **Mask** – an Ethernet network mask to which the unit is connected
- **Gate** – Server's IP address or router's that manages the Ethernet network
- **DNS** – IP address of the domain name system
- **MAC** – the address of the network card, read-only
- **DHCP** – you can select if the server that allocates IP addresses is running on the local network. You can then skip setting IP, Masks, Gates

Icon  indicates the connection status:




Unit connected to the network



Unit disconnected from the network

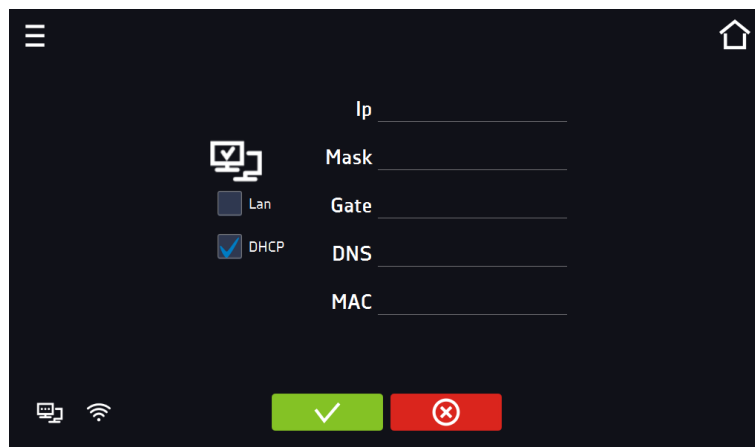Figure 86. LAN settings



Confirms changes



Cancels the entered changes

WiFi settings:


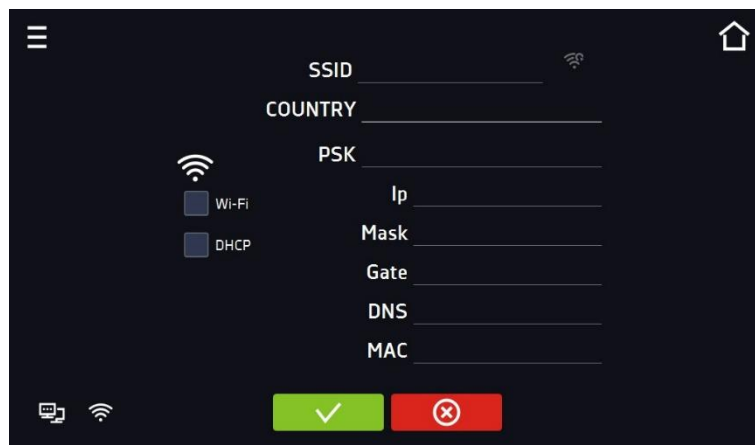
-  – press to refresh network list,
- **SSID** – press to select network from the drop-down list,
- **COUNTRY** - select a country
- **PSK** – network password,
- **IP, Mask, Gate, DNS** – after a successful connection to the network these fields are automatically completed,
- **MAC** – physical address of the network card, read-only.

Figure 87 WiFi settings





Confirms changes



Cancels the entered changes

6.20. E-mail reports

Go to the main menu  and press the icon . In this window you can set the parameters needed to activate e-mail notifications.


In the panel there are three windows:



Selection of event types for which notifications should be sent.

- **Activate** – turning on/off e-mail notifications,
- **Doors alerts** – alarms triggered by an open door,
- **Critical alerts** – critical alarms (e.g. sensor damage),
- **Temperature alerts** – alarms caused by too high or too low temperature,
- **Humidity alerts** – alarms caused by too high or too low humidity,
- **Programs events** – program-related events (e.g. adding, editing, deleting a program),
- **Users events** – events related to editing user settings (e.g. adding, editing, deleting users).

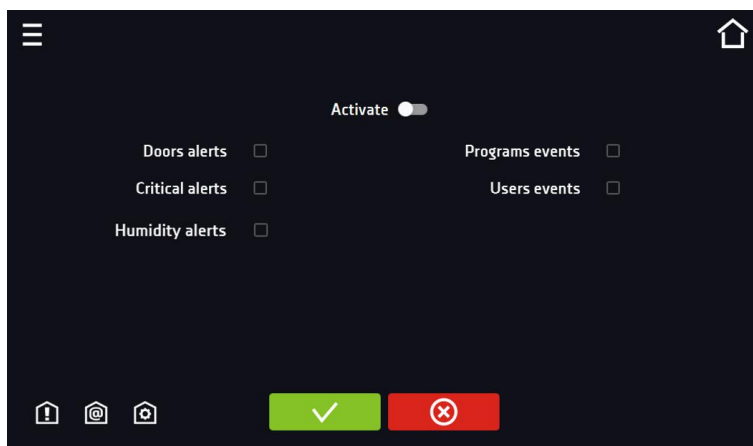Figure 88 E-mail: events



Confirms changes



Cancels the entered changes



If the "activate" option at the top of the panel is not enabled, emails will not be sent!



Sender and recipients

- **Sender** – sender's e-mail address
- **Recipients** – recipients e-mail addresses, maximum 3

Figure 89 E-mail: Sender – Recipients



Confirms changes



Cancels the entered changes



Configuration of the sender's e-mail account

In this window, enter your e-mail account details:

- SMTP server user ID
- SMTP server password
- SMTP server host
- SMTP server port

You can also choose the **TLS** or **SSL** encryption method (get more information from your email account provider).

Figure 90 E-mail: email account configuration



Connection test



Confirms changes



Cancels introduced changes



Before testing the connection, make sure that the unit is connected to the network and has a properly configured network connection, see [Section 6.19](#).

6.21. Corrections

Go to the main menu and press the icon . In this window you can correct:

- temperature value indicated on the display by adding the correction value. The set correction value applies to the whole temperature range of the unit. For example, if the average temperature displayed by the unit indicates 20,0°C and the average temperature measured by independent, external sensor indicates 20,5°C, the correction should be set on +0,5°C. The average temperature should be calculated from chosen period of time e.g. 30 min. The correction available range is between -5°C to +5°C.
- humidity value indicated on the display by adding the correction value. The set correction value applies to 3 humidity ranges, between ranges the correction is calculated linearly.



The unit has been calibrated by the manufacturer in accordance with applicable norms. The temperature shown on the display corresponds with a great accuracy to the temperature near chamber's sensor. For the correct operation of the unit it is not necessary to use User's calibration. The User is performing temperature correction **on his own responsibility** and must be aware of consequences of changing manufacturer's settings. If the equipment was calibrated, calibration certificate **loses its validity**.

Figure 91 User's correction



Confirms changes



Cancels the entered changes

7. INTERFACE

7.1. MODBUS TCP

The unit allows status monitoring using the MODBUS TCP communication interface.

Connection parameters:

- IP address: same as unit's (set in the panel [Section 6.19](#))
- port: 502


register INPUT REGISTERS function READ_INPUT_REGISTERS (0x04)				
Modbus adres	Offset	Type	Multiplier	Description
30000	0	int	10	temperature from the main sensor
30001	1	int	10	temperature from the additional sensor (option)
30002	2	int	10	humidity (option)
30003	3	bool	-	open door
30004	4	bit	-	b0 – door alarm b1 – upper temperature alarm b2 – lower temperature alarm b3 – over Protection b4 - under Protection b5 – main sensor error b6 – additional sensor error b7 – protection sensor error b8 – temperature sensors error b9 – humidity sensor error b10 – hardware error b11 – MRW error

8. TEMPERATURE PROTECTION

The unit is factory fitted with sample protection - temperature protection. If any of the elements responsible for maintaining the set temperature is damaged or the user sets the temperature unconsciously, the set protection will work.

8.1. Temperature protection class

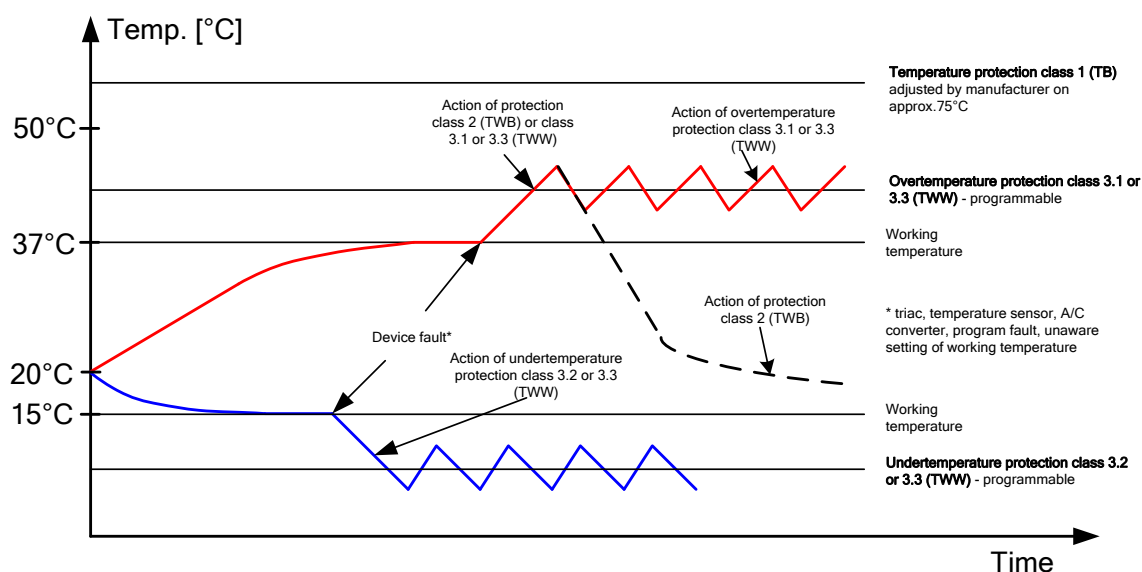Standard equipment in the climatic chambers is a protection class 3.3 according to DIN 12880. The user programs the temperature value of the lower / upper protection. When the set temperature is exceeded, the cooling or heating system power will be turned off. When the temperature returns to the allowed range, the unit will resume operation. The figure below shows how this works.



9. CONNECTING THE UNIT TO A COMPUTER

Each unit in the SMART PRO version can be connected to an Ethernet network or directly to a computer with a LAN cable (standard equipment). Using the Lab Desk program (standard equipment), you can program and monitor the operation of multiple units with the SMART PRO controller. The features of the software have been described in a separate instruction manual.

10. OPERATION OF THE COOLING SYSTEM

The climatic chambers KKP have a cooling system based on Peltier cell technology. The cooling system consists of Peltier modules that act as a heat pump which transports heat / cold in a direction dependent on the direction of current flow. The chamber's cooling system is constructed of Peltier modules, fans and heat sinks. Unlike systems with refrigeration units, it is characterized by long trouble-free operation, no moving parts, the possibility of reverse operation (quick and easy transition from cooling to heating mode and vice versa), quiet operation and lack of environmentally harmful and flammable refrigerants.

11. CLEANING AND MAINTENANCE OF THE UNIT



Disconnect the unit from the power supply before carrying out any activities related to the cleaning! In the case of the battery back-up of the controller, also turn it off.

On the internal walls of the unit (in particular the new one) made of stainless steel, discoloration (spots) may appear - which are not caused by factory defects, but only by the steel production process. They can be cleaned using extraction gasoline.


INOX products are manufactured with stainless steel. When used in standard laboratory conditions they do not rust. However it is possible that stains (which may look like rust) form on the steel surface (e.g. due to the kind of samples that are incubated in the chamber). In such case we recommend using cleaning solution (to clean the stains) which is dedicated to this particular application, e.g. Pelox.



When cleaning stainless steel product with dedicated cleaning solution, one should pay attention to the suggestions and recommendations given in the instruction manual or in the safety data sheet of the cleaning solution.

11.1. Cleaning the housing, condensate tray and pump

1.	The housing of the unit should be cleaned at least once a week, depending on the working conditions.
2.	The housing and door should be cleaned with caution using a soft cloth dampened with water.
3.	Only mild cleaning products should be used to clean the unit.
4.	Electrical parts should not get in contact with water or detergent.
5.	Clean the touch screen using a soft cloth or a foam for cleaning touch screens.
6.	USB port can be cleaned with a vacuum cleaner to prevent accumulation of dirt inside the port.
7.	<p>The condensate tray (located under the unit) should be cleaned</p> <p>A heater (mounted in the tray) heats up the condensate, already distracted from the chamber, so that it evaporates. The heater is turned on at midnight for 2 hours.</p> <div data-bbox="229 1288 317 1373" data-label="Image"> </div> <p>Warning! Do not clean the tray earlier than one hour after turning off the tray heating program. There is a risk of burns.</p> <p>To clean the tray once a month:</p> <ol style="list-style-type: none"> 1. remove the knurled screws to unlock the tray 2. slide the tray out of the guides 3. clean the tray with a sponge and clean water 4. slide the tray into the guides and secure it with the knurled screws.

6.	<p>At least one a month clean the radiator and external fans with a vacuum cleaner. The radiator and external fans are located at the back of KKP incubator.</p> 
----	---


11.2. Interior cleaning

The interior of the climatic chambers is made of stainless steel 0H18 acc. with DIN 1.4301. Stainless steel 0H18 also corrodes, but much less and slower than other types of steel. To slow down the corrosion process as much as possible, this type of steel requires regular maintenance and cleaning. Avoid aggressive cleaning agents and preparations based on chlorine and bleach, do not allow stainless steel to come into contact with non-alloy steel, unless you are dealing with ground steel, and avoid materials that may scratch the surface.

1.	Before cleaning the interior of the unit, empty the chamber.
2.	Open the door of the unit, if necessary wait till the chamber has cooled down, take out the shelves and start cleaning of the unit
3.	To clean the device, use a lint-free, lint-free, soft cloth and water or water with a mild detergent.
4.	In the case of ground steel, movements should be made in the direction of grinding on the surface.
5.	<p>If rust occurs, use:</p> <ul style="list-style-type: none"> - slight discoloration - household products for cleaning stainless steel with calcium carbonate or citric acid, - medium discoloration - 10% phosphoric acid solution; after cleaning, neutralize the acid with diluted ammonia or a mild alkaline detergent, - severe rust - use products for pickling and passivation of steel - for example Pelox FR-D <p>After each cleaning, wipe the surface thoroughly with clean water.</p>
6.	After cleaning, dry all surfaces thoroughly and reinstall the previously dismantled parts.
7.	When washing, pay special attention to the sensors built in the chamber so as not to damage them.

11.3. Cleaning the touch screen

The touch screen is exposed to dirt, so it must be cleaned regularly. To clean the touch screen, use a clean and dry microfiber cloth. It is a very delicate material and collects dirt well.

	<p>Before using the cloth, make sure that on the surface there are no crumbs or particles. During cleaning, they can act like sandpaper and scratch the surface of the screen.</p>
---	--

If the stains cannot be removed by dry cleaning, the cloth can be lightly dampened with water.



Do not use paper towels to clean the screen as it may cause microdamages.


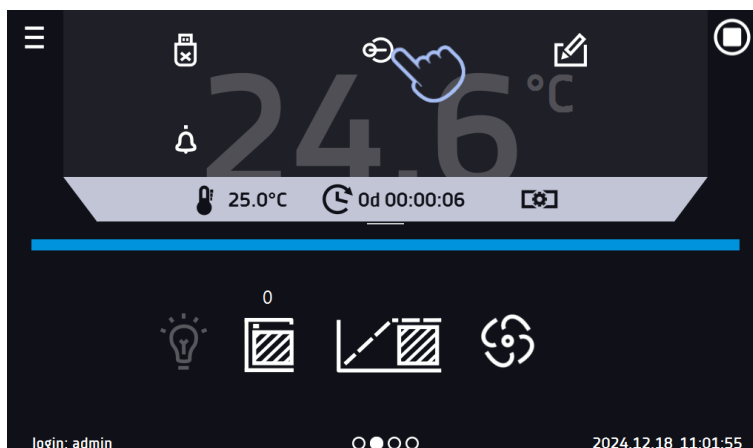
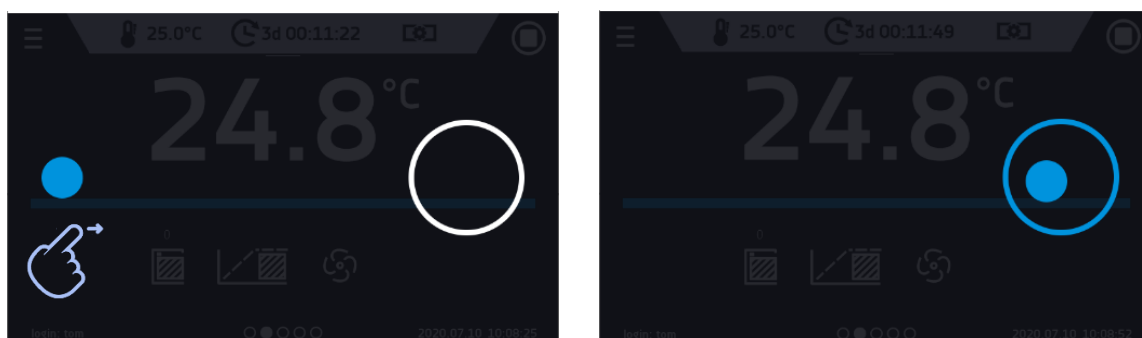
Before cleaning, lock the screen by pressing  on the top drop-down list.

Figure 92 Locking the screen



The screen is ready to be cleaned. To unlock the touch screen, slide the blue circle into the white circle.

Figure 93 Unlocking the screen



12. ADVICE ON HOW TO SAFELY STORE THE UNIT

1.	Remove all objects from the chamber.
2.	Disconnect the unit from the mains. If the unit is equipped with battery back-up of the controller (optional), also turn it off.
3.	Clean and dry the chamber.
4.	Leave the door open to avoid unpleasant odors.
5.	Turn off the water supply.
6.	Store in temperatures between 0°C and 50°C and relative humidity maximum 70%.

13. TROUBLESHOOTING

Before you contact Service Department:

1. make sure that the operation complies with the instruction manual of the unit.
2. restart the unit to make sure that the unit is not functioning properly. If it still does not work, disconnect the unit again from the mains and repeat the operation after one hour. Do the same with optional battery back-up of the controller.

Service

Visit the POL-EKO® sp.k. website at: www.pol-eko.com.pl in order to:

- get full contact details of technical service
- access to POL-EKO® online catalogue, and information about accessories and related products
- receive additional product information and special offers

To receive information or technical assistance, contact the Service Department or visit the website: www.pol-eko.com.pl

13.1. Possible defects

Malfunction	What to check?	What to do?
The unit is not working	Check if the unit is plugged in correctly	Plug in the unit correctly
	Check if the circuit-breaker has tripped	Press the circuit breaker on the back of the unit
	Check the voltage in the socket	Connect the unit to a different socket, preferably from a different electrical circuit. Call a licensed electrician to check the electrical installation.
	Check if the power cable is broken	Change the cable
The unit is not cooling down	Check if the unit is exposed to direct sunlight	Change the location of the unit
	Check if there is a heat emitter near the unit	Change the location of the unit
	Check if the door is closed properly	Clean the gasket
	Check if the place of installation meets the installation conditions	Prepare the installation place for the required installation conditions
The unit is not heating up	Check if the door of the unit is closed properly	Clean the gasket
	Check if the fan is working	Contact with service
	Check if the ambient temperature is within the permissible values given in the technical data table?	Adjust the ambient temperature to the value given in this manual
The humidifier does not generate steam	Check if the program have humidity control enabled	Enable the humidity control
	Check if the water supply is open	Open the water supply
	Check if there's a water in the tank located at the back of the unit (if there is no connection to the water supply)	Fill up the water in the tank
The unit is working too loud	Check if the unit is not touching other objects or furniture etc.	Remove other objects
	Check if the door is properly leveled	Level the unit
The door has dropped or is skewed	Check if the door is properly leveled	Level the unit. If this does not help, contact the service.

14. WARRANTY CONDITIONS

POL-EKO® sp.k. warrants that this product will be free from defects in material and workmanship for a period of two (2) years from date of the invoice. If a defect is present, POL-EKO® sp.k. will, at its option and cost, repair, replace, or refund the purchase price of this product to the customer, provided it is returned during the warranty period. This warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication, or from ordinary wear and tear. If the required maintenance and inspection services are not performed according to the manuals and any local regulations, such warranty turns invalid.

The unit that is being returned must be secured by the customer in the event of any damage or loss. The warranty will be only limited to the situations listed above. IT IS EXPRESSLY AGREED THAT THIS WARRANTY WILL BE IN LIEU OF ALL WARRANTIES OF FITNESS AND IN LIEU OF THE WARRANTY OF MERCHANTABILITY.

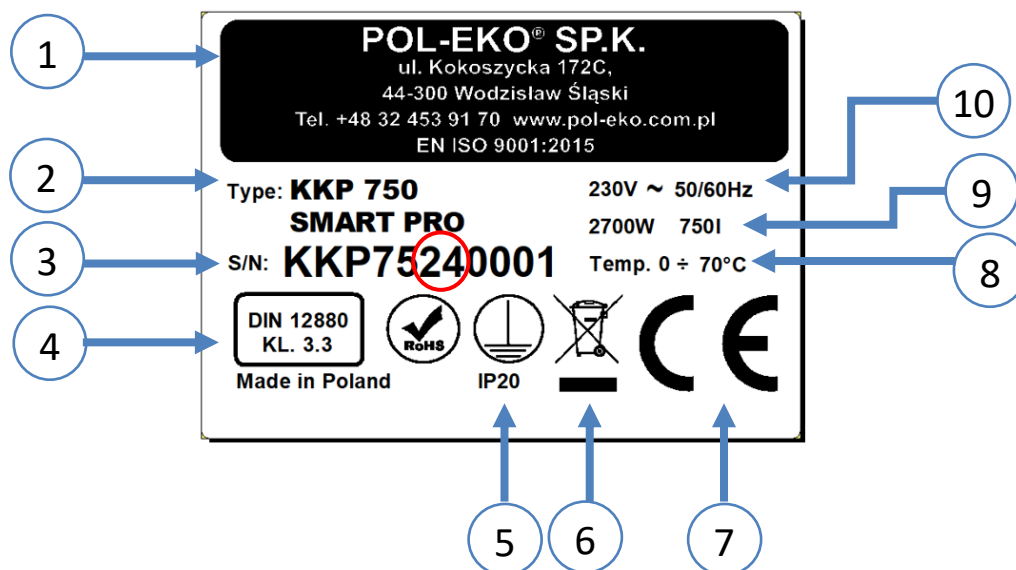
All complaints should be reported using the form available on the website <http://www.pol-eko.com.pl/en/service>

Compliance with local laws and regulations

The user is responsible for obtaining any approvals or authorizations required to launch and use the product. POL-EKO® sp.k. shall not be liable for any negligence in the above matter except when the refusal to obtain authorization is caused by a product defect.

15. RATING PLATE

The rating plate is located on the left side wall in the upper left corner. Below there is an example of a rating plate:




1. Manufacturer's data
2. Type of unit
3. Serial number (the two marked digits indicate the year of manufacture of the unit)
4. Temperature protection class according to DIN 12880
5. Degree of protection against electric shock (class I: protection against indirect contact) and IP enclosure protection rating
6. Disposal of used unit according to WEEE2
7. CE marking as confirmation of compliance with the directives
8. Temperature range of the unit
9. Capacity of unit
10. Acceptable range of voltage and frequency of mains supply

The numbers marked with a red circle indicate the year of manufacture of the device.


16. TECHNICAL DATA

Technical data are given with a tolerance of $\pm 5\%$, the working capacity of the chamber is always smaller. All the below technical data refers to standard units (without optional accessories).

	KKP 240 SMART PRO	KKP 750 SMART PRO
air convection	forced	
chamber capacity [l]	245	749
working capacity [l]	245	749
controller	microprocessor PID	
display	7" full colour touch screen	
TEMPERATURE AND HUMIDITY		
Working temperature range without humidity [°C]	0...+70 (max 20°C below ambient temp.)	
Temperature variation (spatial) at 40°C [±/°C]	±0,3	±0,2
Temperature fluctuation (time) at 40°C [±/°C]	±0,1	±0,1
Working temperature range with humidity [°C]	+5...+70 (max 20°C below ambient temp.)	
temperature resolution every ... [°C]	0,1	
Temperature variation (spatial) at 40°C, 75% RH [°C]	±0,3	±0,2
Temperature fluctuation (time) at 40°C, 75% RH [°C]	±0,1	±0,1
Temperature variation (spatial) at 25°C, 60% RH [°C]	±0,2	±0,2
Temperature fluctuation (time) at 25°C, 60% RH [°C]	±0,1	±0,1
temperature protection	class 3.3 to DIN 12880	
relative humidity range [%]	10...90 (see chart for details)	
humidity resolution every ... [%]	0,1	
Humidity variation (spatial) at 40°C, 75% RH [±/-%RH]	< ±1,0	< ±1,0
Humidity fluctuation (time) at 40°C, 75% RH [±/-%RH]	±0,3	±0,3
Humidity variation (spatial) at 25°C, 60% RH [±/-%RH]	±0,8	±0,8
Humidity fluctuation (time) at 25°C, 60% RH [±/-%RH]	±0,2	±0,4
Recovery time to set values after 30 sec door open at 40°C, 75% RH [min]	10	23

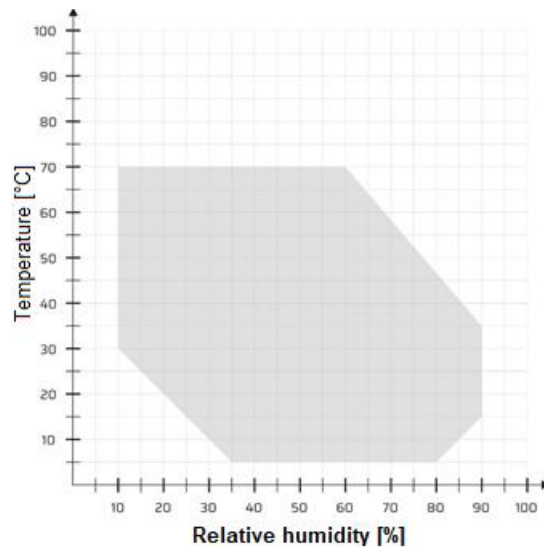

CHAMBER		
door type	1 external solid door, 1 internal glass door	2 external solid door, 2 internal glass door
interior		
Smart PRO	acid-proof stainless steel to DIN 1.4301	
IG Smart PRO	acid-proof stainless steel to DIN 1.4301	
housing		
Smart PRO	powder coated sheet	
IG Smart PRO	stainless steel linen finish	
overall dims [mm] /1/		
width A	960	1400
height B	1140	1580
depth C	840	1040
internal dims [mm]		
width D	600	1040
height E	800	1200
depth F	510	600

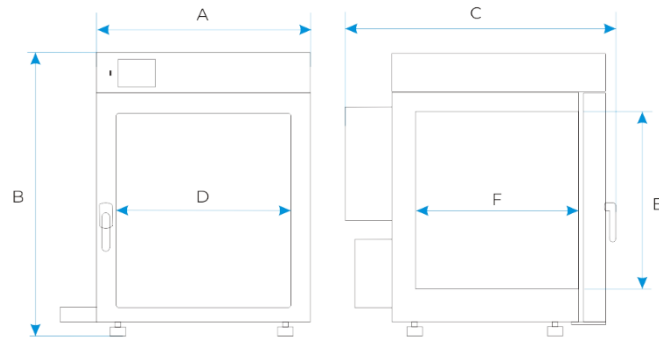

shelves (standard max)	3 10	3 16
max shelf workload [kg] /2/	25	100
max unit workload [kg]	90	140
External water tank capacity [l]	6	6
weight [kg]	117	233
ELECTRICAL PARAMETERS		
voltage**	230V 50-60Hz	
nominal power [W]	2300	2700
warranty	24 months	
manufacturer	POL-EKO® sp.k.	

all the above technical data refer to standard units (without optional accessories)

* - variation (K) calculated for chamber as: $K = \pm (T \text{ average max.} - T \text{ average min.}) / 2$

** - other power supplies on request

1 - width doesn't include shelf for water tank - 140mm

2 - fluctuation measured in centre of the chamber

17. DECLARATION OF CONFORMITY



DEKLARACJA ZGODNOŚCI UE EU DECLARATION OF CONFORMITY



Produkt:	Product:
Komora klimatyczna z modułami Peltiera	Climatic chamber with Peltier modules
Model:	Model:
KKP 240; KKP 750	
w wersjach:	in version:
IG SMART PRO; SMART PRO	
Nazwa i adres producenta:	Name and address of the manufacturer:
POL-EKO® A.Polok-Kowalska sp.k. ul. Kokoszycka 172 C, 44-300 Wodzisław Śląski Polska/Poland	
Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta.	This declaration of conformity is issued under the sole responsibility of the manufacturer.
Wymieniony powyżej przedmiot niniejszej deklaracji jest zgodny z odnośnymi wymaganiami unijnego prawodawstwa harmonizacyjnego:	The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:
RED 2014/53/UE RoHS 2011/65/UE & 2015/863UE WEEE 2012/19/UE	RED 2014/53/EU RoHS 2011/65/EU & 2015/863EU WEEE 2012/19/EU
Odniesienia do odnośnych norm zharmonizowanych, które zastosowano lub do innych specyfikacji technicznych, w stosunku, do których deklarowana jest zgodność:	References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:
RED	ETSI EN 300 328 V2.2.2: 2019 ETSI EN 301 893 V2.1.1: 2017 ETSI EN 301 489-1 V2.2.3: 2019 ETSI EN 301 489-17 V3.1.1: 2017 IEC EN 62368-1: 2018 BS EN 62311: 2008
LVD	PN-EN 61010-1:2011 PN-EN 61010-2-010:2020-10 PN-EN 60529:2003/A2:2014-07
EMC	PN-EN IEC 61326-1:2021-10
RoHS	PN-EN IEC 63000:2019-01

Wodzisław Śl. 10.07.2024

Podpis / Signature:


Dawid Rybarz
Dyrektor Techniczny (CTO)



Manufacturer of control and measurement equipment
for laboratory tests and technological processes,
distributor in Poland of the following companies:
HAMILTON, THERMO SCIENTIFIC, WTW / Xylem.

<p><u>We produce:</u></p> <ul style="list-style-type: none"><input type="checkbox"/> thermostatic cabinets<input type="checkbox"/> laboratory refrigerators<input type="checkbox"/> laboratory incubators<input type="checkbox"/> units with photoperiod and phytotron system<input type="checkbox"/> drying ovens and sterilizers<input type="checkbox"/> drying ovens with nitrogen blow<input type="checkbox"/> laboratory freezers<input type="checkbox"/> ultra-low freezers<input type="checkbox"/> climatic chambers<input type="checkbox"/> Caldera fluid and blanket warmers<input type="checkbox"/> colony counters<input type="checkbox"/> laboratory shakers<input type="checkbox"/> stationary samplers<input type="checkbox"/> Hydromat water dispensers<input type="checkbox"/> Eurodrop stations<input type="checkbox"/> FEKO+ waste water receipt station<input type="checkbox"/> heating ovens<input type="checkbox"/> cooled incubators<input type="checkbox"/> fume hoods <p><u>We organize:</u></p> <ul style="list-style-type: none"><input type="checkbox"/> regional trainings<input type="checkbox"/> individual trainings<input type="checkbox"/> seminars <p><u>We provide:</u></p> <ul style="list-style-type: none"><input type="checkbox"/> warranty and post-warranty service<input type="checkbox"/> consultancy in the selection, maintenance and operation of laboratory equipment	<p><u>We offer portable, laboratory and on-line equipment:</u></p> <ul style="list-style-type: none"><input type="checkbox"/> pH-meters<input type="checkbox"/> ionmeters<input type="checkbox"/> dissolved oxygen meters<input type="checkbox"/> conductivity meters<input type="checkbox"/> photometers and spectrophotometers<input type="checkbox"/> thermo reactors<input type="checkbox"/> turbidity metres<input type="checkbox"/> pH electrodes<input type="checkbox"/> conductivity sensors<input type="checkbox"/> oxygen probes<input type="checkbox"/> heavy metals trace analyzers<input type="checkbox"/> water baths<input type="checkbox"/> autoclaves<input type="checkbox"/> pH buffer solutions<input type="checkbox"/> conductivity standards<input type="checkbox"/> photometric tests<input type="checkbox"/> laboratory accessories<input type="checkbox"/> consumables
<p>POL-EKO LAB is <u>Accredited by the Polish Centre for Accreditation (a member of ILAC)</u> and provides accredited calibration of:</p> <ul style="list-style-type: none"><input type="checkbox"/> thermostatic and climatic chambers (incubators, drying ovens, thermostatic cabinets, climatic chambers, freezers)<input type="checkbox"/> water baths and thermo reactors<input type="checkbox"/> autoclaves<input type="checkbox"/> electric and electronic thermometers<input type="checkbox"/> data loggers<input type="checkbox"/> high temperature laboratory furnaces<input type="checkbox"/> thermohygrometers<input type="checkbox"/> laboratory sieves <p><u>Calibration is confirmed with the issue of 'Calibration Certificate'.</u></p> <p>Services outside the scope of accreditation:</p> <ul style="list-style-type: none"><input type="checkbox"/> checking equipment for physicochemical measurements (meters and probes),<input type="checkbox"/> carrying out IQ, OQ, PQ qualification procedures,<input type="checkbox"/> mapping of temperature and humidity in the rooms	



AP 115

