

Operating Instructions

Biomedical Freezer

MDF-U731M Series



Please read the operating instructions carefully before using this product, and keep the operating instructions for future use.

See page 28 for all model numbers.

CONTENTS

INTRODUCTION	P. 2
PRECAUTIONS FOR SAFE OPERATION	P. 3
ENVIRONMENTAL CONDITIONS	P. 7
FREEZER COMPONENTS	P. 8
Freezer unit	P. 8
Control panel	P. 10
INSTALLATION SITE	P. 11
INSTALLATION	P. 12
START-UP OF UNIT	P. 12
TEMPERATURE SETTING	P. 13
KEY LOCK FUNCTION	P. 13
REMOTE ALARM TERMINAL	P. 14
ALARM TEMPERATURE SETTING	P. 15
ALARM FUNCTIONS	P. 16
SAFETY FUNCTIONS	P. 16
SELF DIAGNOSTIC FUNCTIONS	P. 17
MAINTENANCE	P. 18
Cleaning of cabinet	P. 18
Defrosting	P. 19
TROUBLESHOOTING	P. 20
DISPOSAL OF UNIT	P. 21
Recycle of battery	P. 21
Refrigerant	P. 21
Decontamination of unit	P. 21
REPLACEMENT OF WEAR-OUT PARTS	P. 26
Replacement of battery for power failure alarm	P. 26
TEMPERATURE RECORDER (OPTION)	P. 26
SPECIFICATIONS	P. 27
PERFORMANCE	P. 28
SAFETY CHECK SHEET	P 29

INTRODUCTION

- Read the operating instructions carefully before using the appliance and follow the instructions for safety operation.
- PHC Corporation never guarantees any safety if the appliance is used for any objects other than intended use or used by any procedures other than those mentioned in the operating instructions.
- Keep the operating instructions in an adequate place to refer to it as necessary.
- The contents of the operating instructions will be subjected to change without notice due to the improvement of performance or functions.
- Contact our sales representative or agent if any page of the operating instructions is lost or page order is incorrect.
- Contact our sales representative or agent if any point in the operating instructions is unclear or if there are any inaccuracies.
- No part of this operating instructions may be reproduced in any form without the expressed written permission of PHC Corporation.

IMPORTANT NOTICE

PHC Corporation guarantees this product under certain warranty conditions. However, please note that PHC Corporation shall not be responsible for any loss or damage to the contents of the product.

It is imperative that the user complies with the operating instructions as it contains important safety advice.

Items and procedures are described so that you can use this unit correctly and safely. If the precautions advised are followed, this will prevent possible injury to the user and any other person.

Precautions are illustrated in the following way:



Failure to observe WARNING signs could result in a hazard to personnel possibly resulting in serious injury or death.



Failure to observe CAUTION signs could result in injury to personnel and damage to the unit and associated property.

Symbol shows;

- This symbol means an action is prohibited.
- This symbol means an instruction must be followed.

Be sure to keep the operating instructions in a place accessible to users of this unit.


< Label on the unit >




This mark is labeled on the cover in which the electrical components of high voltage are enclosed to prevent the electric shock.

The cover should be removed by a qualified engineer or service personnel only.

MARNING

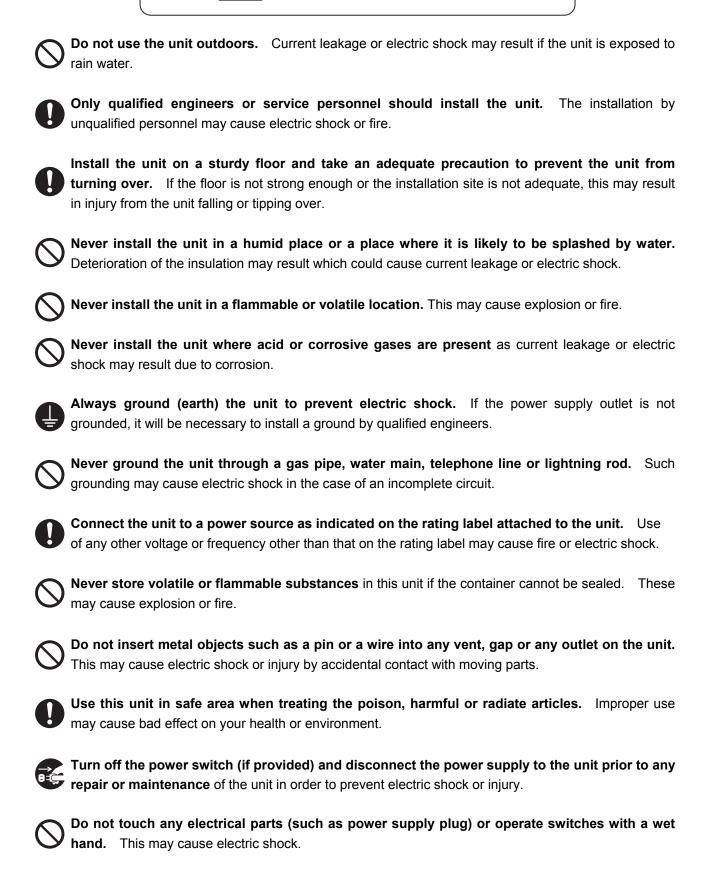

MARNING

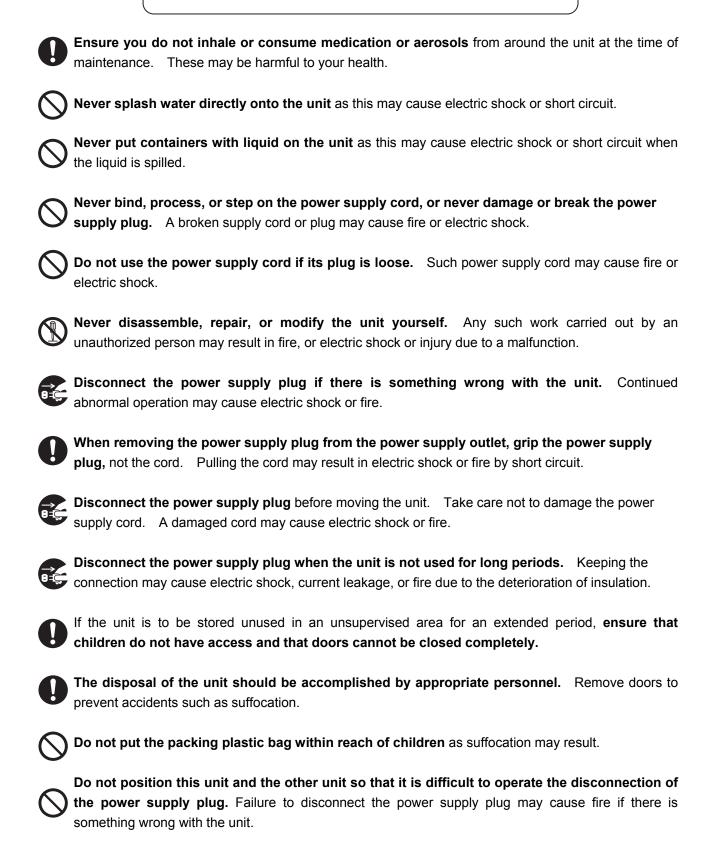

ACAUTION

- This unit must be plugged into a dedicated circuit protected by branch circuit breaker.
- Use a dedicated power source as indicated on the rating label attached to the unit. A multiple-tap may cause fire resulting from abnormal heating.
- Connect the power supply plug to the power source firmly after removing the dust on the plug.

 A dusty plug or improper insertion may cause a heat or ignition.
- Never store corrosive substances such as acid or alkali in this unit if the container cannot be sealed. These may cause corrosion of inner components or electric parts.
- Check the setting when starting up of operation after power failure or turning off of power switch. The stored items may be damaged due to the change of setting.
- Be careful not to tip over the unit during movement to prevent damage or injury.
- Prepare a safety check sheet when you request any repair or maintenance for the safety of service personnel.
- Fix the shelves securely. Incomplete installation may cause injury or damage.


ENVIRONMENTAL CONDITIONS

This equipment is designed to be safe at least under the following conditions (based on the IEC 61010-1):

- Indoor use;
- Altitude up to 2000 m;
- Temperature 5 °C to 40 °C
- Maximum relative humidity 80 % for temperature up to 31 °C decreasing linearly to 50 % relative humidity at 40 °C;
- Mains supply voltage fluctuations up to ±10 % of the nominal voltage;
- Transient overvoltages up to the levels of OVERVOLTAGE CATEGORY II;
- Temporary OVERVOLTAGES occurring on the mains supply;
- Applicable pollution degree of the intended environment (POLLUTION DEGREE 2 in most cases);

FREEZER COMPONENTS

Freezer unit

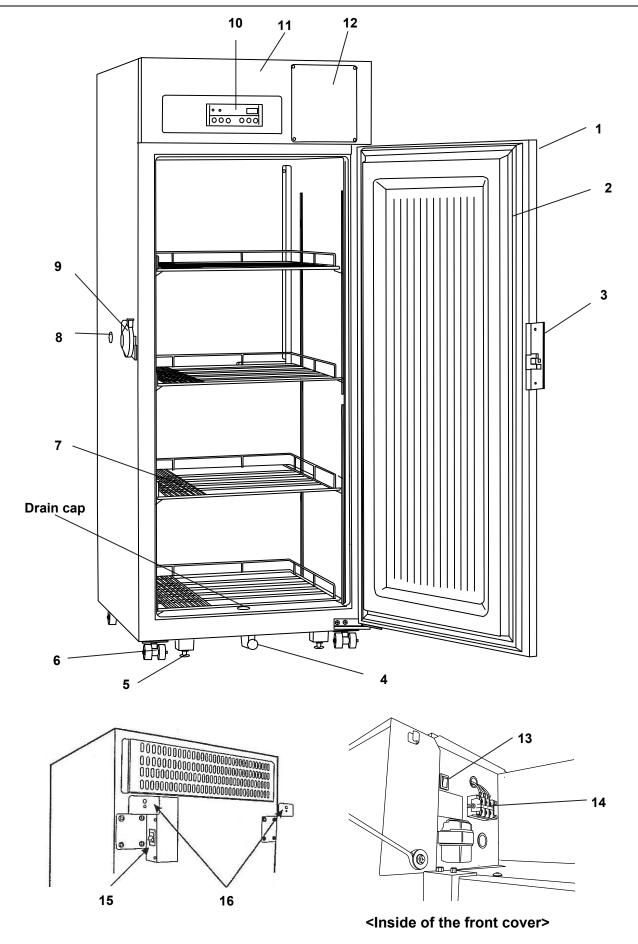

FREEZER COMPONENTS


- **1. Lock:** Turn clockwise to 180 ° with a key and the door is securely locked.
- 2. Magnetic door gasket: This prevents the cold air from escaping. Always keep clean.
- 3. Handle: Always grip this handle to open and close the outer door.
- **4. Drain hose:** The drain hose can be used to collect the defrosted water. See page 19 for usage.
- **5. Leveling foot:** These are screw bolts used to install and fix the unit. Adjust the height of the leveling feet by turning the screw bolts until 2 front casters are away from the floor.
- **6. Caster:** 4 casters are provided to facilitate moving of the cabinet. For the installation, adjust the leveling foot so that the front two casters cannot contact with the floor.
- **7. Shelf:** Items to be stored in the chamber must be placed on the shelves. The maximum storage weight for each shelf is 50 kg.

Note: Fix the shelf stopper and shelves securely. Incomplete installation may cause injury or damage. Never touch the storage items with wet hands. Touching with the wet hands may cause frostbite

- **8. Access port:** This is used for leading the measuring cable from the freezing chamber to the outside. A total of 2 are provided.; left side and top of the freezer.
- **9. Door latch:** The lock the door, turn this latch downward. A padlock is also available.
- **10. Control panel:** The operation status is displayed on this panel. And the temperature setting is available through this panel. Refer to page 10 for details.
- **11. Front cover:** Open this cover when connecting the remote alarm.
- **12. Space for temperature recorder:** Space for a temperature recorder (optional component) is available separately. See page 26 "TEMPERATURE RECORDER (OPTION)".
- **13. Battery switch:** Switch for battery used for power failure alarm. Always keep ON. Turn the switch OFF when the unit is in no use for a long period (more than one month).
- **14. Remote alarm terminal:** Used to notify an alarm condition of the unit to remote location. See page 14 for details.
- **15. Power switch (back side):** This is for turning ON/OFF the power to the unit. ON "I" OFF "O"
- **16. Fixture (back side):** These keep the adequate apace between the unit and wall, and also can be used for fixing the unit.

FREEZER COMPONENTS

Control panel

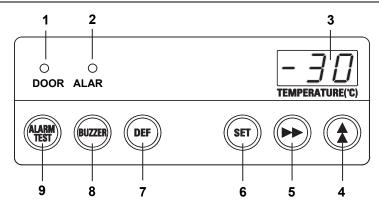

- 1. Door check lamp (DOOR): This lamp is lit when the door is open.
- 2. Alarm lamp (ALARM): This lamp is flashed during alarm condition.
- **3. Temperature display:** This indicator shows the chamber temperature, set temperature, or error code.
- **4. Numerical value shift key (\Lambda**): Pressing this key in the setting mode causes the numerical value to change. ON-OFF of key lock can be selected by pressing this key in the key lock setting mode.
- **5. Digit shift key (▶▶):** Pressing this key in set mode causes the changeable digits to move. Key lock is activated by pressing this key for more than five seconds in the temperature display mode. See "Key lock function" on page 14.
- **6. Set key (SET):** At "temperature display mode"; pressing this key leads "chamber temperature setting mode".

At "setting mode"; stores the value into computer memory.

7. Defrost key (DEF): When removing the frost, press this key for 5 seconds. The freezer operation is stopped. After removing the frost, press this key again.

Note: After the defrosting, the freezing operation is never resumed automatically. Make sure to press back in the freezer chamber.

- **8. Buzzer stop key (BUZZER):** Press this key to silence the buzzer in the event that the alarm operates and buzzer sounds. See page 16, 17 for the details.
- **9. Alarm test key (ALARM TEST):** Buzzer will sound and remote alarm will be activated by pressing.

INSTALLATION SITE

To operate this unit properly and to obtain maximum performance, install the unit in a location with the following conditions:

■ A location not subjected to direct sunlight

Do not install the unit under direct sunlight. Installation in a location subjected to direct sunlight cannot obtain the intended performance.

■ A location with adequate ventilation

Leave at least 10 cm around the unit for ventilation. Poor ventilation will result in a reduction of the performance and consequently the failure.

■ A location away from heat generating sources

Avoid installing the unit near heat-emitting appliances such as a heater or a boiler etc. Heat can decrease the intended performance of the unit.

■ A location with little temperature change

Install the unit under stable ambient temperature. The allowable ambient temperature is between +5 °C and +35 °C.

■ A location with a sturdy and level floor

Always install the unit on a sturdy and level floor. The uneven floor or tilted installation may cause failure or injury. Install the unit in stable condition to avoid the vibration or noise. Unstable condition may cause vibration or noise.

MARNING

Install the unit on a sturdy floor. If the floor is not strong enough or the installation site is not adequate, this may result in injury from the unit falling or tipping over.

Select a level and sturdy floor for installation. This precaution will prevent the unit from tipping. Improper installation may result in water spillage or injury from the unit tipping over.

■ A location not prone to high humidity

Install the unit in the ambient of 80 %R.H. or less humidity. Installation under high humidity may cause current leakage or electric shock.

MARNING

Do not use the unit outdoors. Current leakage or electric shock may result if the unit is exposed to rain water.

Never install the unit in a humid place or a place where it is likely to be splashed by water. Deterioration of the insulation may result which could cause current leakage or electric shock.

■ A location without flammable or corrosive gas

Never install the unit in a location where it will be exposed to flammable or corrosive gas. This may cause explosion or fire or may result in the current leakage or electric shock by the corrosion of the electrical components.

■ A location without the possibility of anything fall


Avoid installing the unit in the location where anything can fall down onto the unit. This may cause the breakdown or failure of the unit.

INSTALLATION


1. Removing the packaging materials and tapes

Remove all transportation fixed metal fittings (the side of the left) (Fig. 1) and tapes. Open the doors and ventilate the unit. If the outside panels are dirty, clean them with a diluted neutral dishwashing detergent.

♦Undiluted detergent can damage the plastic components.
For the dilution, refer to the instruction of the detergent.)
♦After the cleaning with the diluted detergent, always wipe it off with a wet cloth. Then wipe off the panels with a dry cloth.

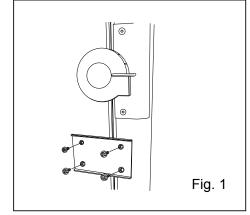

Leveling foot Fig. 2

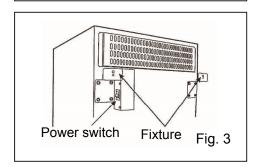

Note:

Remove the cable tie banding the power supply cord. Prolonged banding may cause the corrosion of the cord coating.

2. Removal of the door fixed plate

The door of the product is fixed by the door fixed plate.

A screw hole should fix an attached plastic screw on the product. (4 places) (Fig. 1)

3. Adjusting the leveling foot

Stretch the leveling feet by rotating them to contact them to the floor. Ensure the unit is installed horizontally. (Fig. 2)

4. Fixing the unit

Two fixtures are attached to the rear of the frame. Fix the frame to the wall with these fixtures and rope or chain. (Fig. 3)

5. Ground (earth)

The ground (earth) is for preventing the electric shock in the case of unexpected deterioration of the electrical insulation. Always ground the unit at the time of installation.

!\WARNING

Use a power supply outlet with ground (earth) to prevent electric shock. If the power supply outlet is not grounded, it is necessary to install a ground by qualified engineers.

Never ground the unit through a gas pipe, water main, telephone line or lightning rod. Such grounding may cause electric shock in the case of an incomplete circuit.

START-UP OF UNIT

Use the following procedure to start trial operation or actual operation of the unit.

- 1. A power supply plug is connected with the power supply without putting samples in the product.
- 2. A power switch and a battery switch are turned on.
- 3. Push a buzzer stop key (BUZZER), and stop a buzzer though an alarm buzzer may ring.
- 4. Set up chamber temperature.
- 5. Check that chamber temperature gets cold to setup temperature.
- 6. An alarm test key (ALARM TEST) is pushed, and an alarm lamp flashed, and it is checked that a buzzer rings. At this time, a remote alarm works, too. (When a remote alarm terminal is being used.)
- 7. Put the storage samples by the above inspection so that chamber temperature may not rise when it is completely normal.

< Important >

Do not block the air intake vent or air exhaust vent in the freezer. Arrange the storage items with adequate space to keep the air circulation.

A sample deteriorates when chamber temperature rises.

Operation after power failure

The set value is memorized by nonvolatile memory. Accordingly, the freezer resumes the operation with setting before power failure.

Note:

As for the after power failure, a product may not start by the voltage descent and so on so that all machines may start at the same time. Be sure to check the operation conditions of the product.

TEMPERATURE SETTING

Table 1 shows the basic operation method. Perform key operations in the sequence indicated in the table. The example in the table is based on the assumption that the freezer temperature is -25 °C.

Note: The chamber temperature is set to -30 °C at the factory.

Table 1 Basic operation sequence (Example: Chamber temperature -25 °C)

	Table 1 Bacic operation coduction (Example) Trialinger temperature 20 G					
	Description of operation	Key operated	Indication after operation			
			The current chamber temperature is	HÎÏ		
1	Connect the power source and turn		displayed. Chamber temperature	——————————————————————————————————————		
	on the power switch.		higher than 1 °C to be displayed "HI"	L D		
			lower than -41 °C to be displayed "LO".			
2	Press set key.	SET	The first digit is flashed.	<u>- 3 Ö</u>		
	Set the temperature to -25 with the	>>	When pressed, the settable digit shifted.			
3	digit shift key and the numerical	A	When pressed, the figure of settable			
	value shift key.	*	digit changes.	<u> </u>		
	Davis and law	OFT	Set temperature is memorized and the			
4	Press set key.	SET	current chamber temperature is displayed.			

[♦]The freezer temperature can be set in the range between -18 °C and -35 °C. Remember that the guaranteed temperature with no load at an ambient temperature of 35 °C is -30 °C

[♦]The setting mode returns to the temperature display mode automatically when 90 seconds has passed without any key operation. In this case, any setting before pressing the set key (SET) is not memorized.

KEY LOCK FUNCTION

This unit is provided with the key lock function. When the key lock is ON, change of the setting through the key pad is not available. The key lock is set in OFF at the factory.

Display	Mode	Function
Lo0	Key lock is OFF	Enable to change of temperature setting
Lo1	Key lock is ON	Disable to change of temperature setting

Table 2 Procedure for key lock setting (change from key lock OFF to key lock ON)

	Description of operation	Key operated	d Indication after operation	
1			The current chamber temperature is displayed.	$[- \mathcal{A} \mathcal{D}]$
2	Press digit shift key for 5 seconds.	>>	The first digit is displayed.	
3	Press numerical value shift key and scroll the figure to 1.	*	When pressed, the figure of settable digit changes.	
4	Press set key.	SET	The key lock is set to ON. The current chamber temperature is displayed.	-30

[♦] The setting mode returns to the temperature display mode automatically when 90 seconds has passed without any key operation. In this case, any setting before pressing the set key (SET) is not memorized.

REMOTE ALARM TERMINAL

!WARNING

Always disconnect the power supply cord before connecting an alarm device to the remote alarm terminal.

The terminal of the remote alarm is installed at the lower left side of the unit. The alarm is outputted from this terminal. Contact capacity is DC 30 V, 2 A.

between COM. and N.O. between COM. and N.C.

At normal Open Close At abnormal Close Open

Note:

The alarm status of remote alarm terminal and audible alarm are cancelled by pressing the buzzer stop key (BUZZER) since the remote alarm is operated in conjunction with buzzer (except for power failure alarm status). The visual alarm will remain active until the alarm condition is rectified.

[♦]The key lock only works with the chamber temperature setting and the defrost key (DEF).

A key lock function becomes on when it is changed to Lo1 with a process 3.

ALARM TEMPERATURE SETTING

This unit is provided with both high and low temperature alarms. The temperature at which the alarm is activated may be changed.

The available set range for high temperature alarm is between +5 °C and +15 °C, and -5 °C and -15 °C for low temperature alarm against the chamber temperature.

Note: The temperature alarm is set at ±10 °C of the set temperature at the factory.

Table 3. Procedure for setting high temperature alarm (Example: Chamber temperature +5 °C)

	Description of operation	Key operated	Indication after operation	-
1			The current chamber temperature is displayed.	-30
2	Press and hold the digit shift & numerical value shift key more than 5 seconds.	▶ + ★	Set into alarm temperature setting mode F00 is displayed.	FDD
3	Press the numerical value shift key and choice high temperature alarm.	*	If choose high temperature alarm F00 is displayed.	
4	Press set key.	SET	10 is displayed.	
5	Press the numerical value shift key	*	When pressed, the changeable digit changes. If choice 5 degree. 5 is displayed.	5
6	Press set key.	SET	Set temperature is memorized and the current chamber temperature is displayed.	-30

Table 4. Procedure for setting low temperature alarm (Example: Chamber temperature -5 °C)

	Description of operation	Key operated	Indication after operation	
1			The current chamber temperature is displayed.	-30
2	Press and hold the digit shift & numerical value shift key more than 5 seconds.	>>+ ★	Set into alarm temperature setting mode F00 is displayed.	FDD
3	Press the numerical value shift key and choice low temperature alarm.	*	If choose low temperature alarm is F01 displayed.	FDI
4	Press set key.	SET	-10 is displayed.	- 10
5	Press the numerical value shift key	*	When pressed, the changeable digit changes. If choice -5 degree 5 is displayed.	- 5
6	Press set key.	SET	Set temperature is memorized and the current chamber temperature is displayed.	- 3 0

[♦]The setting mode returns to the temperature display mode automatically when 90 seconds has passed without any key operation. In this case, any setting before pressing the set key (SET) is not memorized.

ALARMS FUNCTIONS

This unit has the alarm functions shown below.

Contact our company sales representative or agent after moving the storage items to other refrigerator or freezer if the alarm status continues because there is a possibility of any failure.

Alarm & Safety	Situation	Indication	Buzzer	Remote alarm terminal
High temperature alarm	If the chamber temperature is higher than the temperature at which the high temperature alarm is activated.	Alarm lamp is flashed. Temperature display is flashed.	Intermittent tone after a delay of 15 minutes.	Remote alarm is activated after a delay of 15 minutes.
Low temperature	If the chamber temperature is lower than the temperature at which the low temperature alarm is activated.	Alarm lamp is flashed. Temperature display is flashed.	Intermittent tone after a delay of 15 minutes.	Remote alarm is activated after a delay of 15 minutes.
Power failure alarm	In the case of power failure. When power switch is turned OFF. When the power to the unit is disconnected.	Alarm lamp is flashed.	Intermittent tone	Remote alarm is activated.
Door alarm	When the door is open.	Door check lamp is lit.	Intermittent tone after a delay of 2 minutes.	

[♦] The remote alarm terminal is in alarm status in conjunction with the buzzer. However, the alarm status of the remote alarm terminal is cancelled by pressing the buzzer stop key (BUZZER).

SAFETY FUNCTIONS

This unit has the safety functions shown below.

Alarm & Safety	Situation	Indication, Buzzer	Safety operation
Auto return	When there is no key pressing in setting mode for 90 seconds.		Finishing of setting mode and returning to the temperature display mode.
Key lock	When the key lock is ON (Lo1).		The change of temperature setting is disable.

SELF DIAGNOSTIC FUNCTIONS

This unit has the self diagnostic functions shown below.

Contact our company sales representative or agent if an error code (ex. E01) is displayed resulting from the self diagnostic.

Alarm & Safety	Situation	Indication	Buzzer	Remote alarm terminal	
	If the thermal sensor goes open circuit.	Alarm lamp is flashed. E01 and LO are displayed alternately.			
Sensor	If the thermal sensor goes short circuit.	Alarm lamp is flashed. E01 and HI are displayed alternately.	Intermittent tone Alarm status		
Abnormality	temperature sensor is disconnected. Al	Alarm lamp is flashed. E03 and chamber temp. are		Alarm status	
	If the compressor protection temperature sensor is short circuited.	displayed alternately.			
Compressor temp. Abnormality	In case of failure of compressor cooling fan motor. In case of abnormal high ambient temperature. (when the temperature about 103 °C.)	Alarm lamp is flashed. E10 and chamber temp. are displayed alternately.			

- ♦The remote alarm is cancelled by pressing the buzzer stop key (BUZZER) since the remote alarm is operated in conjunction with the buzzer, except for the power failure alarm status.
- ♦After a power failure, the unit will resume operation with the set value that was in place before power failure occurred.
- ♦The chamber temperature is displayed for 5 seconds by pressing buzzer stop key (BUZZER) during power failure alarm. Then the buzzer is silenced. The alarm lamp keeps flashing.
- ♦The battery for power failure alarm is an article for consumption. It is recommended that the battery will be replaced about every 3 years. Contact our sales representative or agent at the time of replacement of the battery.
- ♦ About 2 days operation of a freezer is necessary to full charge the battery.
- ♦ Fan motor is expendable supplies. Replace them for about every 6 years. Contact our sales representative or agent at the time of replacement of the fan motor.
- ♦ Attach the inspection label of the accessories in front of the product, and use the repair time of the battery and the fan motor.
- ♦ The remote alarm terminal is in alarm status in conjunction with the buzzer. However, the alarm status of the remote alarm terminal is cancelled by pressing the buzzer stop key (BUZZER).

MAINTENANCE

MARNING

Always disconnect the power supply to the unit prior to any repair or maintenance of the unit in order to prevent electric shock or injury.

Ensure you do not inhale or consume medication or aerosols from around the unit at the time of maintenance. These may be harmful to your health.

!CAUTION

Always put on the dry gloves to protect the hands at the time of maintenance. No gloves may cause cut of the finger by the edge or corner.

Cleaning of cabinet

Use a dry cloth to wipe off small amounts of dirt on the outside and inside of the unit and all accessories. If the outside panels are dirty, clean them with a diluted neutral dishwashing detergent.

Wipe off the condensation on the exterior of the cabinet with a dry soft cloth.

- ♦ Undiluted detergent can damage the plastic components. For the dilution, refer to the instruction of the detergent.
- ♦ After the cleaning with the diluted detergent, always wipe it off with a wet cloth. Then wipe off the cabinet or accessories with a dry cloth.

<important>

- Never pour water onto or into the unit. Doing so can damage the electric insulation and cause failure.
- Always replace the accessories removed for the cleaning to keep the intended performance.

MAINTENANCE

Defrosting

Use the scraper provided for removing the frost if the freezer operation must be continued. Pay attention not to impact or damage the inner wall.

- **1.** When defrosting, move all the contents of containers in the freezer to another low temperature freezer.
- 2. Pressing the defrost key (DEF) for more than 5 seconds to stop the freezing operation.

While the freezing operation is stopped, the current chamber temperature and dF is displayed on the control panel alternately.

- 3. After several hours, check the visually that all defrost was removed completely.
- 4. If a defroster is finished, a drain cap at bottom inside the freezer is removed.

Draw drain hose, and drain the water with water inside the freezer in the tray.

Wipe the water left in the freezer, and do the cap.

- **5.** Pressing about 5 seconds the defrost key (DEF), the freezing operation can be started.
- **6.** Once the chamber temperature has dropped to the desired temperature, place the original contents back in the freezer chamber.

Note:

After the defrosting, the freezing operation is never resumed automatically.

Make sure to press the defrost key (DEF) for more than 5 seconds to start operation again.

TROUBLESHOOTING

If the unit malfunctions, check out the following before calling for service.

Malfunction	Check/Remedy			
The chamber is not cooled	□ The circuit breaker of power source is active.			
at all	□ The voltage is too low? (In this case, call an electrician.)			
	□ The power switch is not ON.			
	□ The freezer is in defrost condition.			
	□ It is using near the electric product which makes an electric wave occur.			
The cooling is poor	□ The large amount of articles (load) is stored in the chamber at one time.			
	□ The ambient temperature is too high.			
	□ The door is not closed firmly.			
	□ The large amount of frost is built on the chamber wall.			
	□ The set temperature is not inputted properly.			
	□ The freezer is in the direct sunlight.			
	□ There is any heating source near the freezer.			
	□ A rubber cap and insulation for the access port are not set correctly.			
	□ You put too many unfrozen articles into the freezer compartment.			
	□ It is using near the electric product which makes an electric wave occur.			
When the unit does not	□ The key lock is set in ON.			
accept changes of set-point				
temperature				
Noise	□ The freezer is not installed on the sturdy floor.			
	□ The freezer is not leveled with the leveling feet.			
	□ There is anything touching the frame.			
	□ The freezer is in the status immediately after start up.			
	The unit sometimes causes a noise when the chamber temperature is			
	high due to the large load. The noise gets less and less accompanying			
	with the cooling of the chamber.			

Note:

If the malfunction is not eliminated after checking the above items, or the malfunction is not shown in the above table, contact our sales representative or agent.

Keep the electric product which makes an electric wave occur near this product away. An electromagnetic wave has an influence as a noise, and a product sometimes operates faultily.

A compressor is in this product about the top of the product. After the operation of the compressor stops, it has the sound that refrigerant flows after several seconds. This makes the pressure of the compressor decrease, and it is the sound which makes it drive at the time of the next movement with little energy. This sound is not a problem.

CAUTION

The noise of refrigerant flow may be heard due to the characteristic of refrigerating circuit. Especially for several minutes after start-up, the noise of fan motor or refrigerant flow can be larger. But such noise does not mean malfunction nor failure.

MARNING

If the unit is to be stored unused in an unsupervised area for an extended period **ensure that children** do not have access and doors cannot be closed completely.

The disposal of the unit should be accomplished by appropriate personnel. Always remove doors to prevent accidents such as suffocation.

Recycle of battery

(Only for USA and CANADA)

A nickel metal hydride battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

L'appareil que vous vous êtes procuré est alimenté par une pile au nickel-métal-hydrure (NiMH). Pour des renseignements sur le recyclage de la pile, veuillez composer le 1-800-8-BATTERY.



Use the specified charger.



■ Label indication is obliged to comply with Taiwanese battery regulation.

Refrigerant

REGULATION (EU) No 517/2014 on Certain Fluorinated Greenhouse Gases

This product contains fluorinated greenhouse gases as refrigerant.

Refrigerant	GWP	Weight of CO2
Reingerani	9WI	equivalent (ton)
R-404A	3922	1.02

Decontamination of unit

Before disposing a unit with biohazardous danger, decontaminate the unit to the extent possible by the user.

(English)

Disposal of Old Equipment and Batteries Only for European Union and countries with recycling systems



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local municipality.



Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Note for the battery symbol (bottom symbol):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

(German)

Entsorgung von Altgeräten und Batterien Nur für die Europäische Union und Länder mit Recyclingsystemen



Dieses Symbol, auf den Produkten, der Verpackung und/oder den Begleitdokumenten, bedeutet, dass gebrauchte elektrische und elektronische Produkte sowie Batterien nicht in den allgemeinen Hausmüll gegeben werden dürfen.



Bitte führen Sie alte Produkte und verbrauchte Batterien zur Behandlung, Aufarbeitung bzw. zum Recycling gemäß den gesetzlichen Bestimmungen den zuständigen Sammelpunkten zu.

Indem Sie diese Produkte und Batterien ordnungsgemäß entsorgen, helfen Sie dabei, wertvolle Ressourcen zu schützen und eventuelle negative Auswirkungen auf die menschliche Gesundheit und die Umwelt zu vermeiden.

Für mehr Informationen zu Sammlung und Recycling, wenden Sie sich bitte an Ihren örtlichen Abfallentsorgungsdienstleister.

Gemäß Landesvorschriften können wegen nicht ordnungsgemäßer Entsorgung dieses Abfalls Strafgelder verhängt werden.



Hinweis für das Batteriesymbol (Symbol unten):

Dieses Symbol kann in Kombination mit einem chemischen Symbol abgebildet sein. In diesem Fall erfolgt dieses auf Grund der Anforderungen derjenigen Richtlinien, die für die betreffende Chemikalie erlassen wurden.

(French)

L'élimination des équipements et des batteries usagés Applicable uniquement dans les pays membres de l'Union européenne et les pays disposant de systèmes de recyclage.



Apposé sur le produit lui-même, sur son emballage, ou figurant dans la documentation qui l'accompagne, ce pictogramme indique que les piles, appareils électriques et électroniques usagés, doivent être séparées des ordures ménagères.

Afin de permettre le traitement, la valorisation et le recyclage adéquats des piles et des appareils usagés, veuillez les porter à l'un des points de collecte prévus, conformément à la législation nationale en vigueur.

En les éliminant conformément à la réglementation en vigueur, vous contribuez à éviter le gaspillage de ressources précieuses ainsi qu'à protéger la santé humaine et l'environnement.

Pour de plus amples renseignements sur la collecte et le recyclage, veuillez vous renseigner auprès des collectivités locales.

Le non-respect de la réglementation relative à l'élimination des déchets est passible d'une peine d'amende.



Note relative au pictogramme à apposer sur les piles (pictogramme du bas) :


Si ce pictogramme est combiné avec un symbole chimique, il répond également aux exigences posées par la Directive relative au produit chimique concerné.

(Spanish)

Eliminación de Aparatos Viejos y de Pilas y Baterías Solamente para la Unión Europea y países con sistemas de reciclado.



Estos símbolos en los productos, su embalaje o en los documentos que los acompañen significan que los productos eléctricos y electrónicos y pilas y baterías usadas no deben mezclarse con los residuos domésticos.

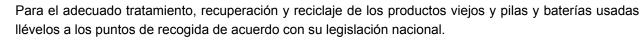

Si los elimina correctamente ayudará a preservar valuosos recursos y evitará potenciales efectos negativos sobre la salud de las personas y sobre el medio ambiente.

Para más información sobre la recogida u reciclaje, por favor contacte con su ayuntamiento.



Puede haber sanciones por una incorrecta eliminación de este residuo, de acuerdo con la legislación nacional.

Nota para el símbolo de pilas y baterías (símbolo debajo):

Este símbolo puede usarse en combinación con el símbolo químico. En este caso, cumple con los requisitos de la Directiva del producto químico indicado.

(Portuguese)

Eliminação de Equipamentos Usados e Baterias Apenas para a União Europeia e países com sistemas de reciclagem



Estes símbolos nos produtos, embalagens, e/ou documentos que os acompanham indicam que os produtos elétricos e eletrónicos e as baterias usados não podem ser misturados com os resíduos urbanos indiferenciados.



Para um tratamento adequado, reutilização e reciclagem de produtos e baterias usados, solicitamos que os coloque em pontos de recolha próprios, em conformidade com a respetiva legislação nacional.

Ao eliminar estes produtos corretamente estará a ajudar a poupar recursos valiosos e a prevenir quaisquer potenciais efeitos negativos sobre o ambiente e a saúde humana.

Para mais informações acerca da recolha e reciclagem, por favor contacte a sua autarquia local.



De acordo com a legislação nacional podem ser aplicadas contraordenações pela eliminação incorreta destes resíduos.

Nota para o símbolo da bateria (símbolo na parte inferior):

Este símbolo pode ser utilizado conjuntamente com um símbolo químico. Neste caso estará em conformidade com o estabelecido na Diretiva referente aos produtos químicos em causa.

(Italian)

Smaltimento di vecchie apparecchiature e batterie usate Solo per Unione Europea e Nazioni con sistemi di raccolta e smaltimento



Questi simboli sui prodotti, sull'imballaggio e/o sulle documentazioni o manuali accompagnanti i prodotti indicano che i prodotti elettrici, elettronici e le batterie usate non devono essere buttati nei rifiuti domestici generici.



Per un trattamento adeguato, recupero e riciclaggio di vecchi prodotti e batterie usate vi invitiamo a portarli negli appositi punti di raccolta secondo la legislazione vigente nel vostro paese.

Con uno smaltimento corretto, contribuirete a salvare importanti risorse e ad evitare i potenziali effetti negativi sulla salute umana e sull'ambiente.

Per ulteriori informazioni su raccolta e riciclaggio, vi invitiamo a contattare il vostro comune.

Lo smaltimento non corretto di questi rifiuti potrebbe comportare sanzioni in accordo con la legislazione nazionale.



Note per il simbolo batterie (simbolo sotto):

Questo simbolo può essere usato in combinazione con un simbolo chimico. In questo caso è conforme ai requisiti indicati dalla Direttiva per il prodotto chimico in questione.

(Dutch)

Het ontdoen van oude apparatuur en batterijen.

Enkel voor de Europese Unie en landen met recycle systemen.



Deze symbolen op de producten, verpakkingen en/of begeleidende documenten betekenen dat gebruikte elektrische en elektronische producten en batterijen niet samen mogen worden weggegooid met de rest van het huishoudelijk afval.

Voor een juiste verwerking, hergebruik en recycling van oude producten en batterijen, gelieve deze in te leveren bij de desbetreffende inleverpunten in overeenstemming met uw nationale wetgeving.

Door ze op de juiste wijze weg te gooien, helpt u mee met het besparen van kostbare hulpbronnen en voorkomt u potentiële negatieve effecten op de volksgezondheid en het milieu.

Voor meer informatie over inzameling en recycling kunt u contact opnemen met uw plaatselijke gemeente.



Afhankelijk van uw nationale wetgeving kunnen er boetes worden opgelegd bij het onjuist weggooien van dit soort afval.

Let op: het batterij symbool (Onderstaand symbool).

Dit symbool kan in combinatie met een chemisch symbool gebruikt worden. In dit geval volstaan de eisen, die zijn vastgesteld in de richtlijnen van de desbetreffende chemische stof.

(Swedish)

Avfallshantering av produkter och batterier Endast för Europeiska Unionen och länder med återvinningssystem



Dessa symboler på produkter, förpackningar och/eller medföljande dokument betyder att förbrukade elektriska och elektroniska produkter och batterier inte får blandas med vanliga hushållssopor.

För att gamla produkter och använda batterier ska hanteras och återvinnas på rätt sätt ska dom lämnas till passande uppsamlingsställe i enlighet med nationella bestämmelser.

Genom att ta göra det korrekt hjälper du till att spara värdefulla resurser och förhindrar eventuella negativa effekter på människors hälsa och på miljön.

För mer information om insamling och återvinning kontakta din kommun.



Olämplig avfallshantering kan beläggas med böter i enlighet med nationella bestämmelser.

Notering till batterisymbolen (nedanför):

Denna symbol kan användas i kombination med en kemisk symbol. I detta fall uppfyller den de krav som ställs i direktivet för den aktuella kemikalien.

REPLACEMENT OF WEAR-OUT PARTS

Replacement of battery for power failure alarm

Replace the battery for power failure alarm every 3 years to ensure the alarm is operated in the event of power failure. Contact our sales representative or agent for the replacement of battery.

- ♦ The alarm function (blink of alarm lamp, sound of buzzer) will not operate when the battery for power failure alarm is flat.
- ♦ The alarm lamp blinks and the buzzer sounds by the battery for power failure alarm. The regular replacement of the battery for power failure alarm is important to prevent the rise of chamber temperature in the case of unexpected situation.

<Important>

The used battery is a recyclable precious resource. Do not dispose of the battery. Always follow the procedure for recycling.

!WARNING

The replacement of the battery for power failure alarm should be executed by a qualified engineer or service personnel only. The replacement of the battery for power failure alarm involves the risk of electric shock.

TEMPERATURE RECORDER (OPTION)

A temperature recorder is available for the freezer as an optional component. The type of the temperature recorder is MTR-G85A or MTR-G85C and MTR-4015LH. For the attachment, the recorder fixing is necessary. Contact our sales representative or agent for the installation of a temperature recorder.

SPECIFICATIONS

Biomedical Freezer			
MDF-U731M			
W770 mm x D830 mm x H1955 mm			
W650 mm x D700 mm x H1520 mm			
690 L			
Painted steel			
Painted steel			
Painted steel			
1			
Rigid polyurethane foamed-in place			
Polyethylene coated wire			
4 pieces			
Size: W626 mm x D620 mm Max. load: 50 kg/shelf			
Diameter 30 mm, 1 port on left side			
1 port on the top of unit			
Hermetic type, 400 W			
Tube on sheet type			
Skin condenser type			
R-404A			
Electronics controller			
Digital display (between -40 °C and +0 °C)			
Thermistor			
High temp. alarm, Low temp. alarm, Power failure alarm, Door alarm, Compressor temperature alarm, Thermal sensor abnormality			
Nonvolatile memory			
152 kg			
Nickel-metal-hydride battery, DC 6 V, 1500 mAh, Auto-recharge (DRTB315005)			
1 set of key, 1 scraper, 2 large & 2 small nylon clips (for temperature recorder), 1 Inspection label, 4 of plastic screws,			
4			
2			
Temperature recorder (MTR-G85A or MTR-G85C)+ Recorder fixing (MPR-S7) Temperature recorder (MTR-4015LH)+ Recorder fixing (MPR-S30) 2 sets of baskets (MDF-T07SC), 3 sets of shelves (MDF-T07ST)			

- Design or specifications will be subject to change without notice.
- Refer to the updated catalog when ordering an optional component.

PERFORMANCE

Product name	Biomedical Freezer MDF-U731M			
Model number	MDF-U731M-PA	MDF-U731M-PE		
Cooling performance	-20 °C to -30 °C (ambient temperature; 5 °C to 35 °C, no load)			
Rated voltage	AC 115 V	AC 230 V/240 V		
Rated frequency	60 Hz	50 Hz		
Rated power consumption	235 W	230 W/240 W		
Noise level	42 dB [A] (background noise; 20 dB)			
Maximum pressure	2.34 MPa			

- Specifications will be subject to change without notice.
- The unit with CE mark complies with EU directives.

A CAUTION

Please fill in this form before servicing.

Hand over this form to the service engineer to keep for his and your safety.

Safety check sheet

1. Freezer content Risk of infection Risk of toxicity: Risk from radio (List all potential Notes:	n: [⊐Yes ⊐Yes	□No □No □No een stored in th	s unit.)
2. Contamination of Unit interior No contamination of Contaminated Others:	n nc	□Yes	□No □No □No	
a) The unit is sab) There is som	safe repair/maintenance/ afe to work on e danger (see below) e adhered to in order to re		□Yes □	INo INo in b) below.
Date : Signature : Address, Division : Telephone :				
Product name: Biomedical Freezer	Model:	Serial nu	ımber:	Date of installation:

Please decontaminate the unit yourself before calling the service engineer.

